
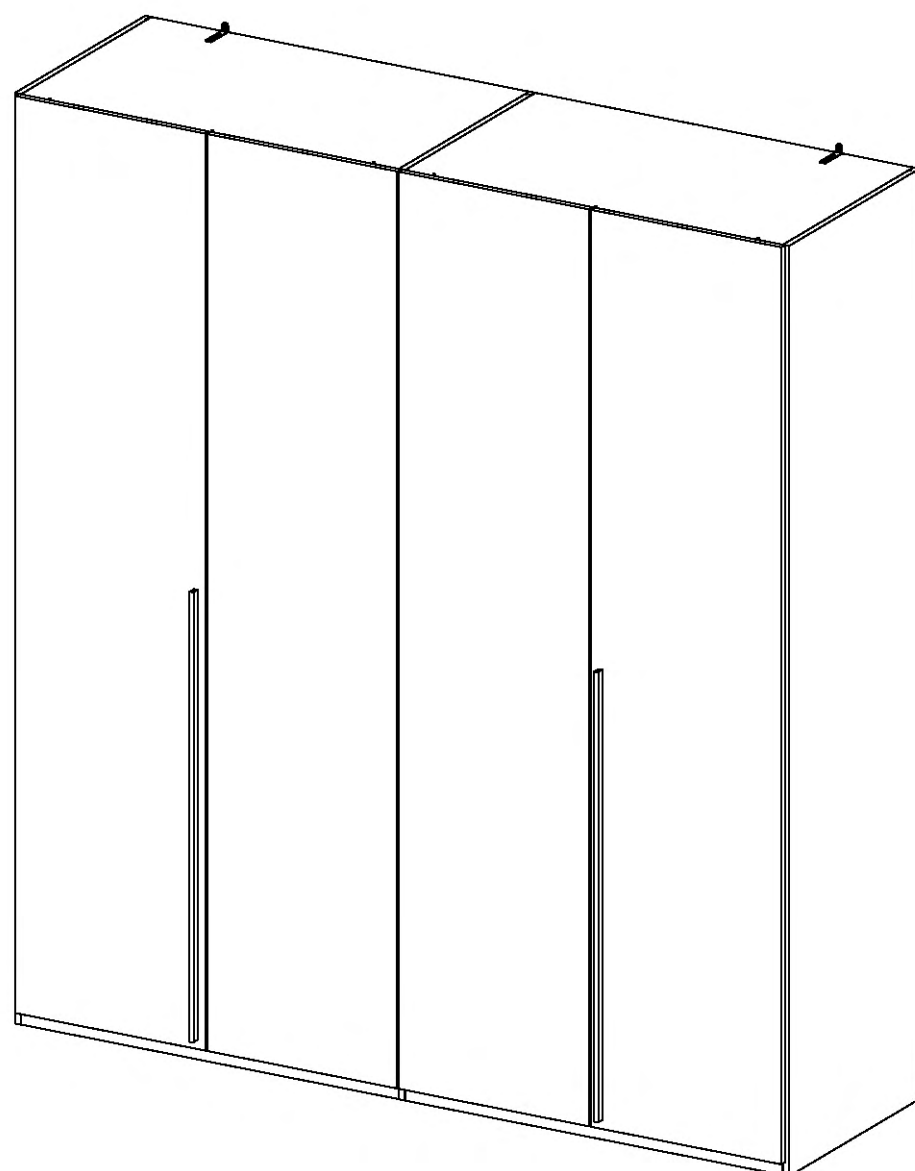
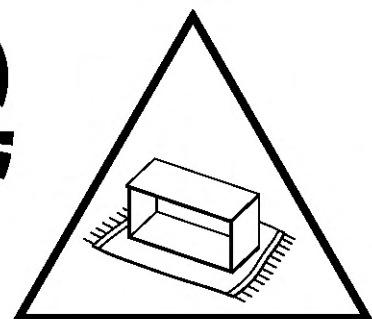
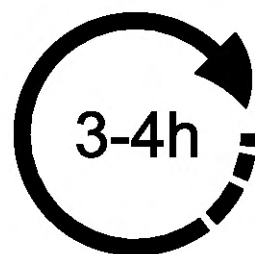
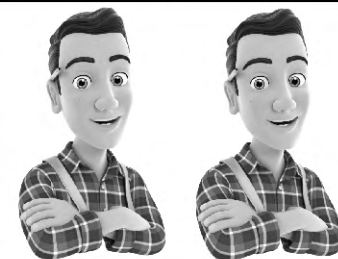


1.








MD107_01

rauch

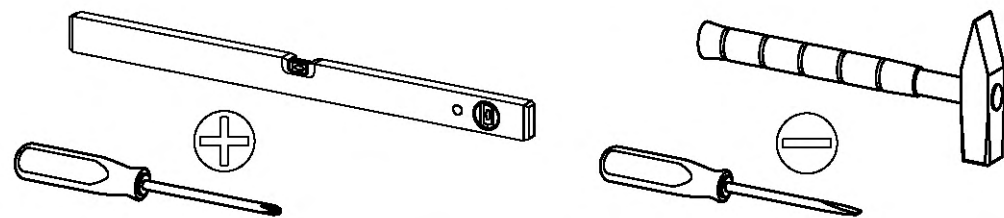







MD107

2.

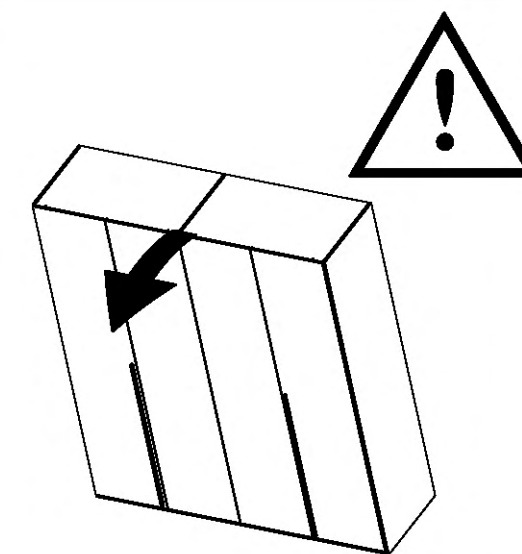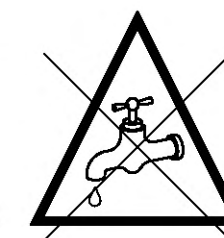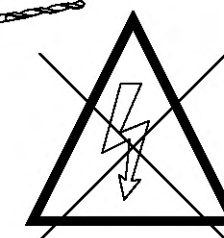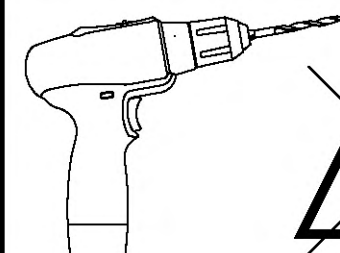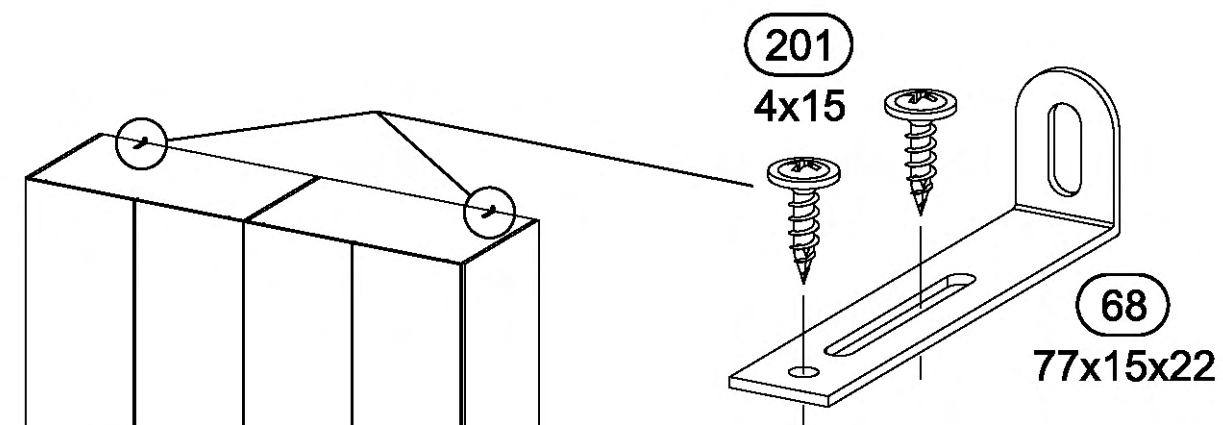


?

ØXmm

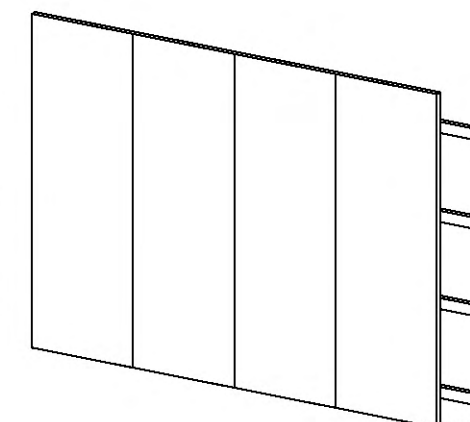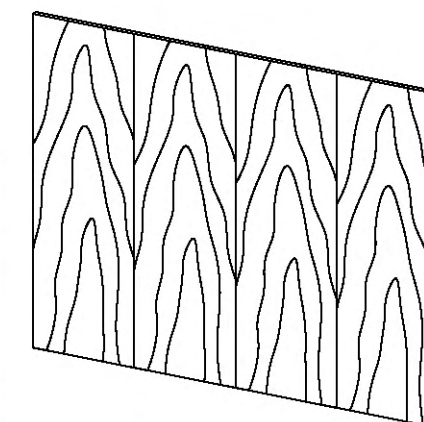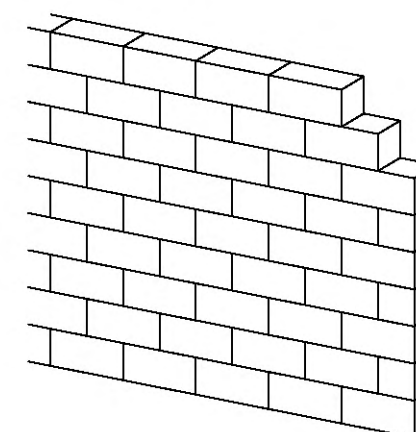


MD107

3.

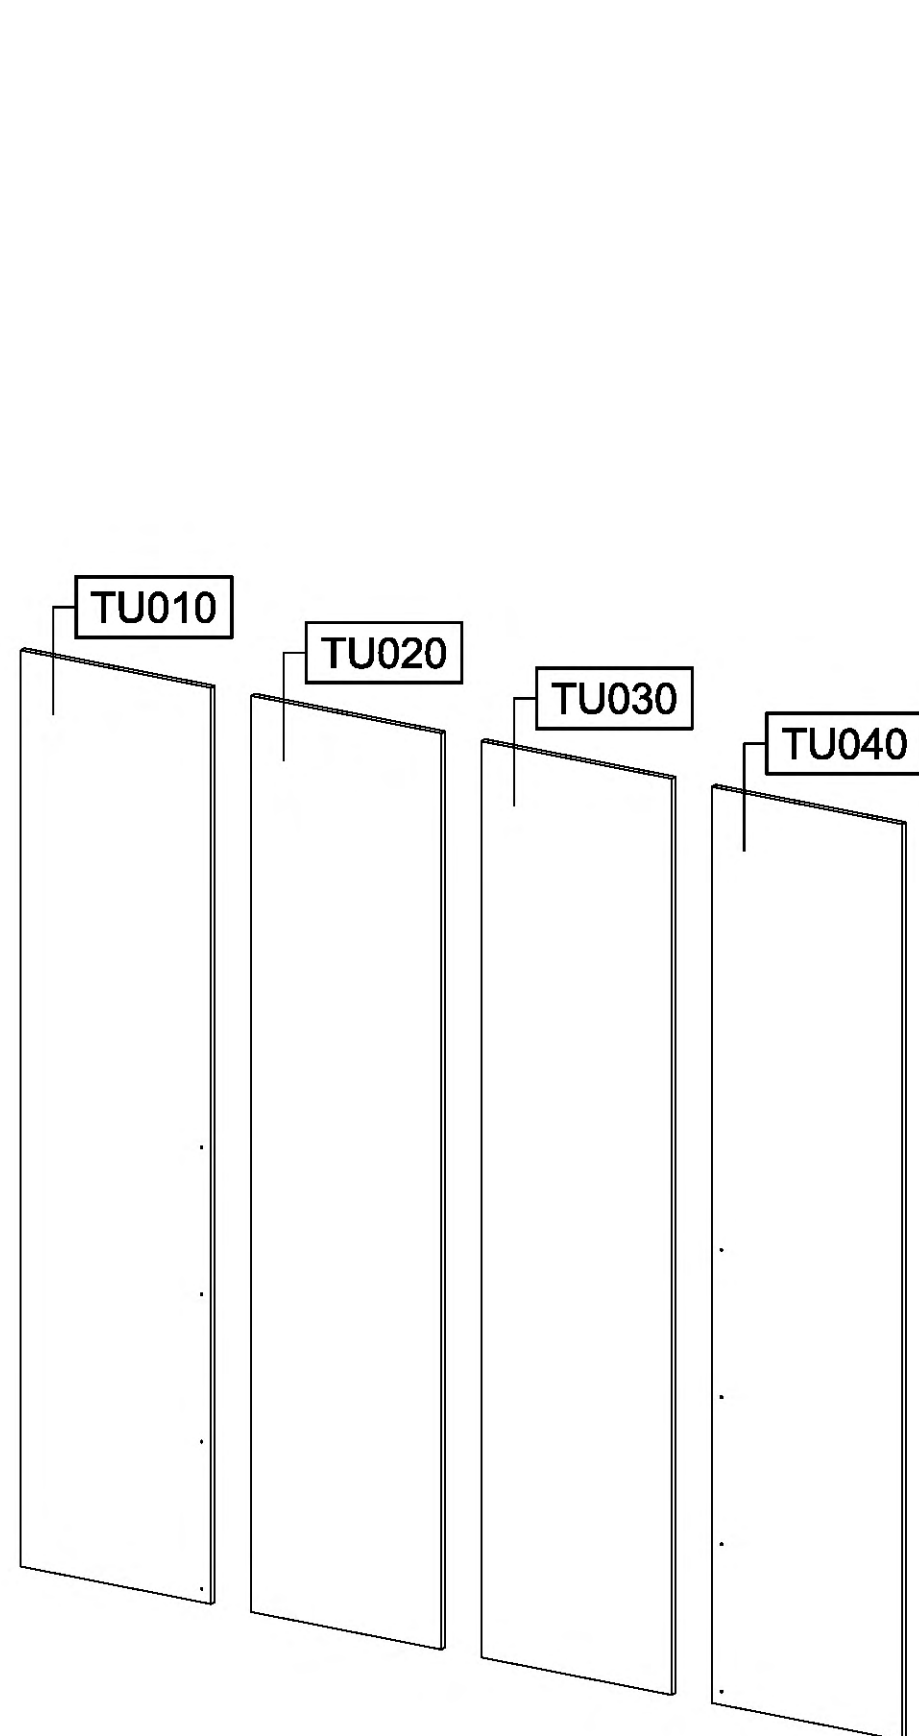














MD107

4.

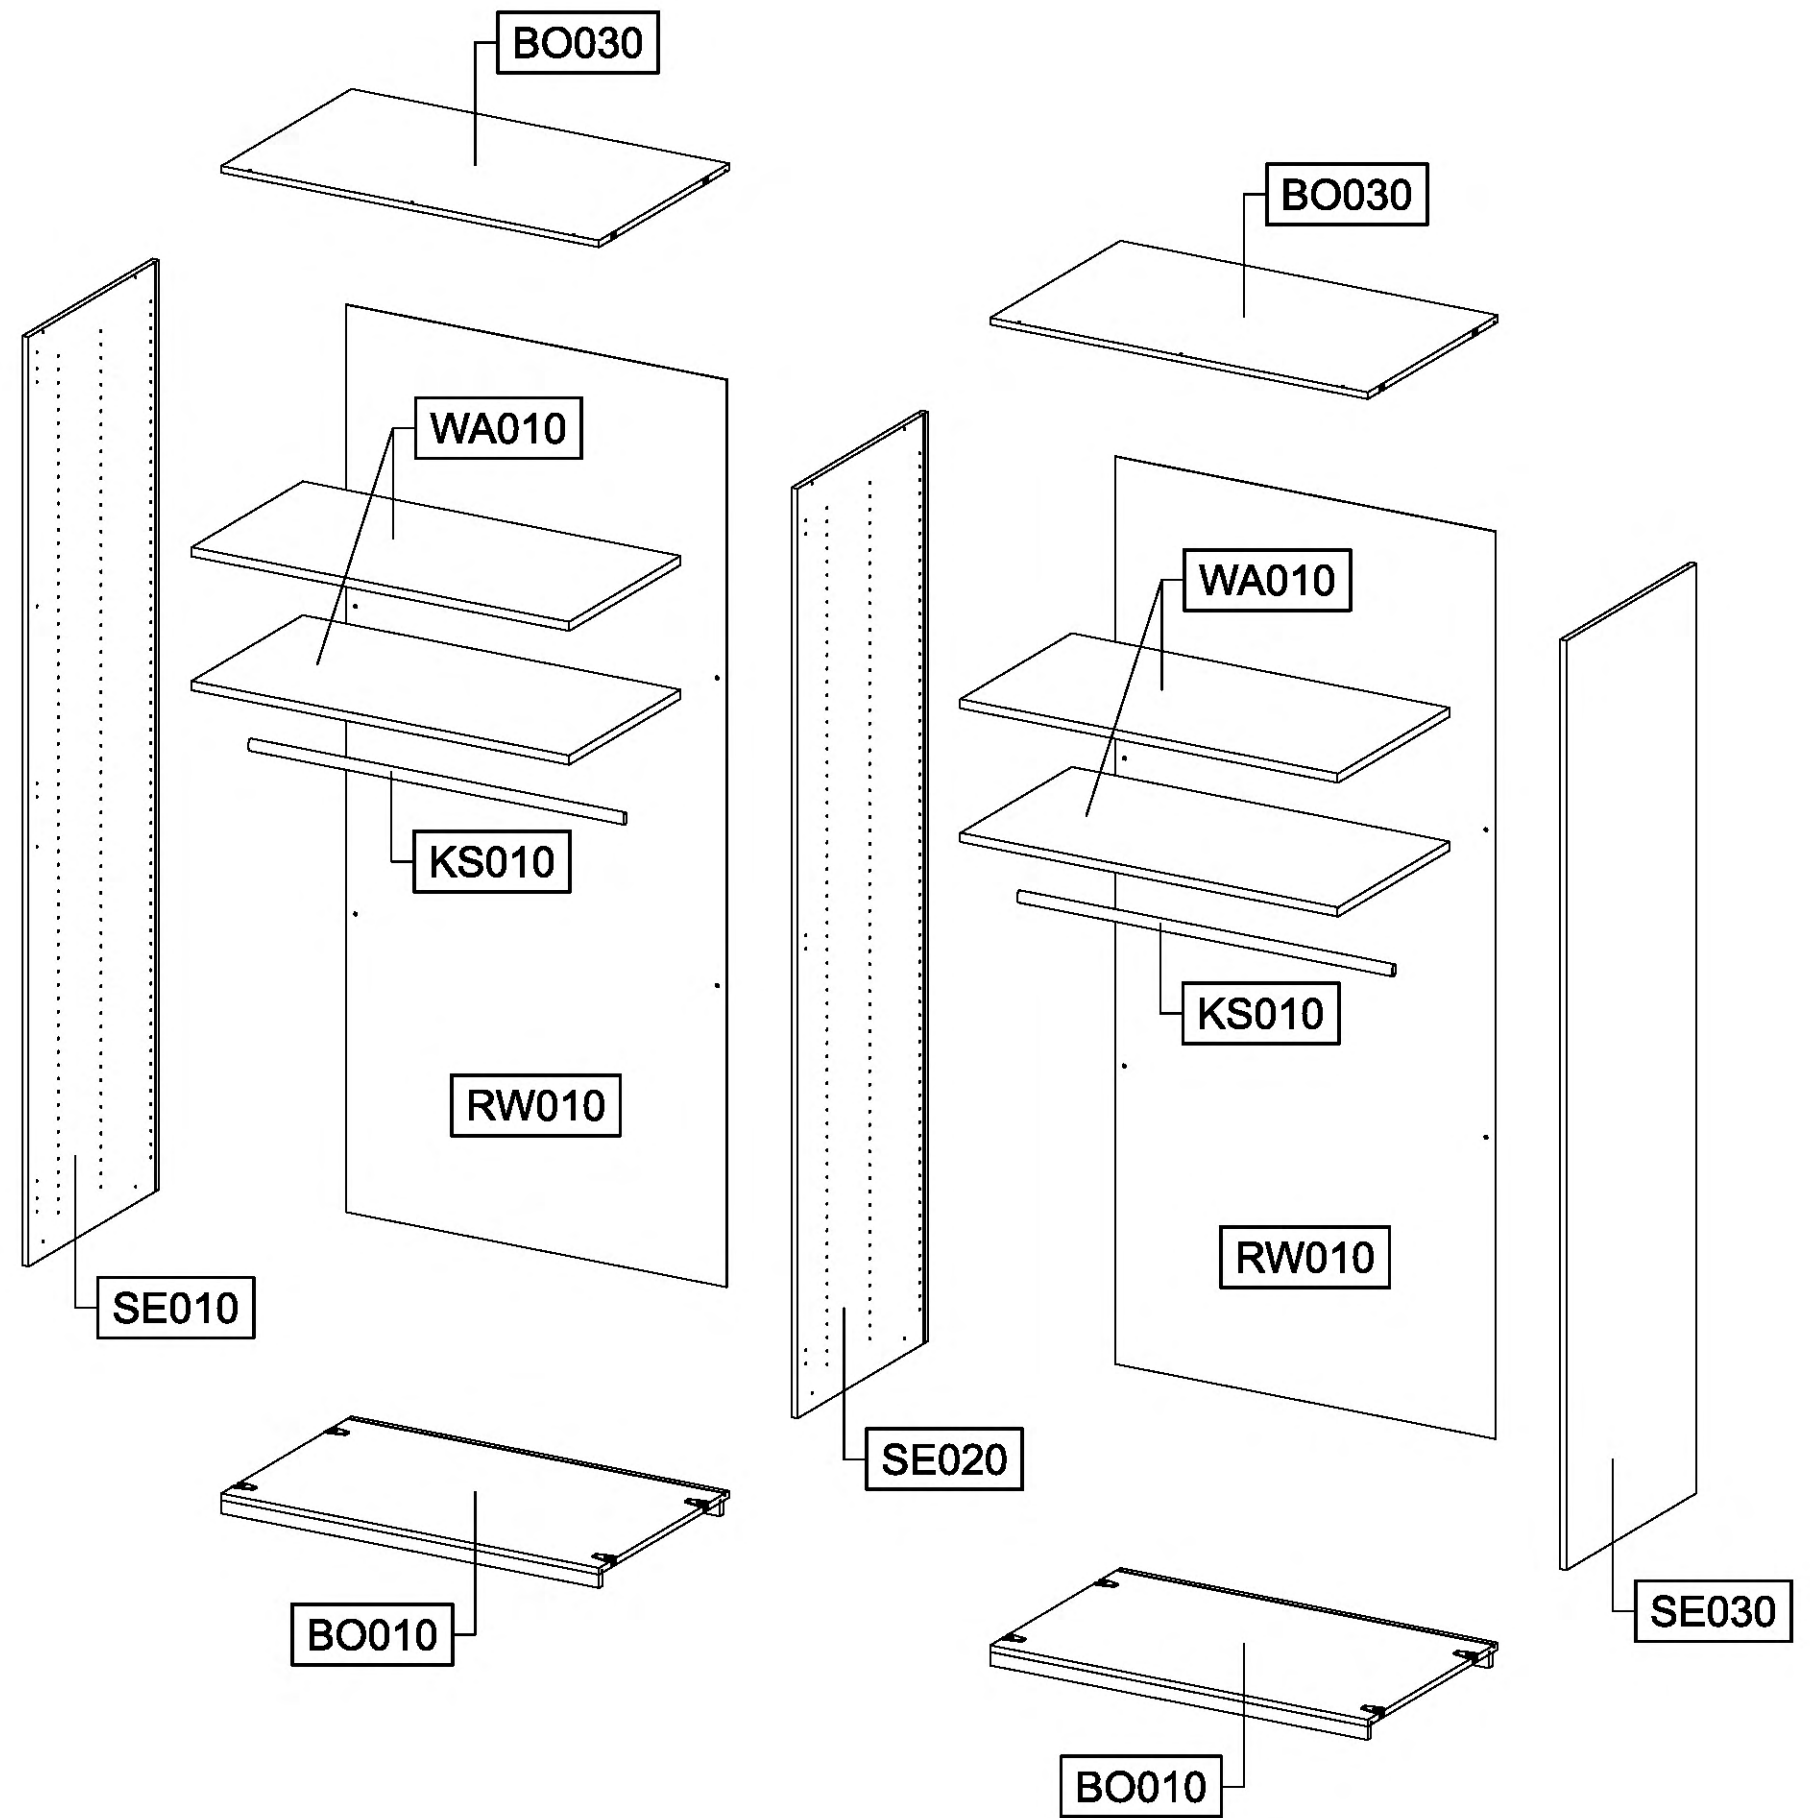


MD107

5.

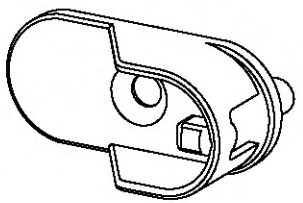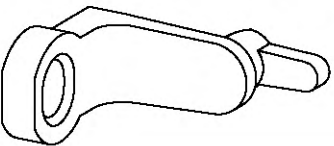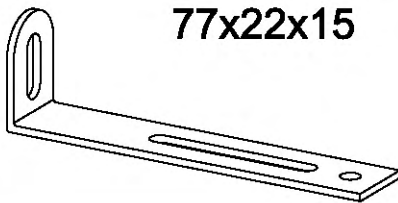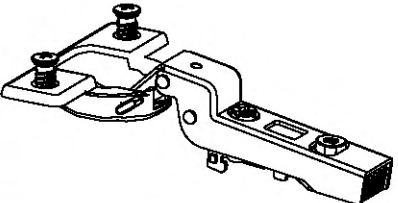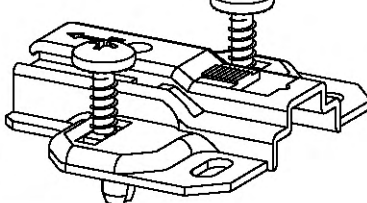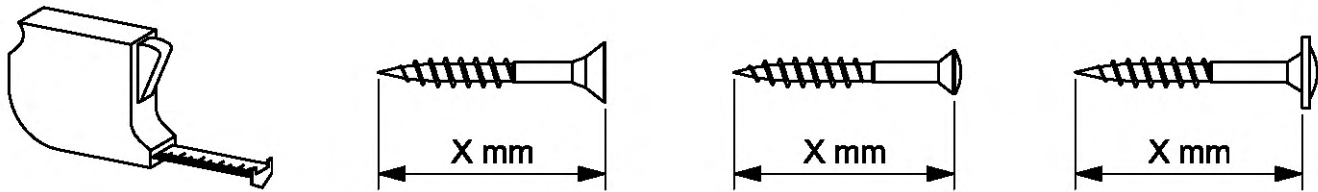6x  55x16x6,2 12	4x  29
8x  47	2x  77x22x15 68
4x  4x15 201	4x  3,5x15 205
12x  565	12x  620
24x  4x13 621	8x  6,5x12 779
8x  1085	4x  1086
16x  1089	
	


MD107

6.

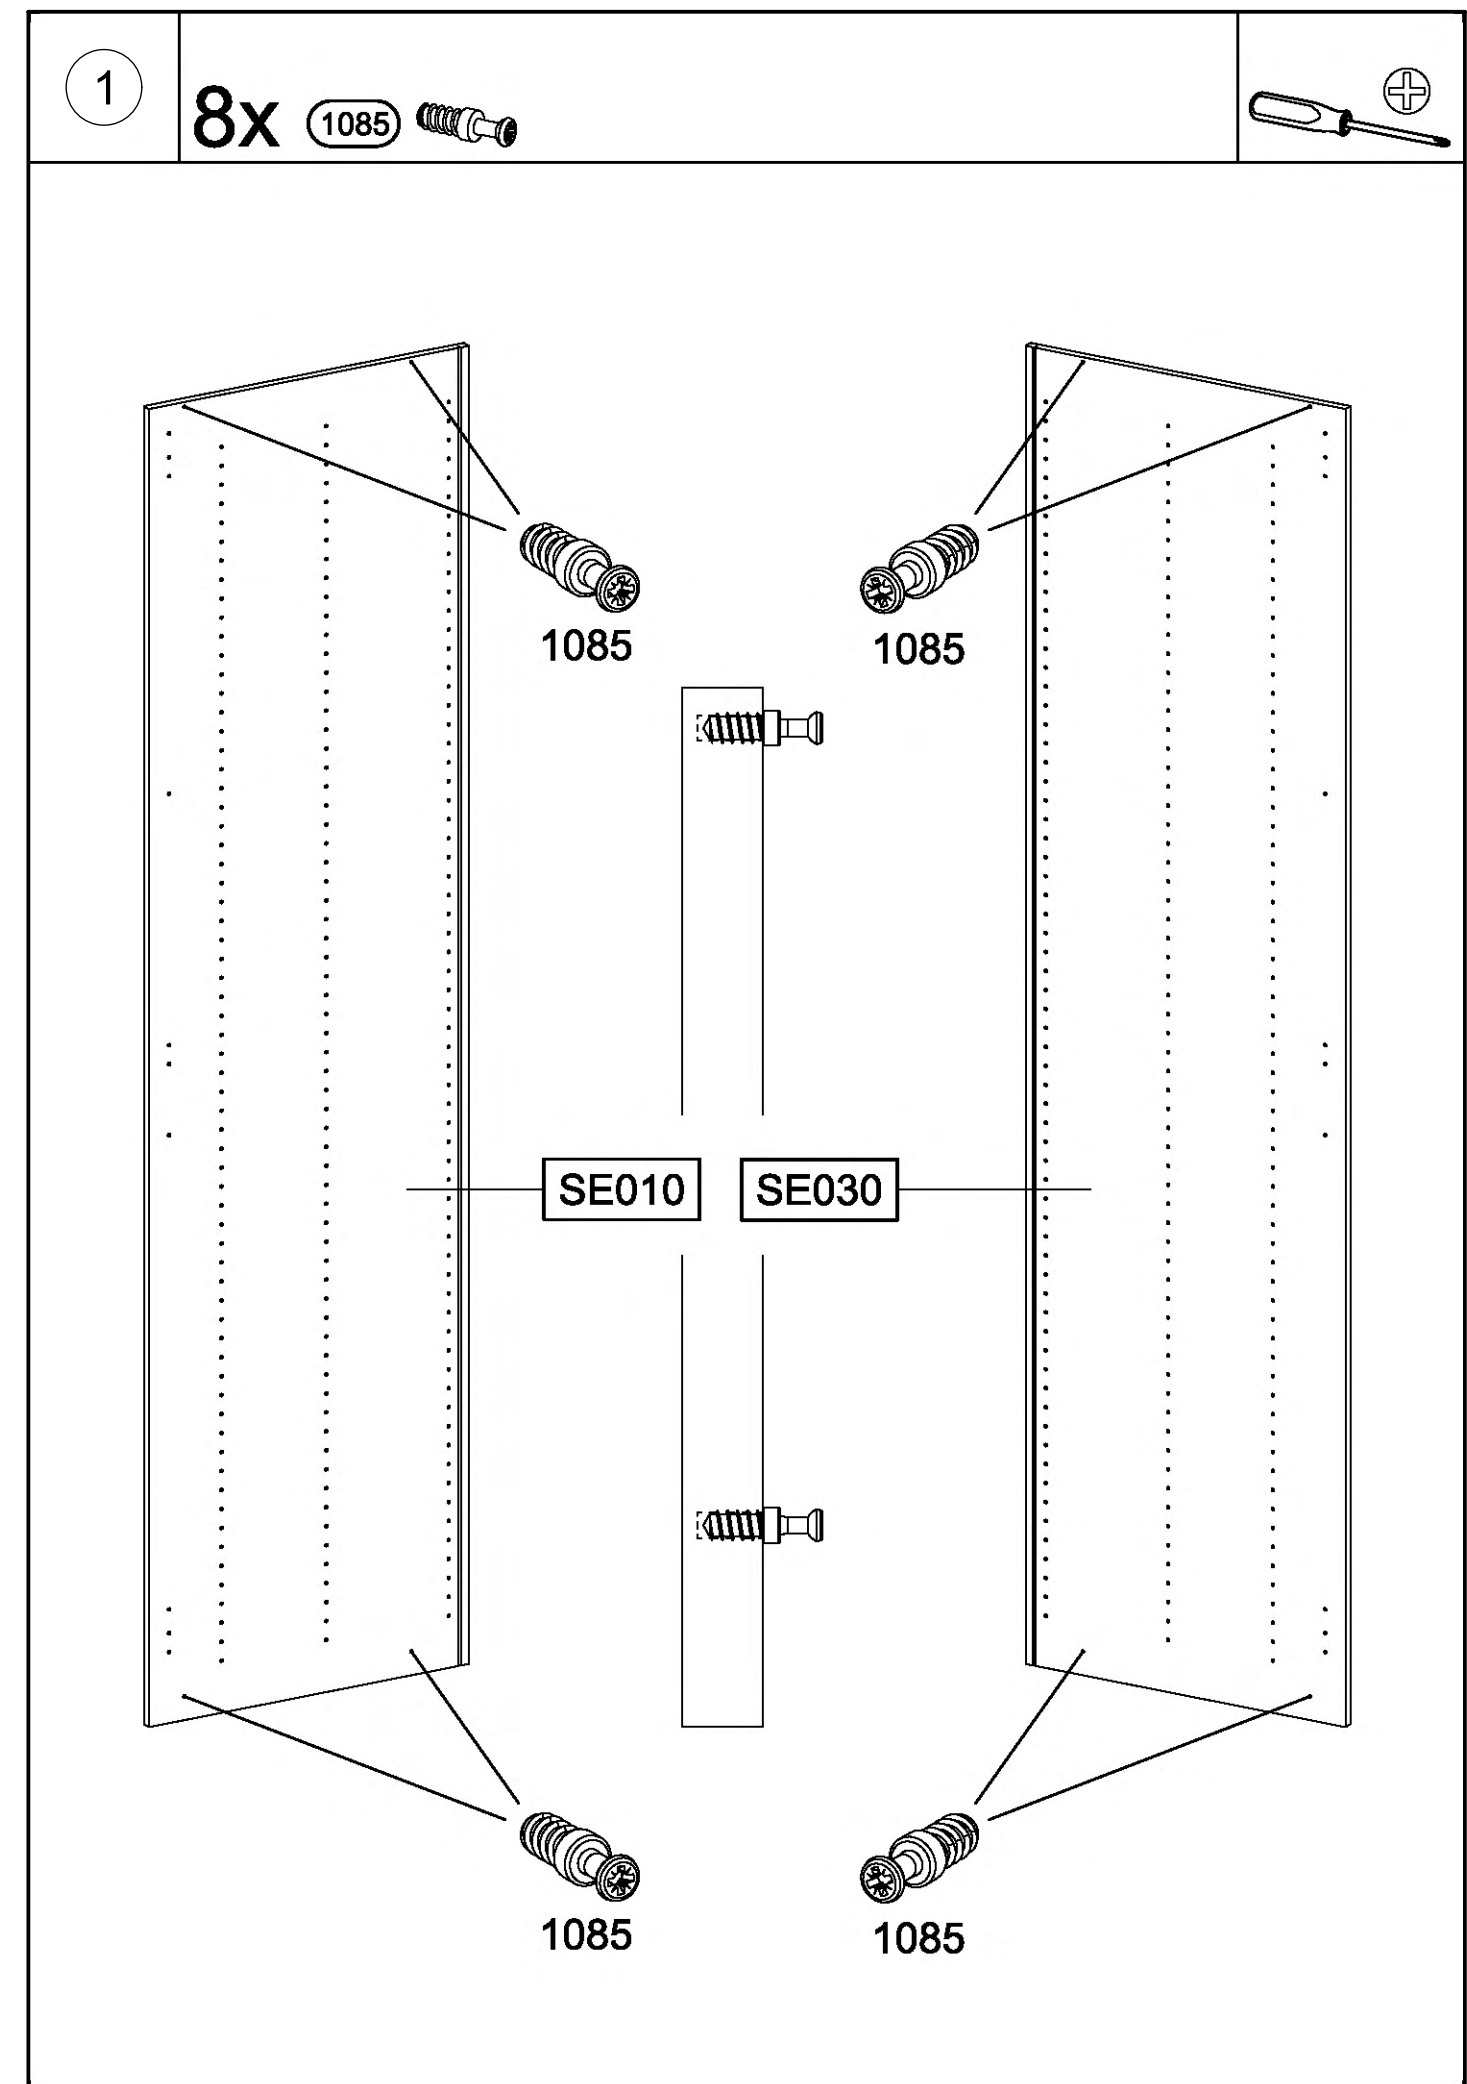


MD107

7.


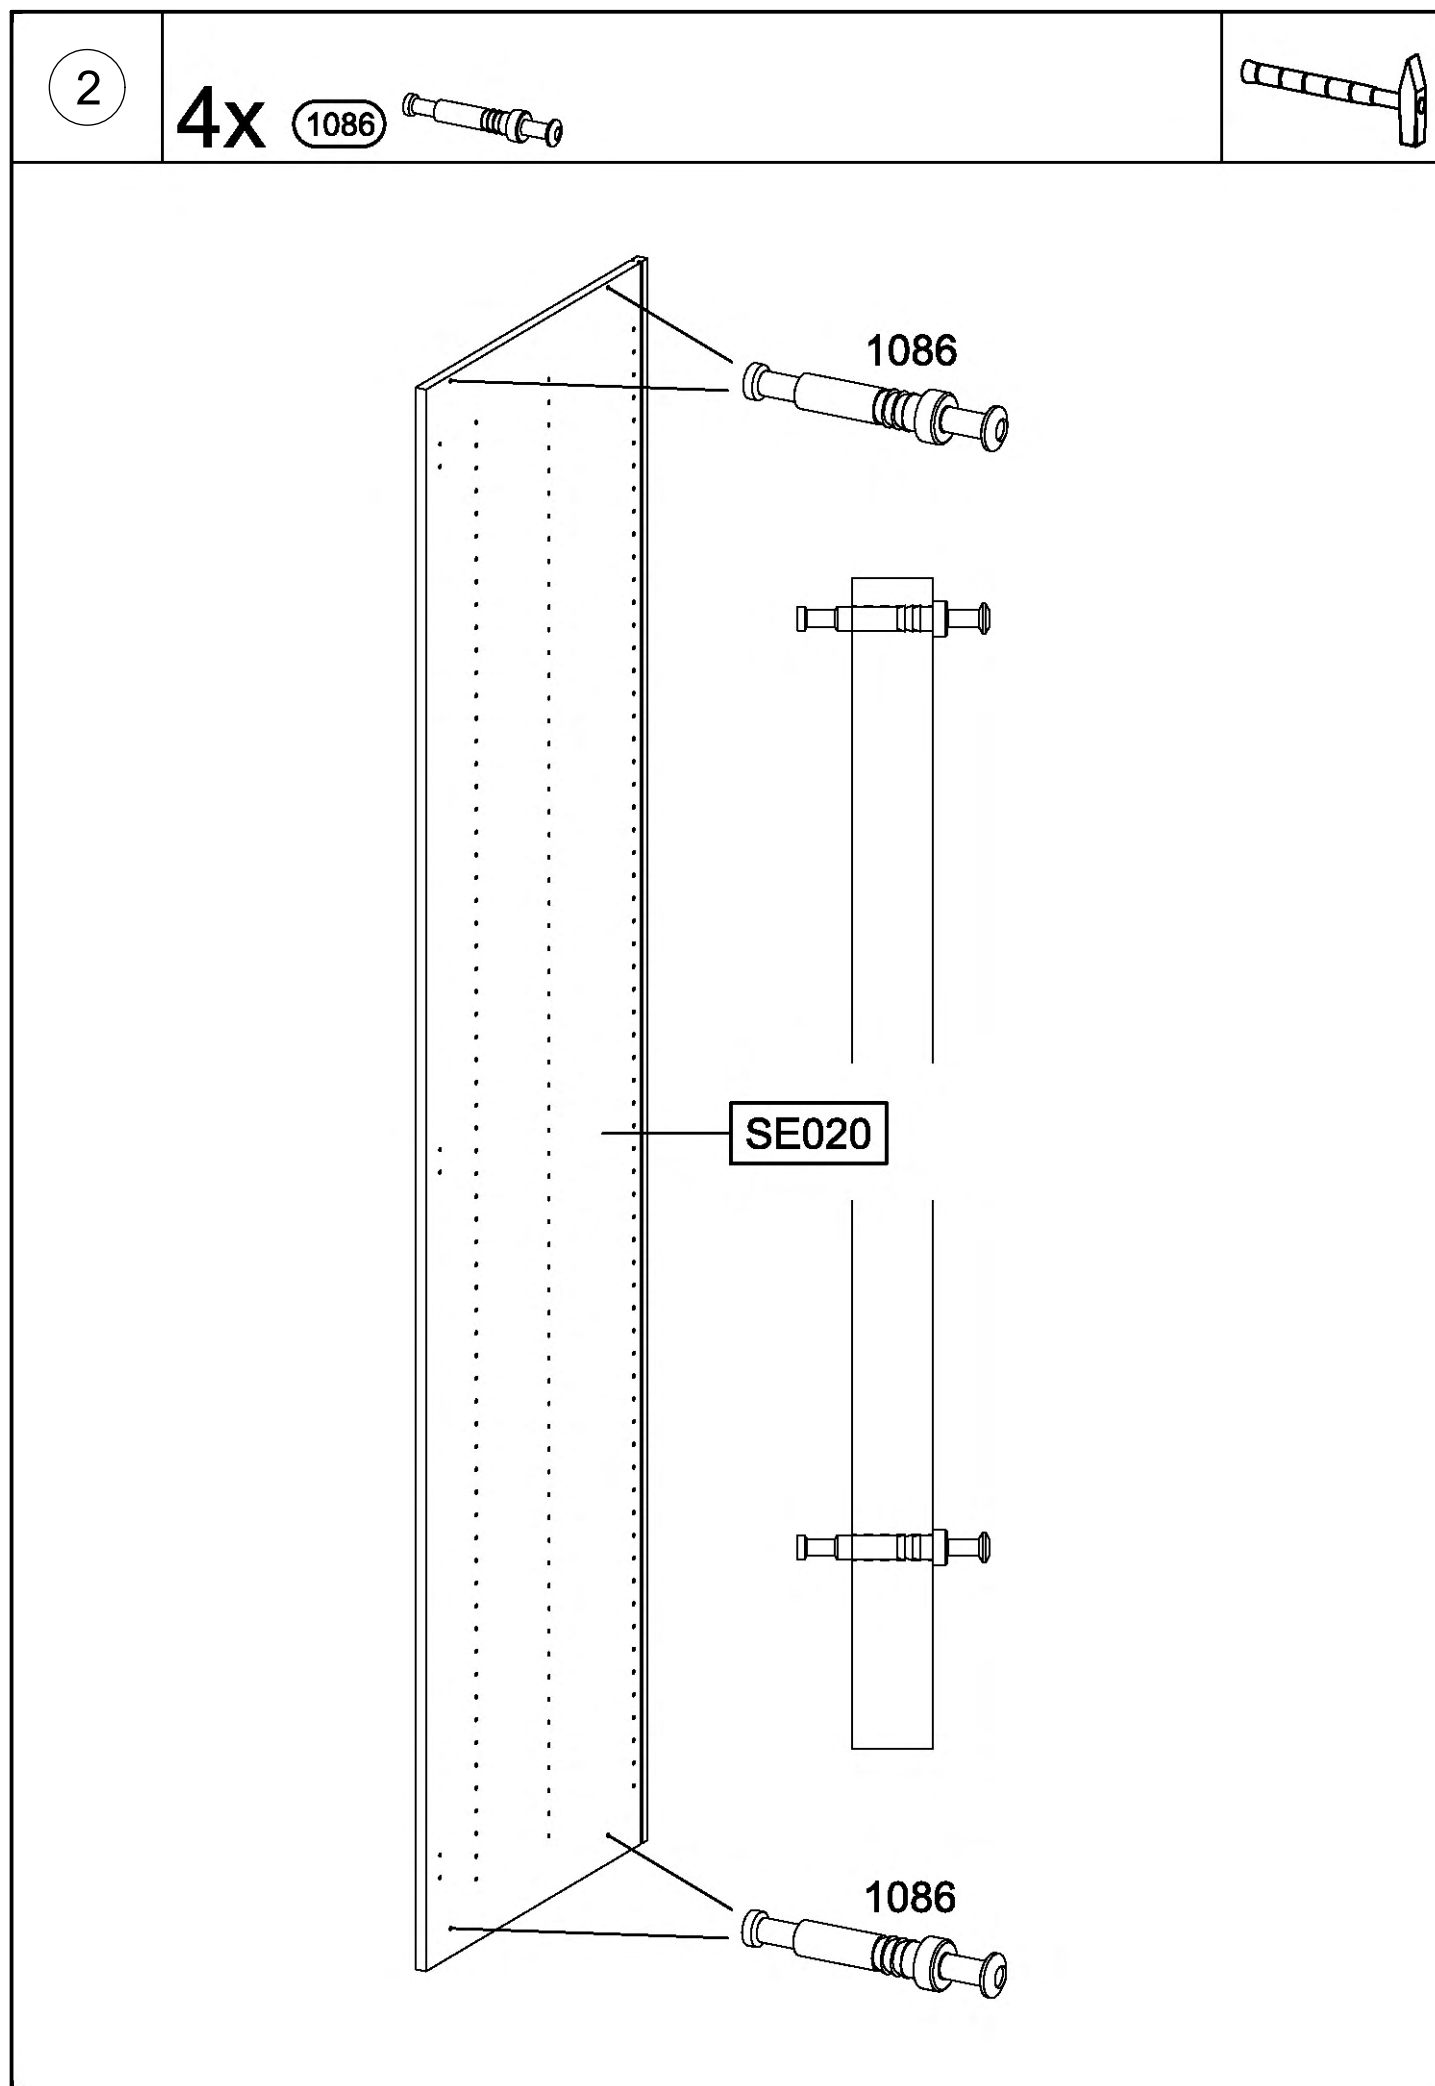




MD107



8.

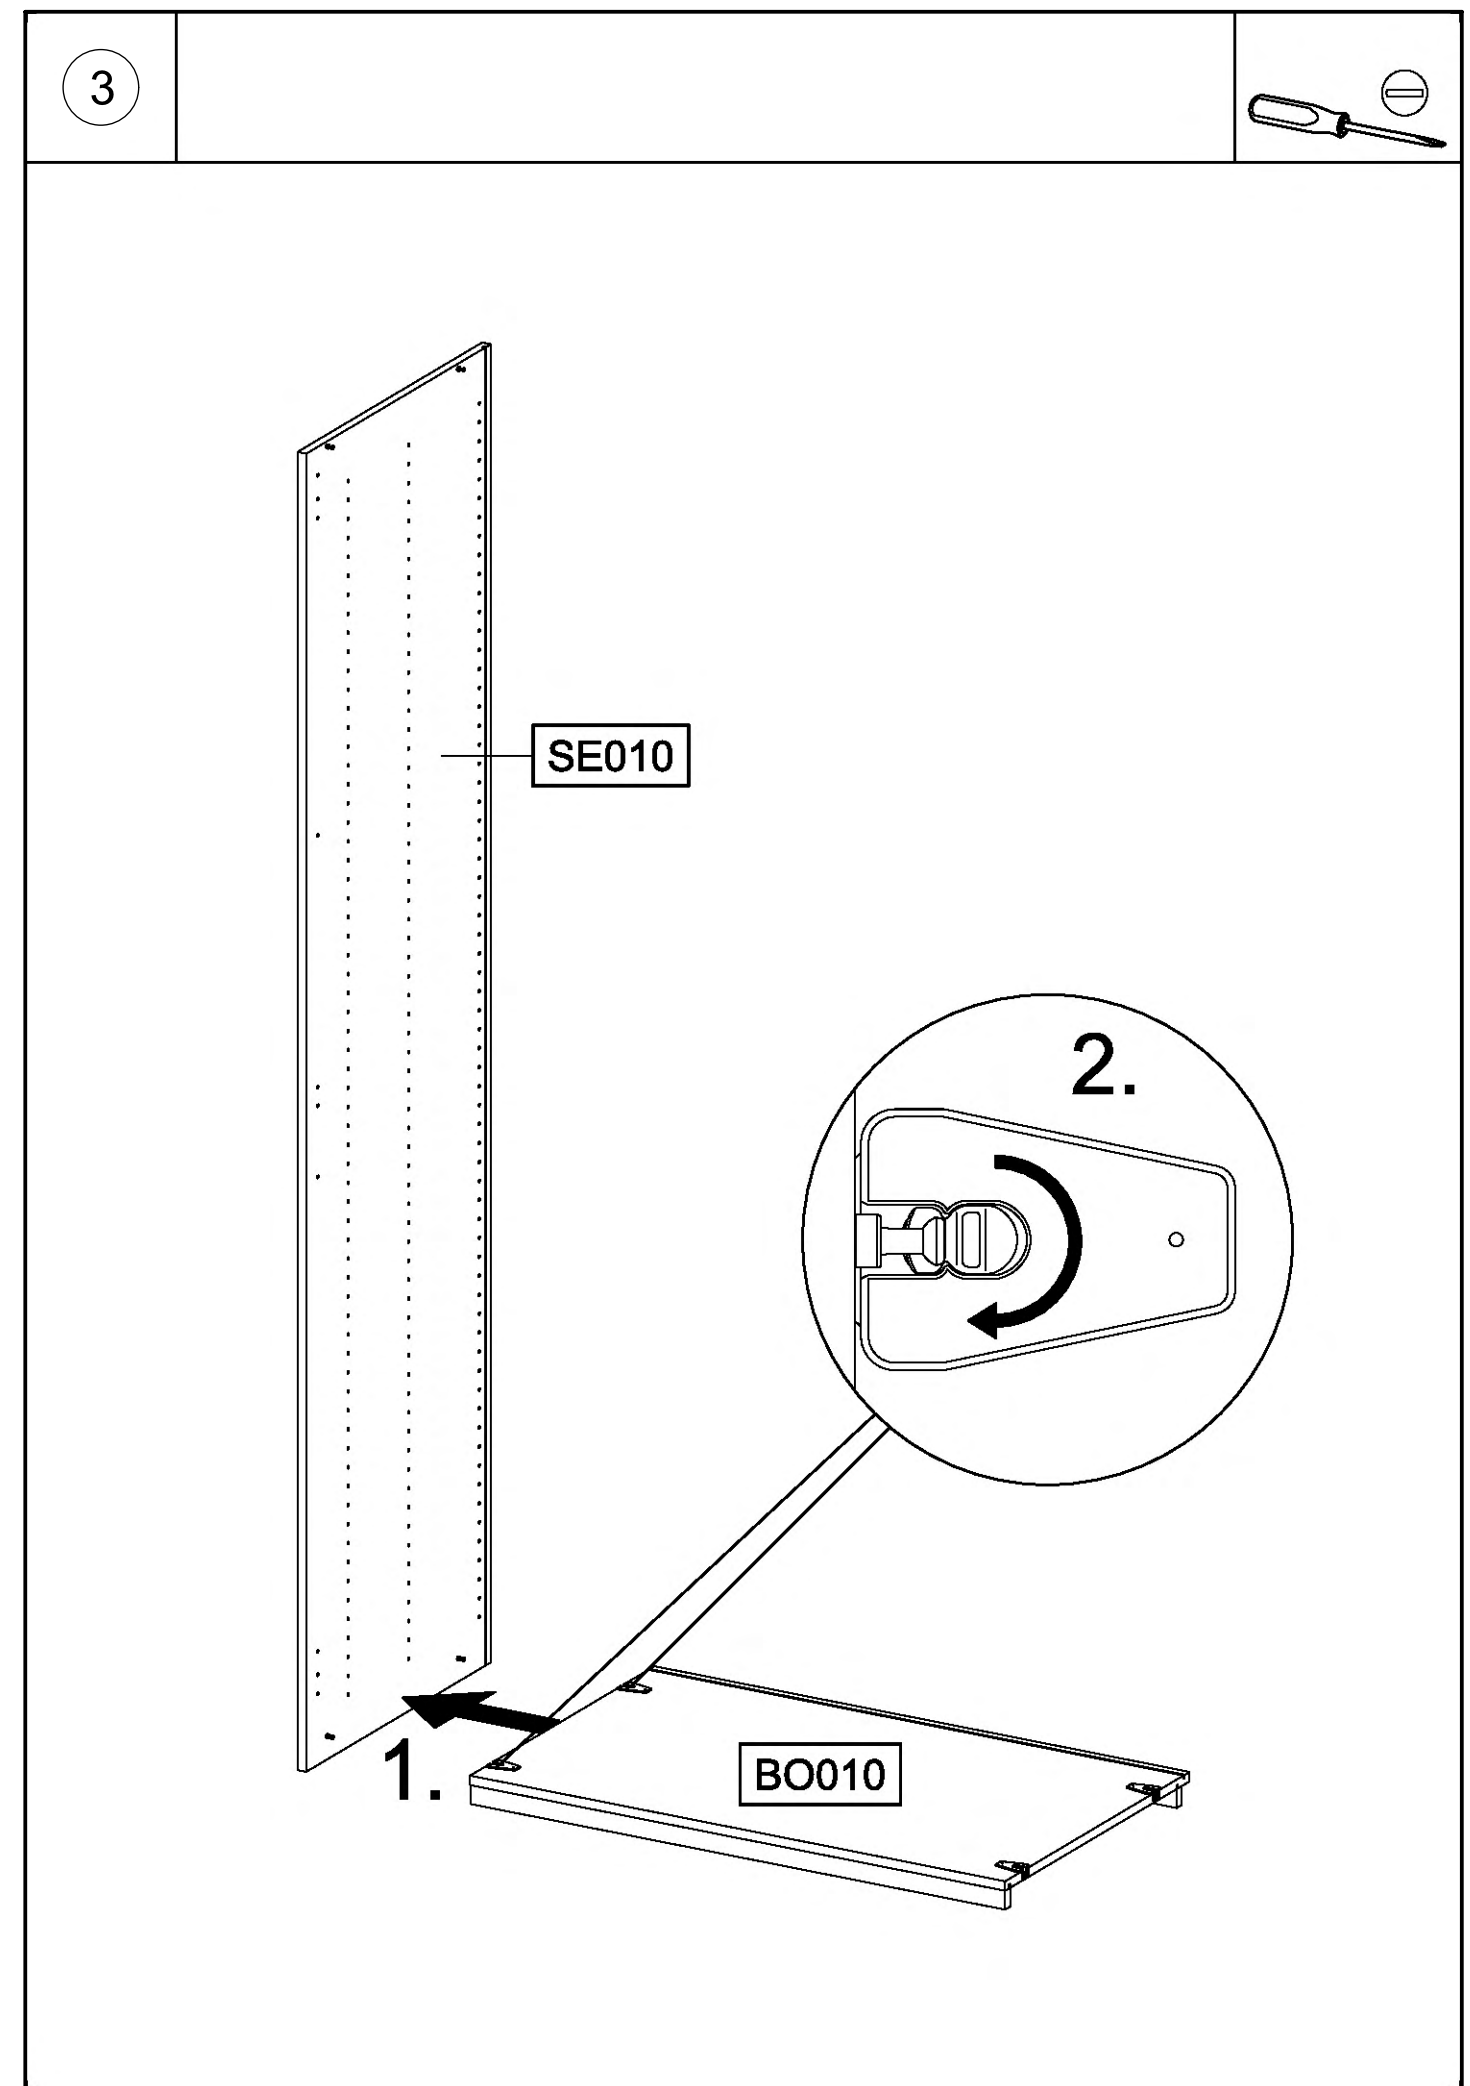


MD107

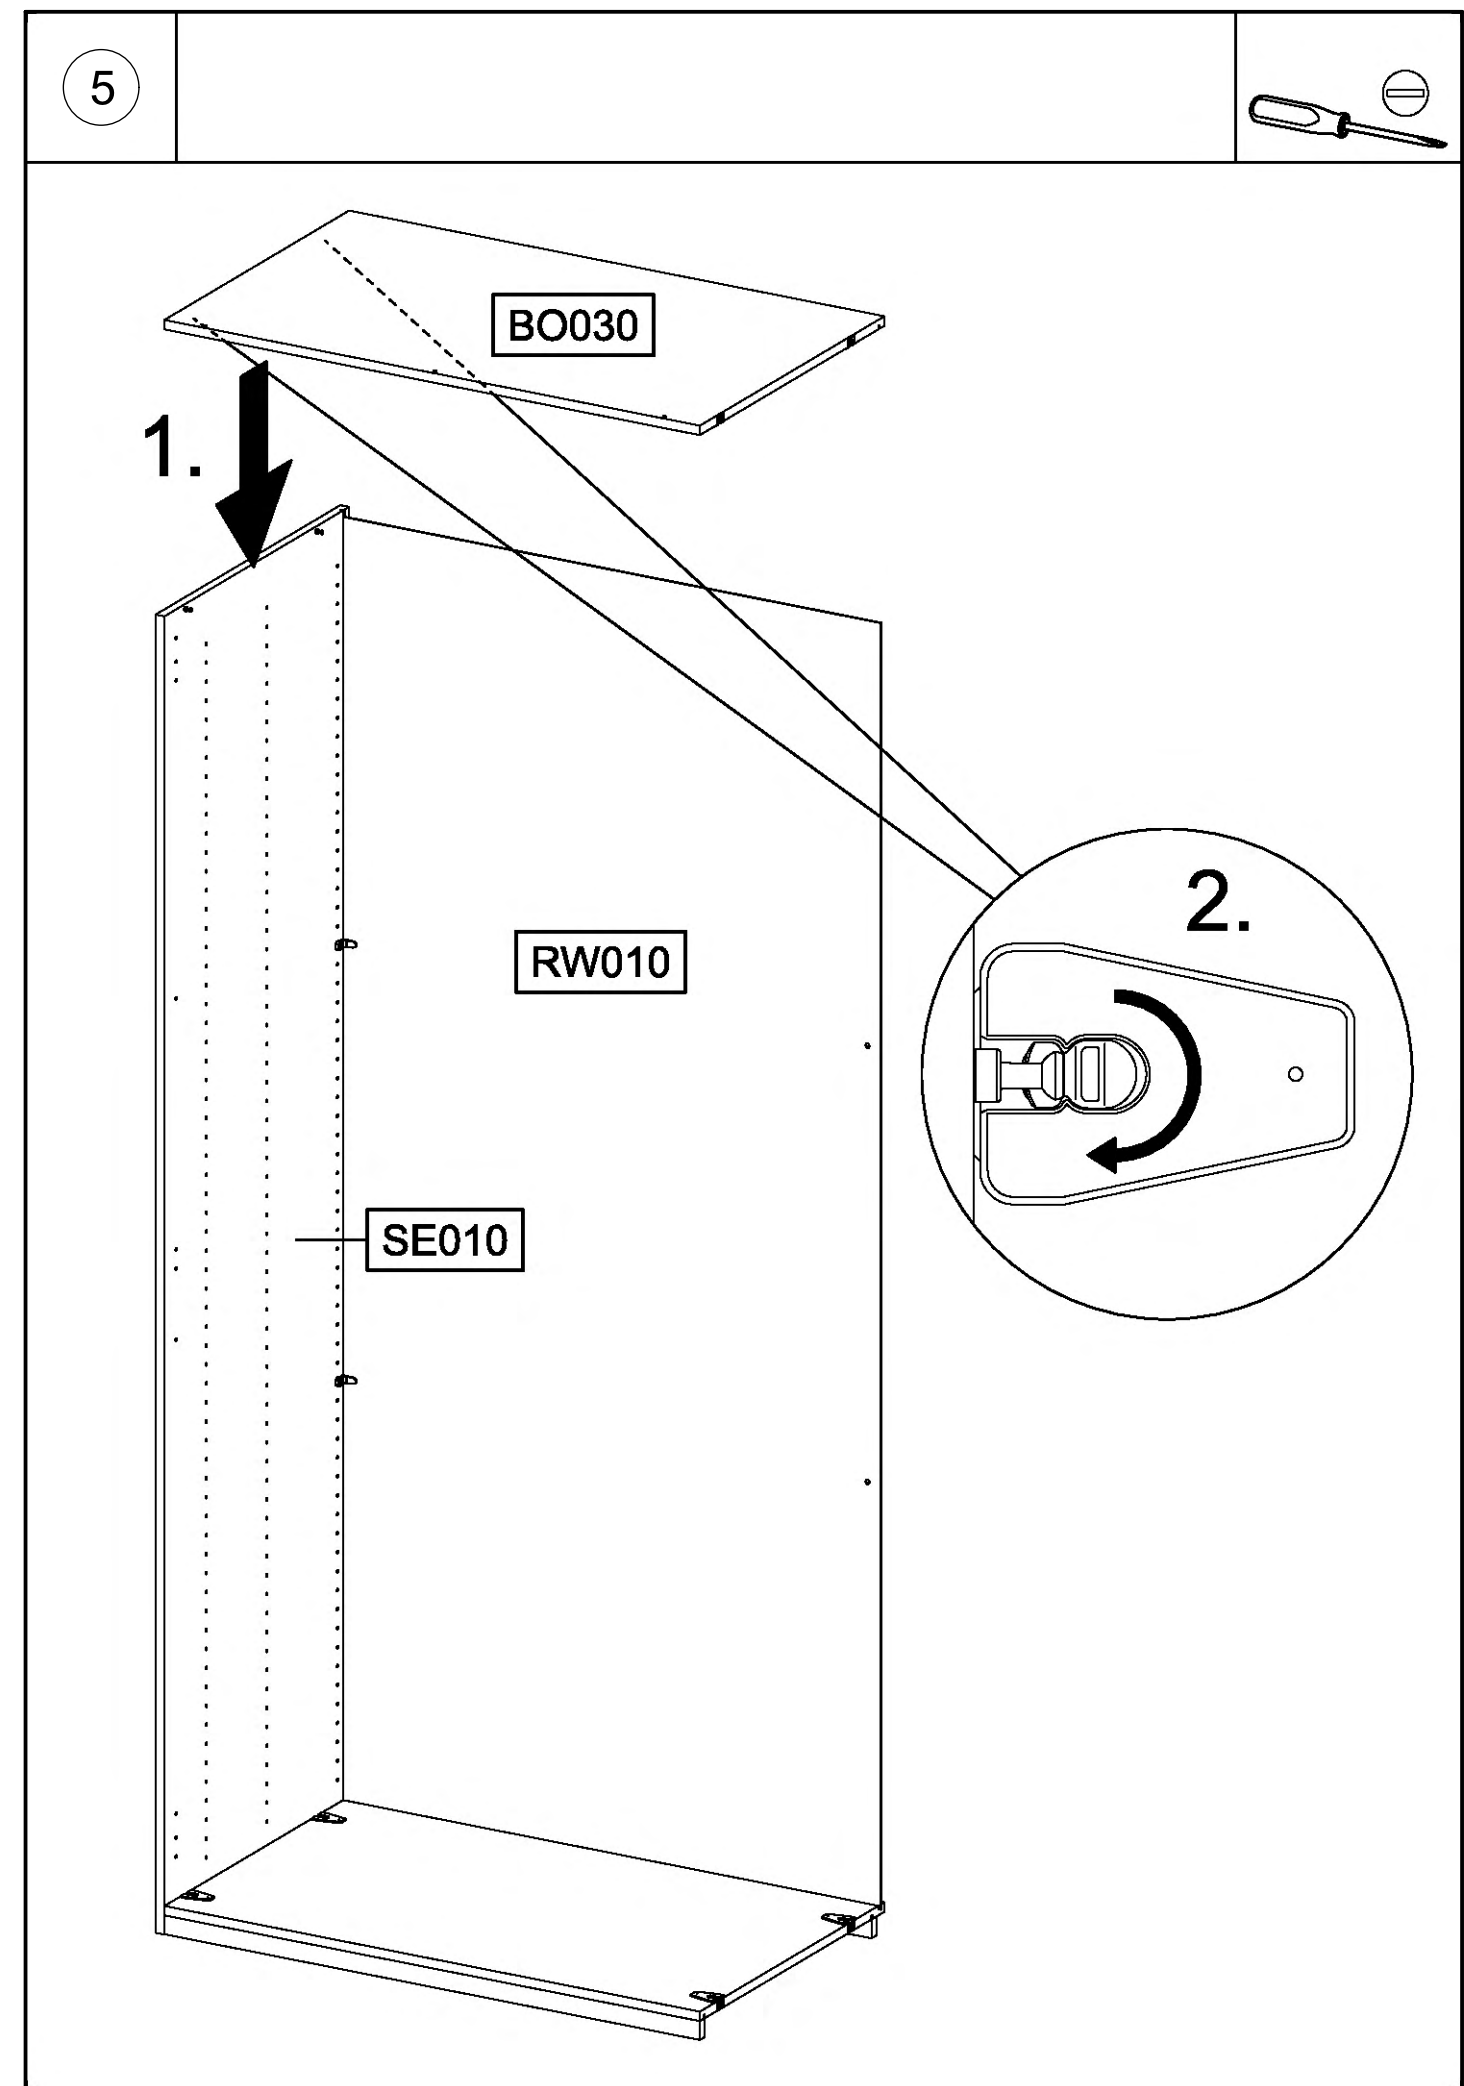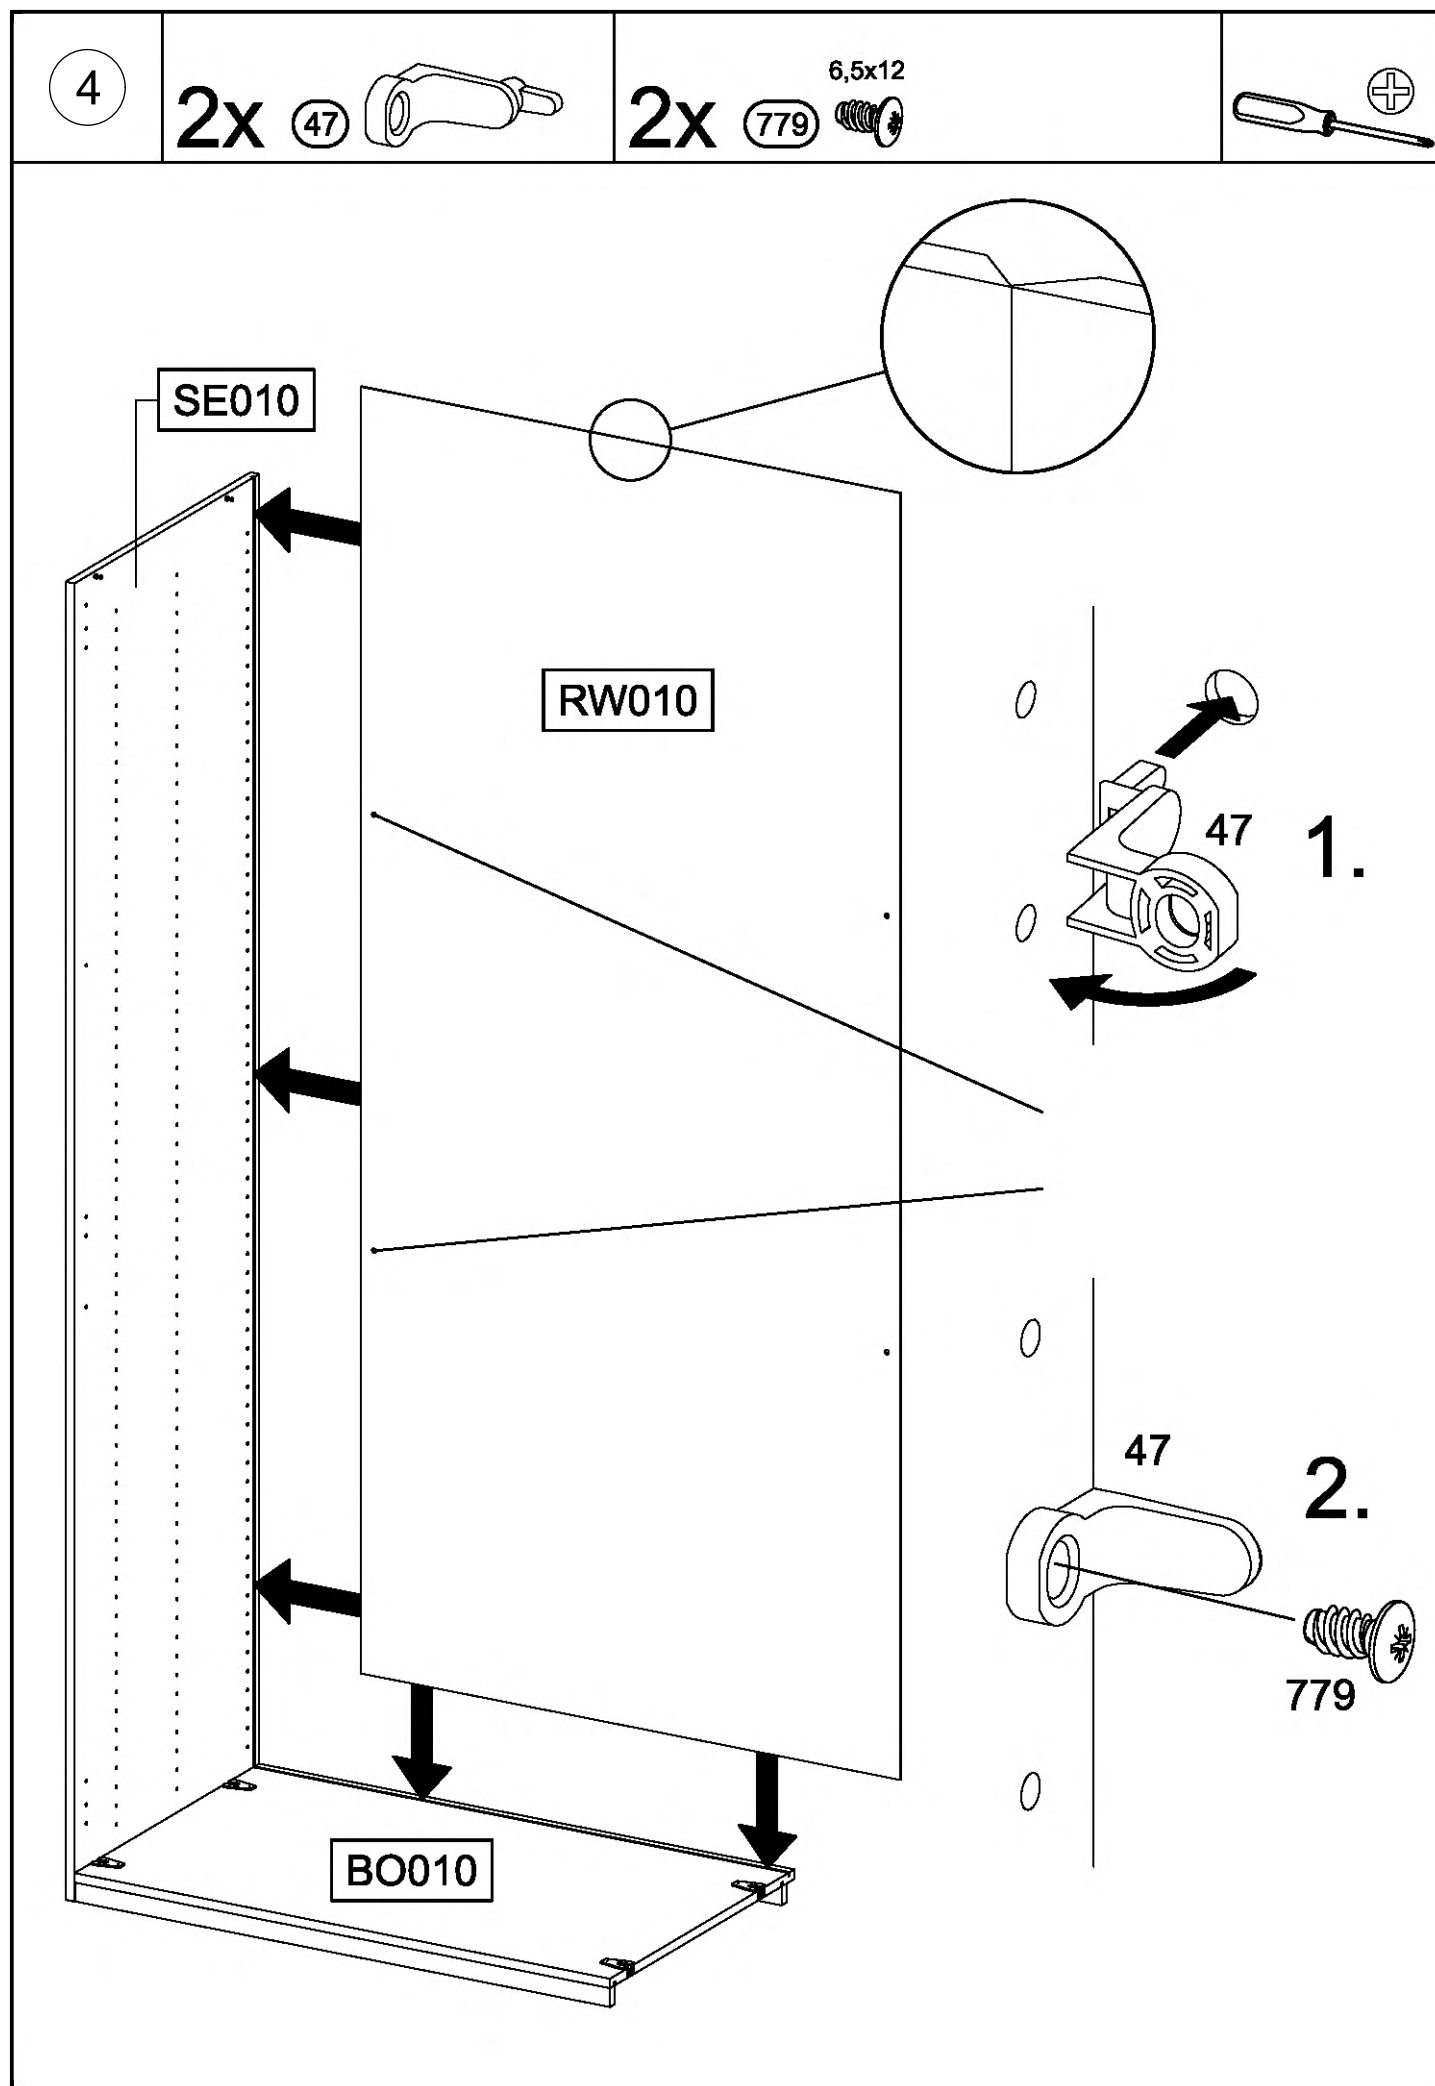

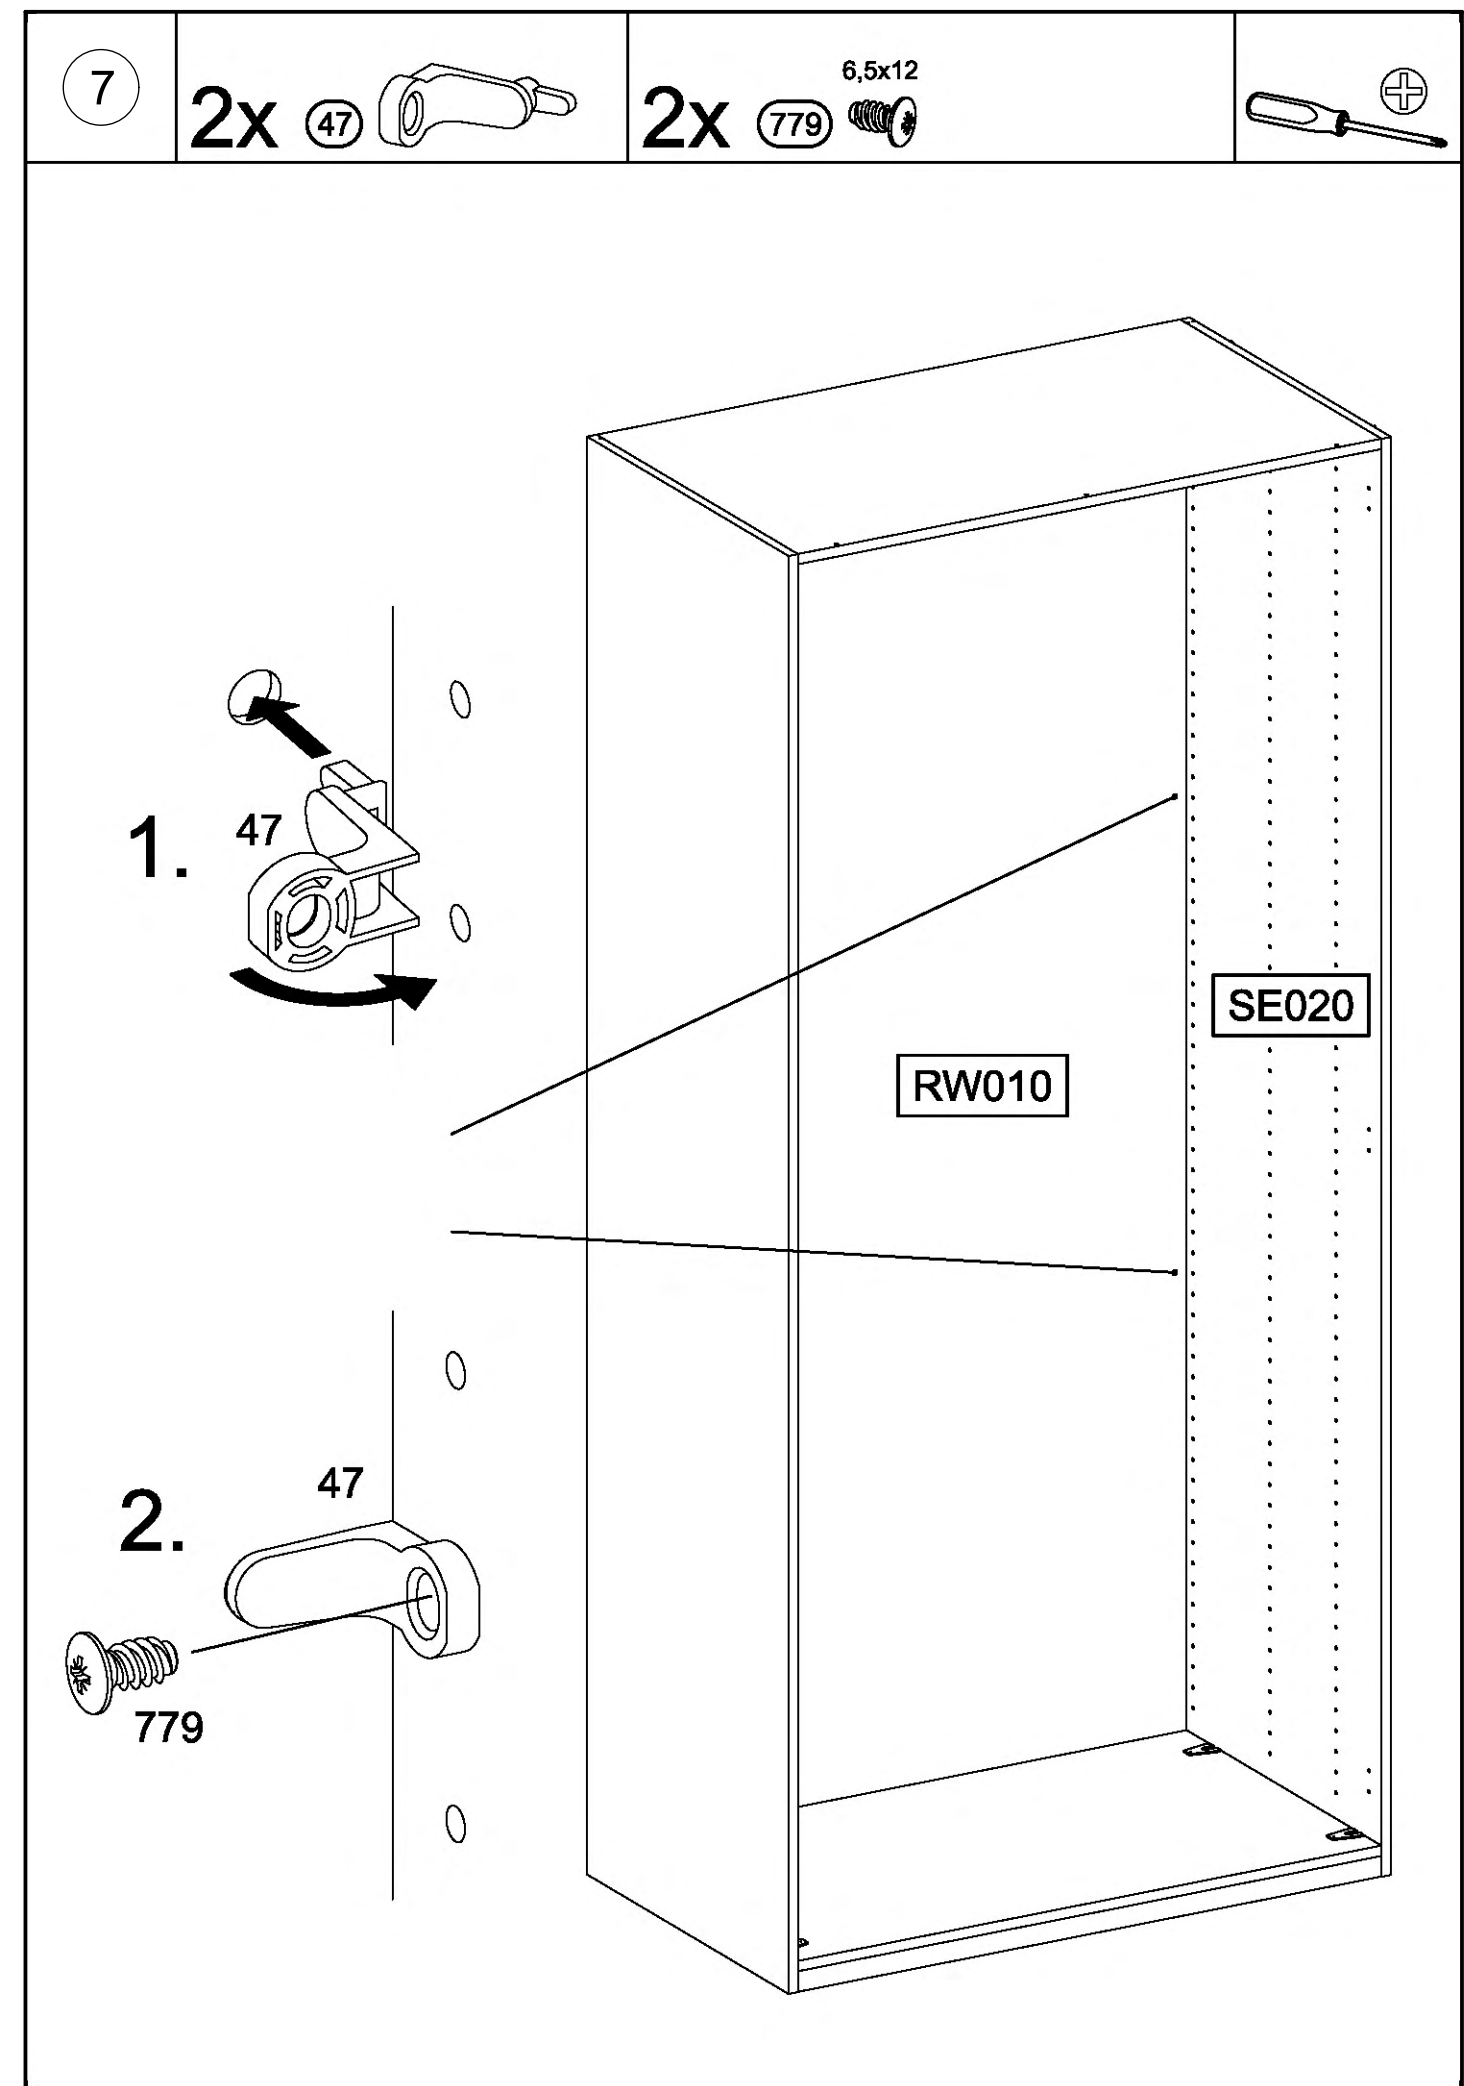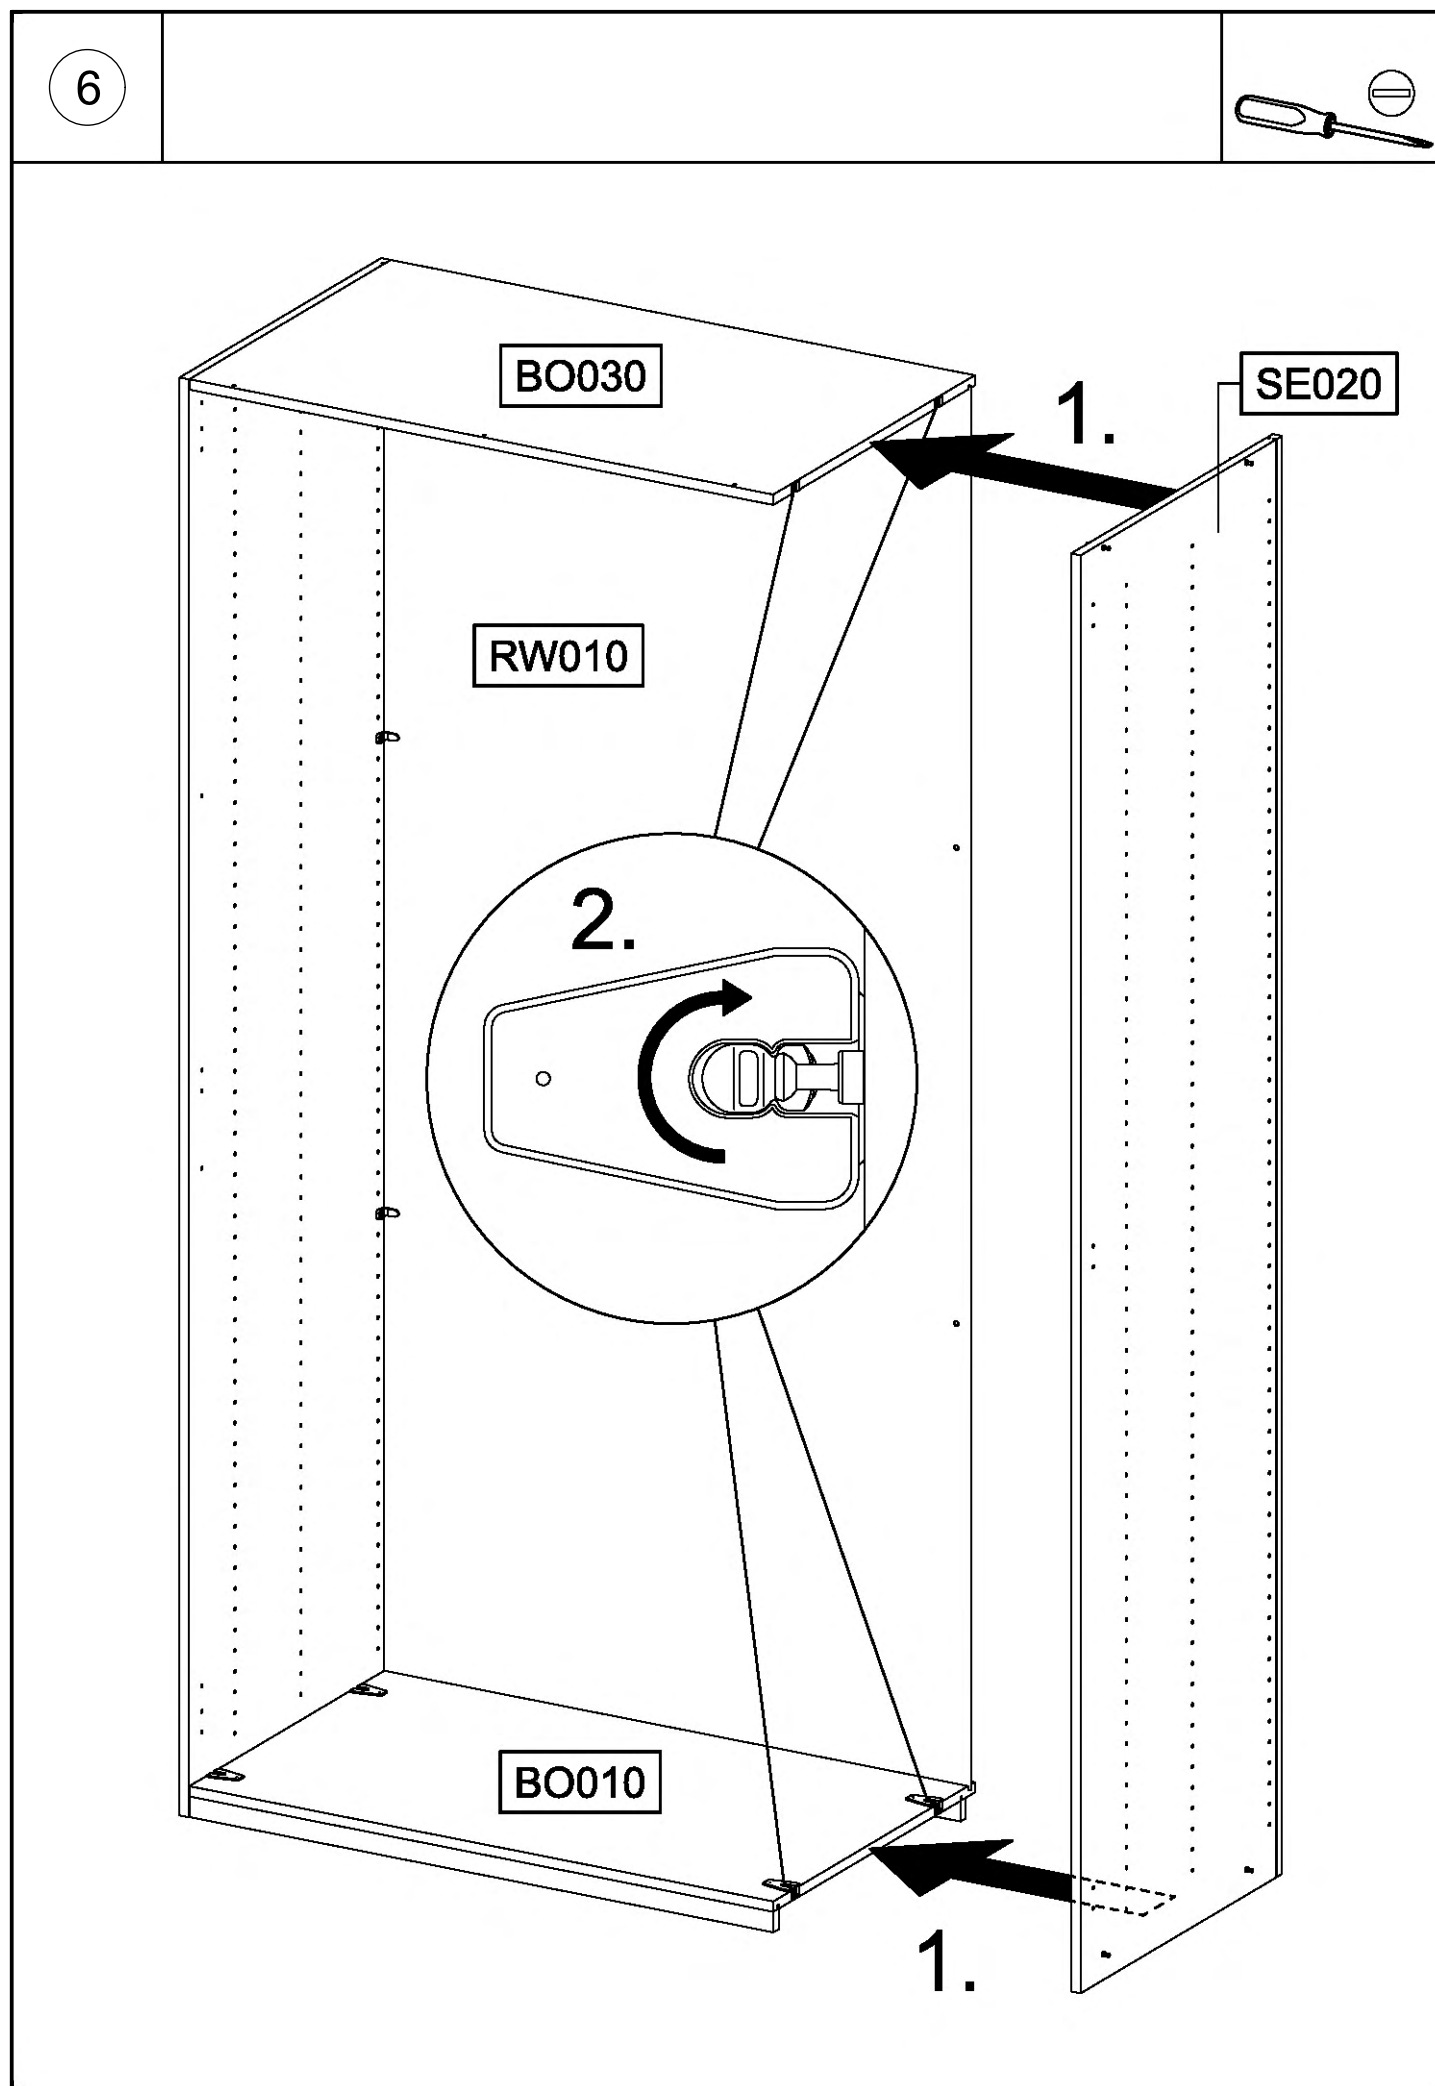

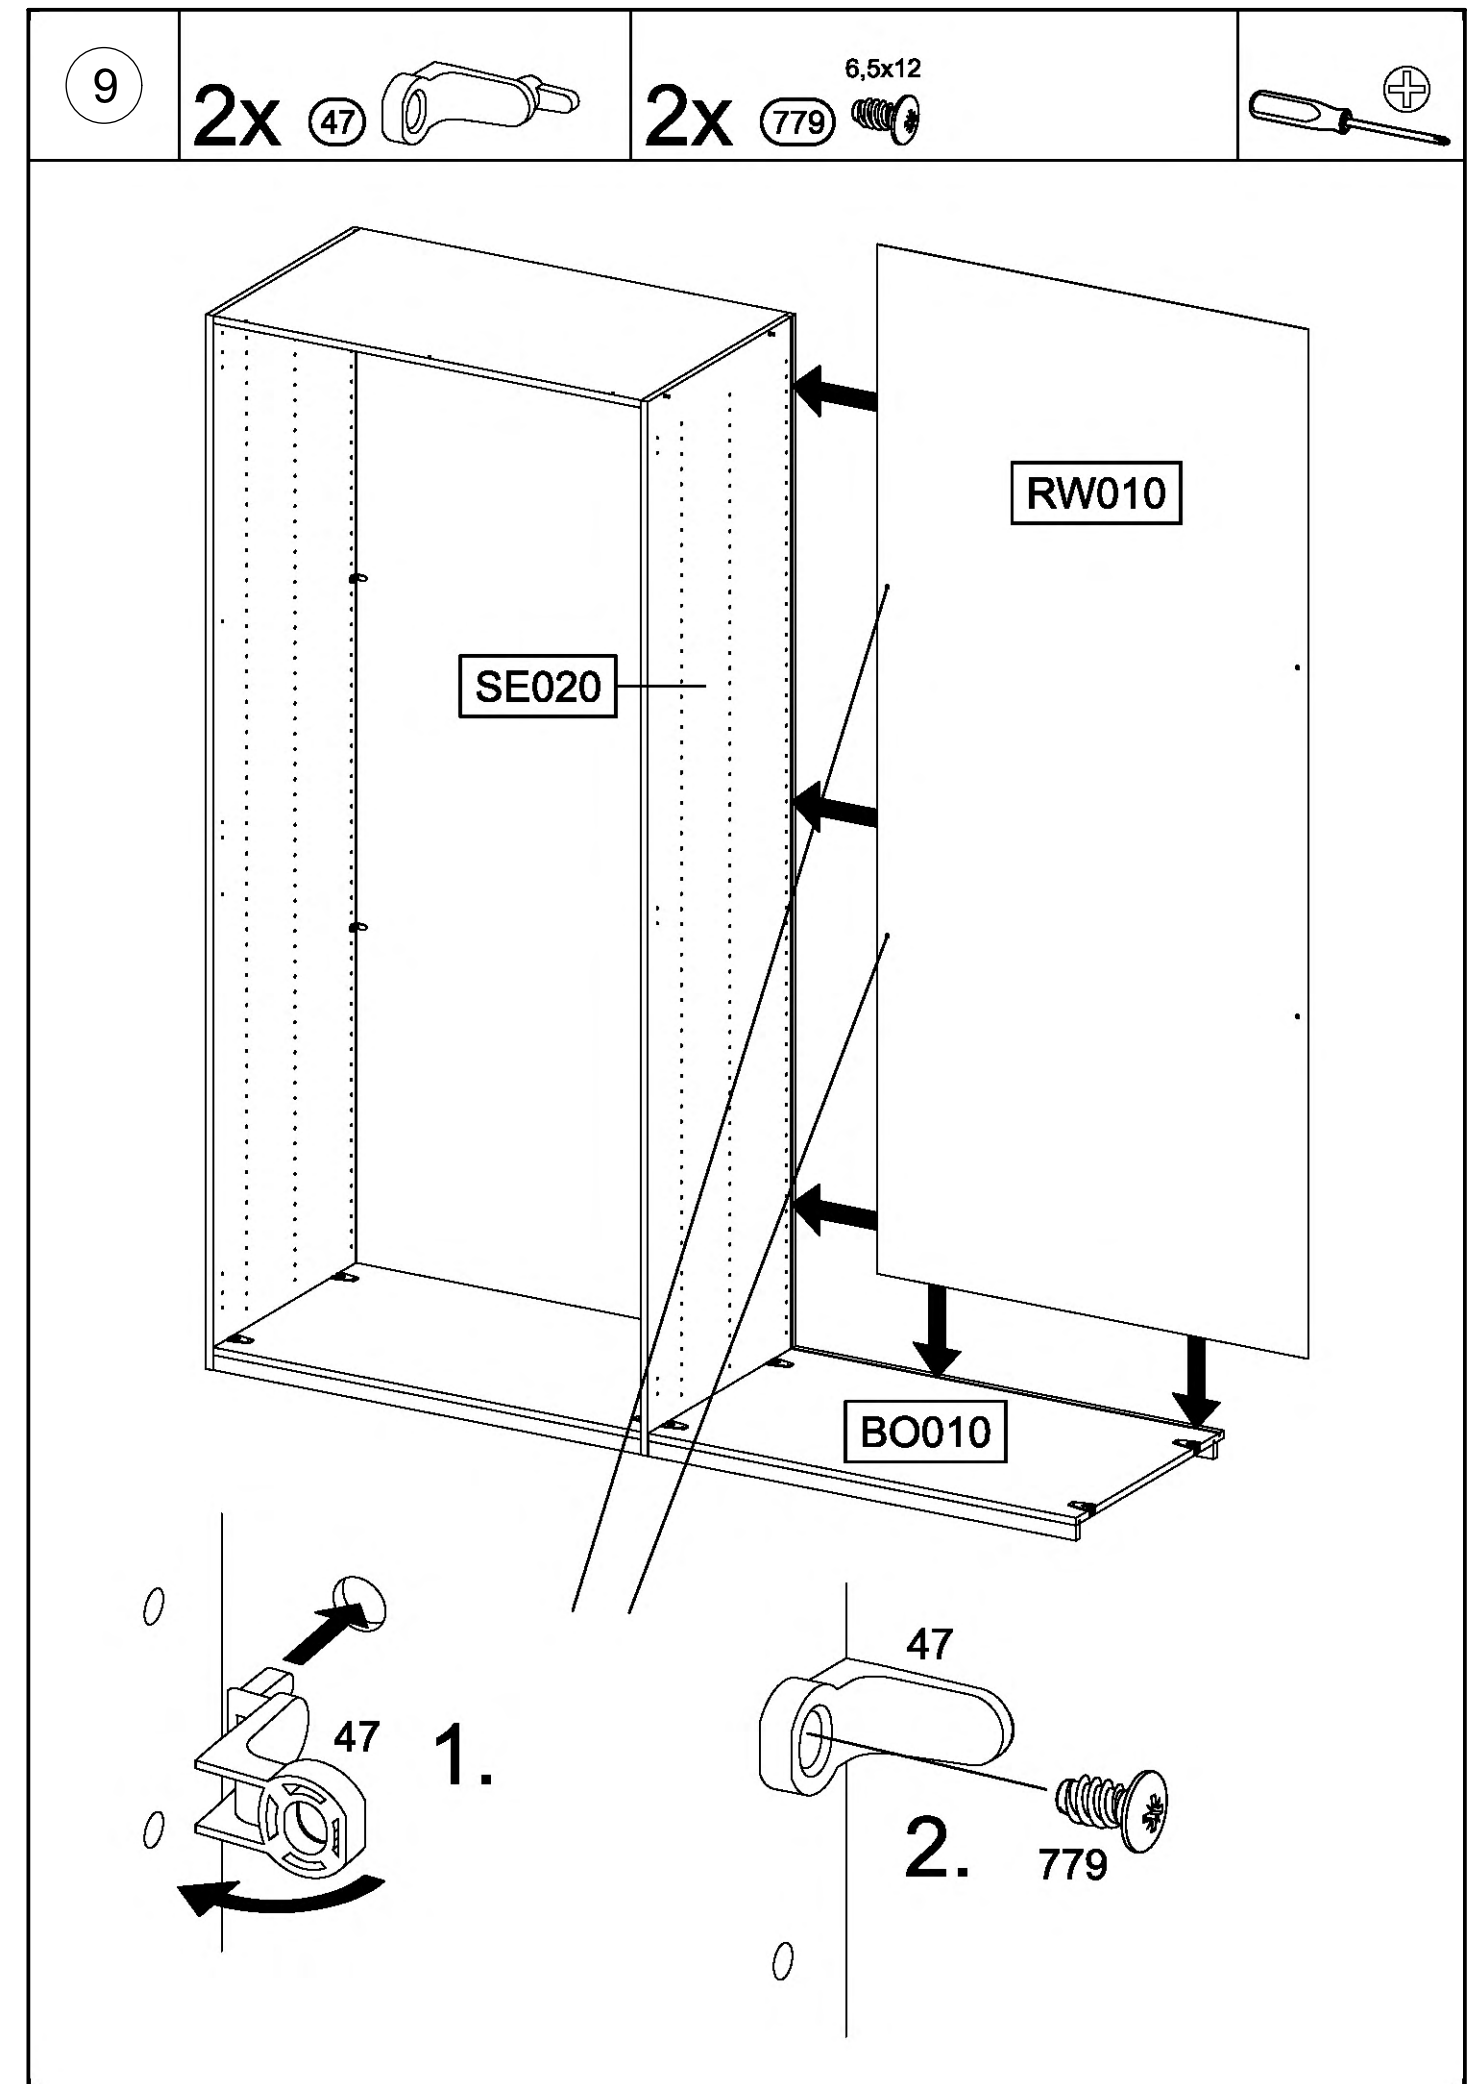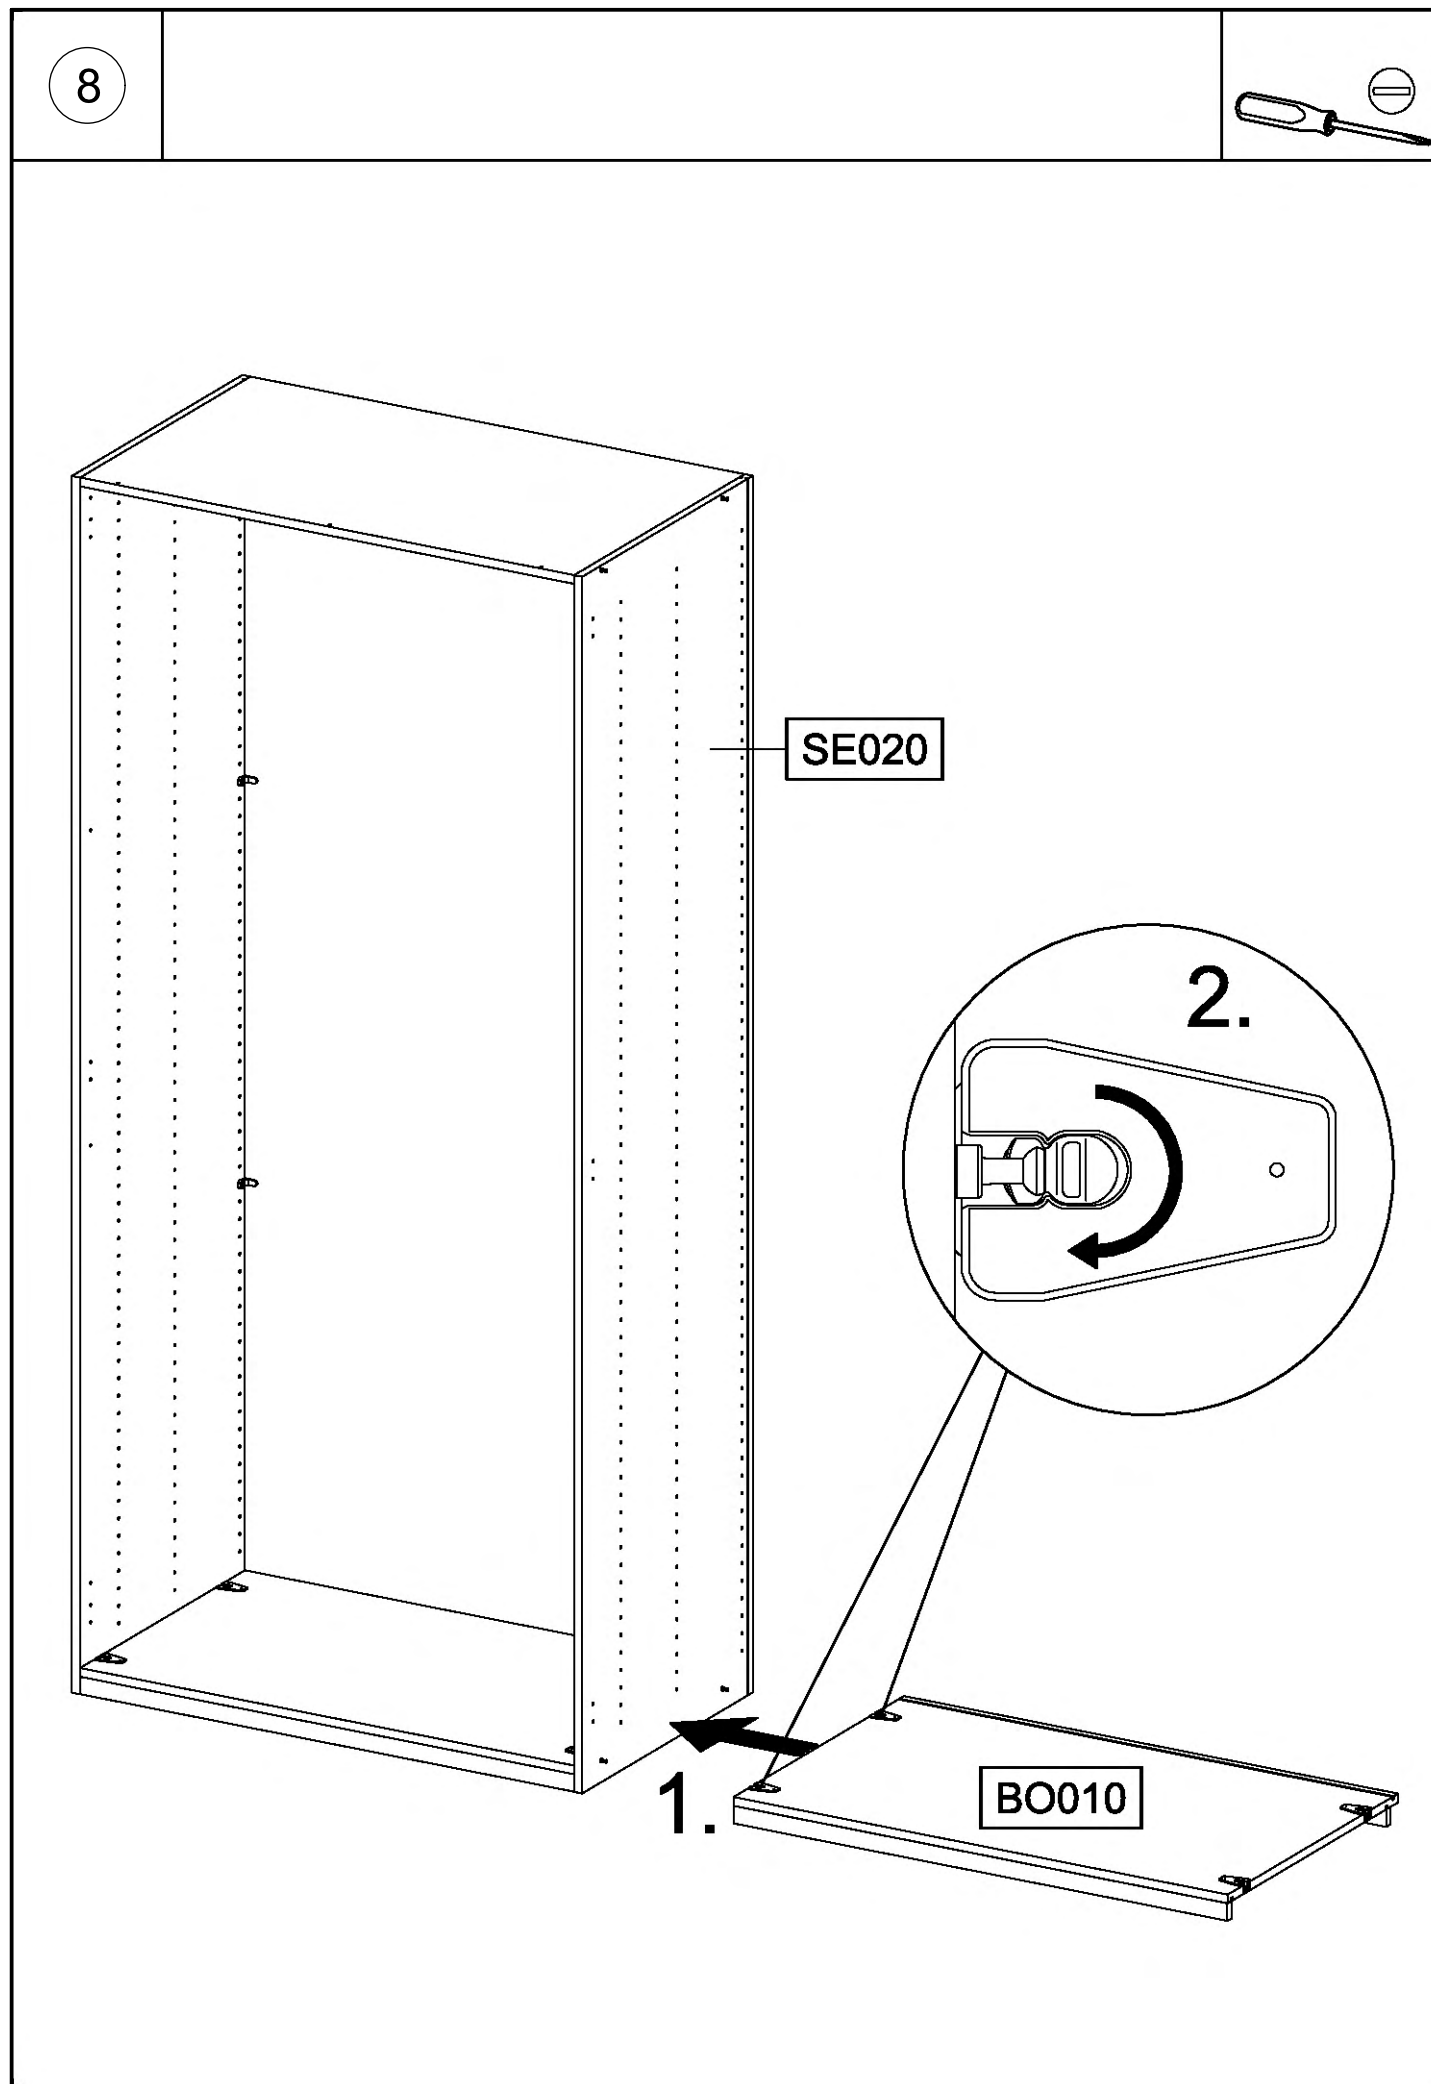


15.


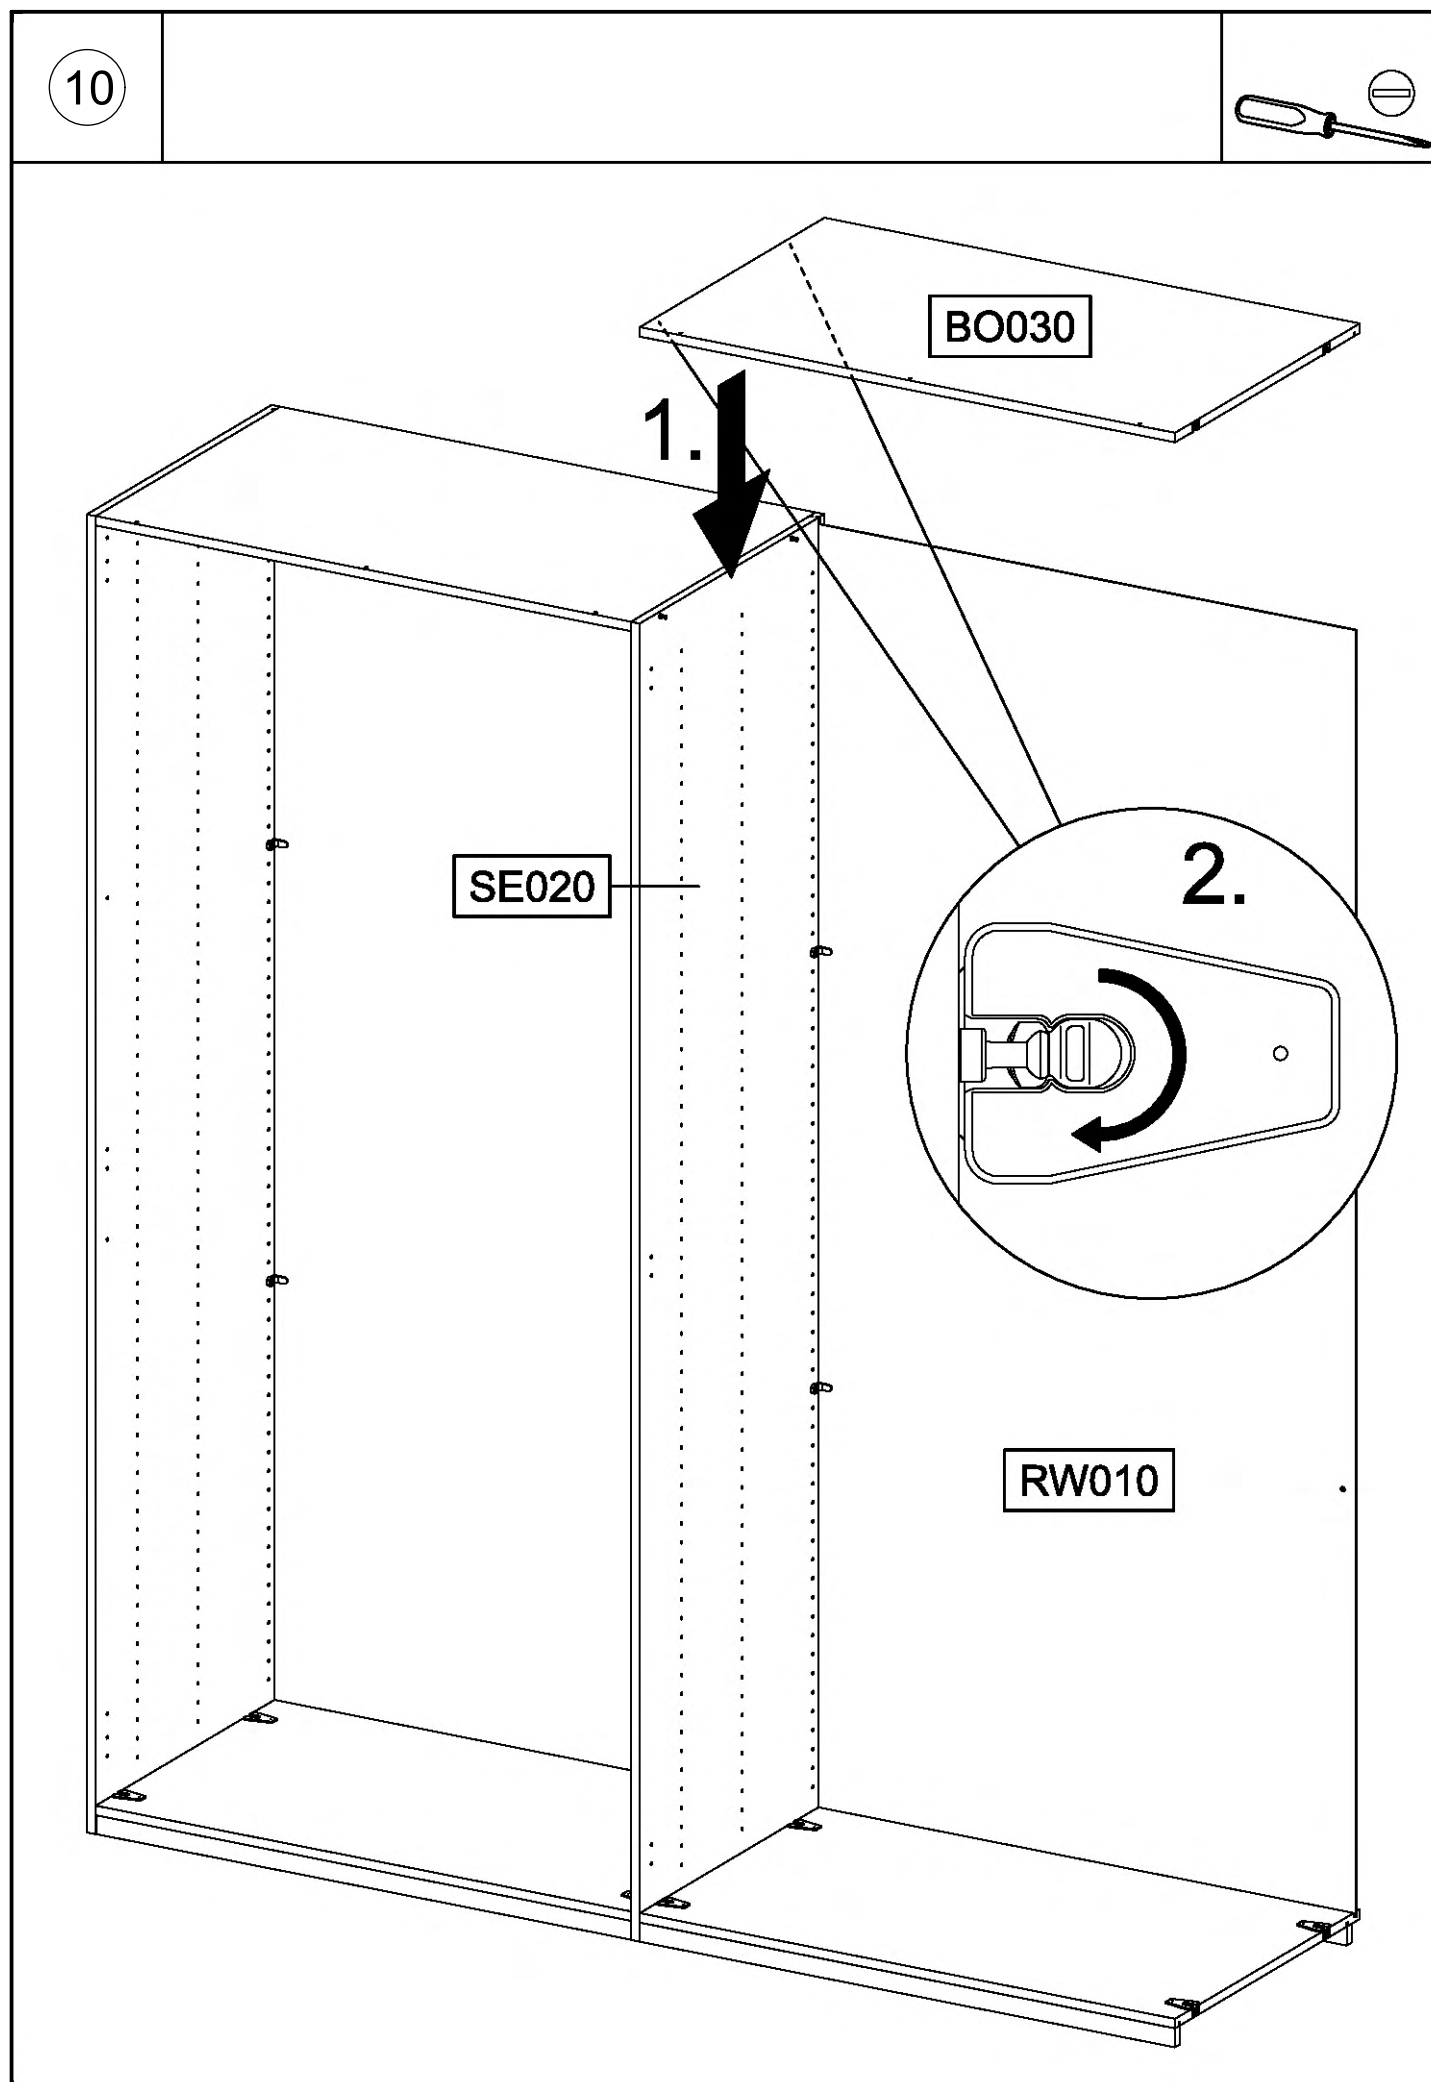




MD107

16.

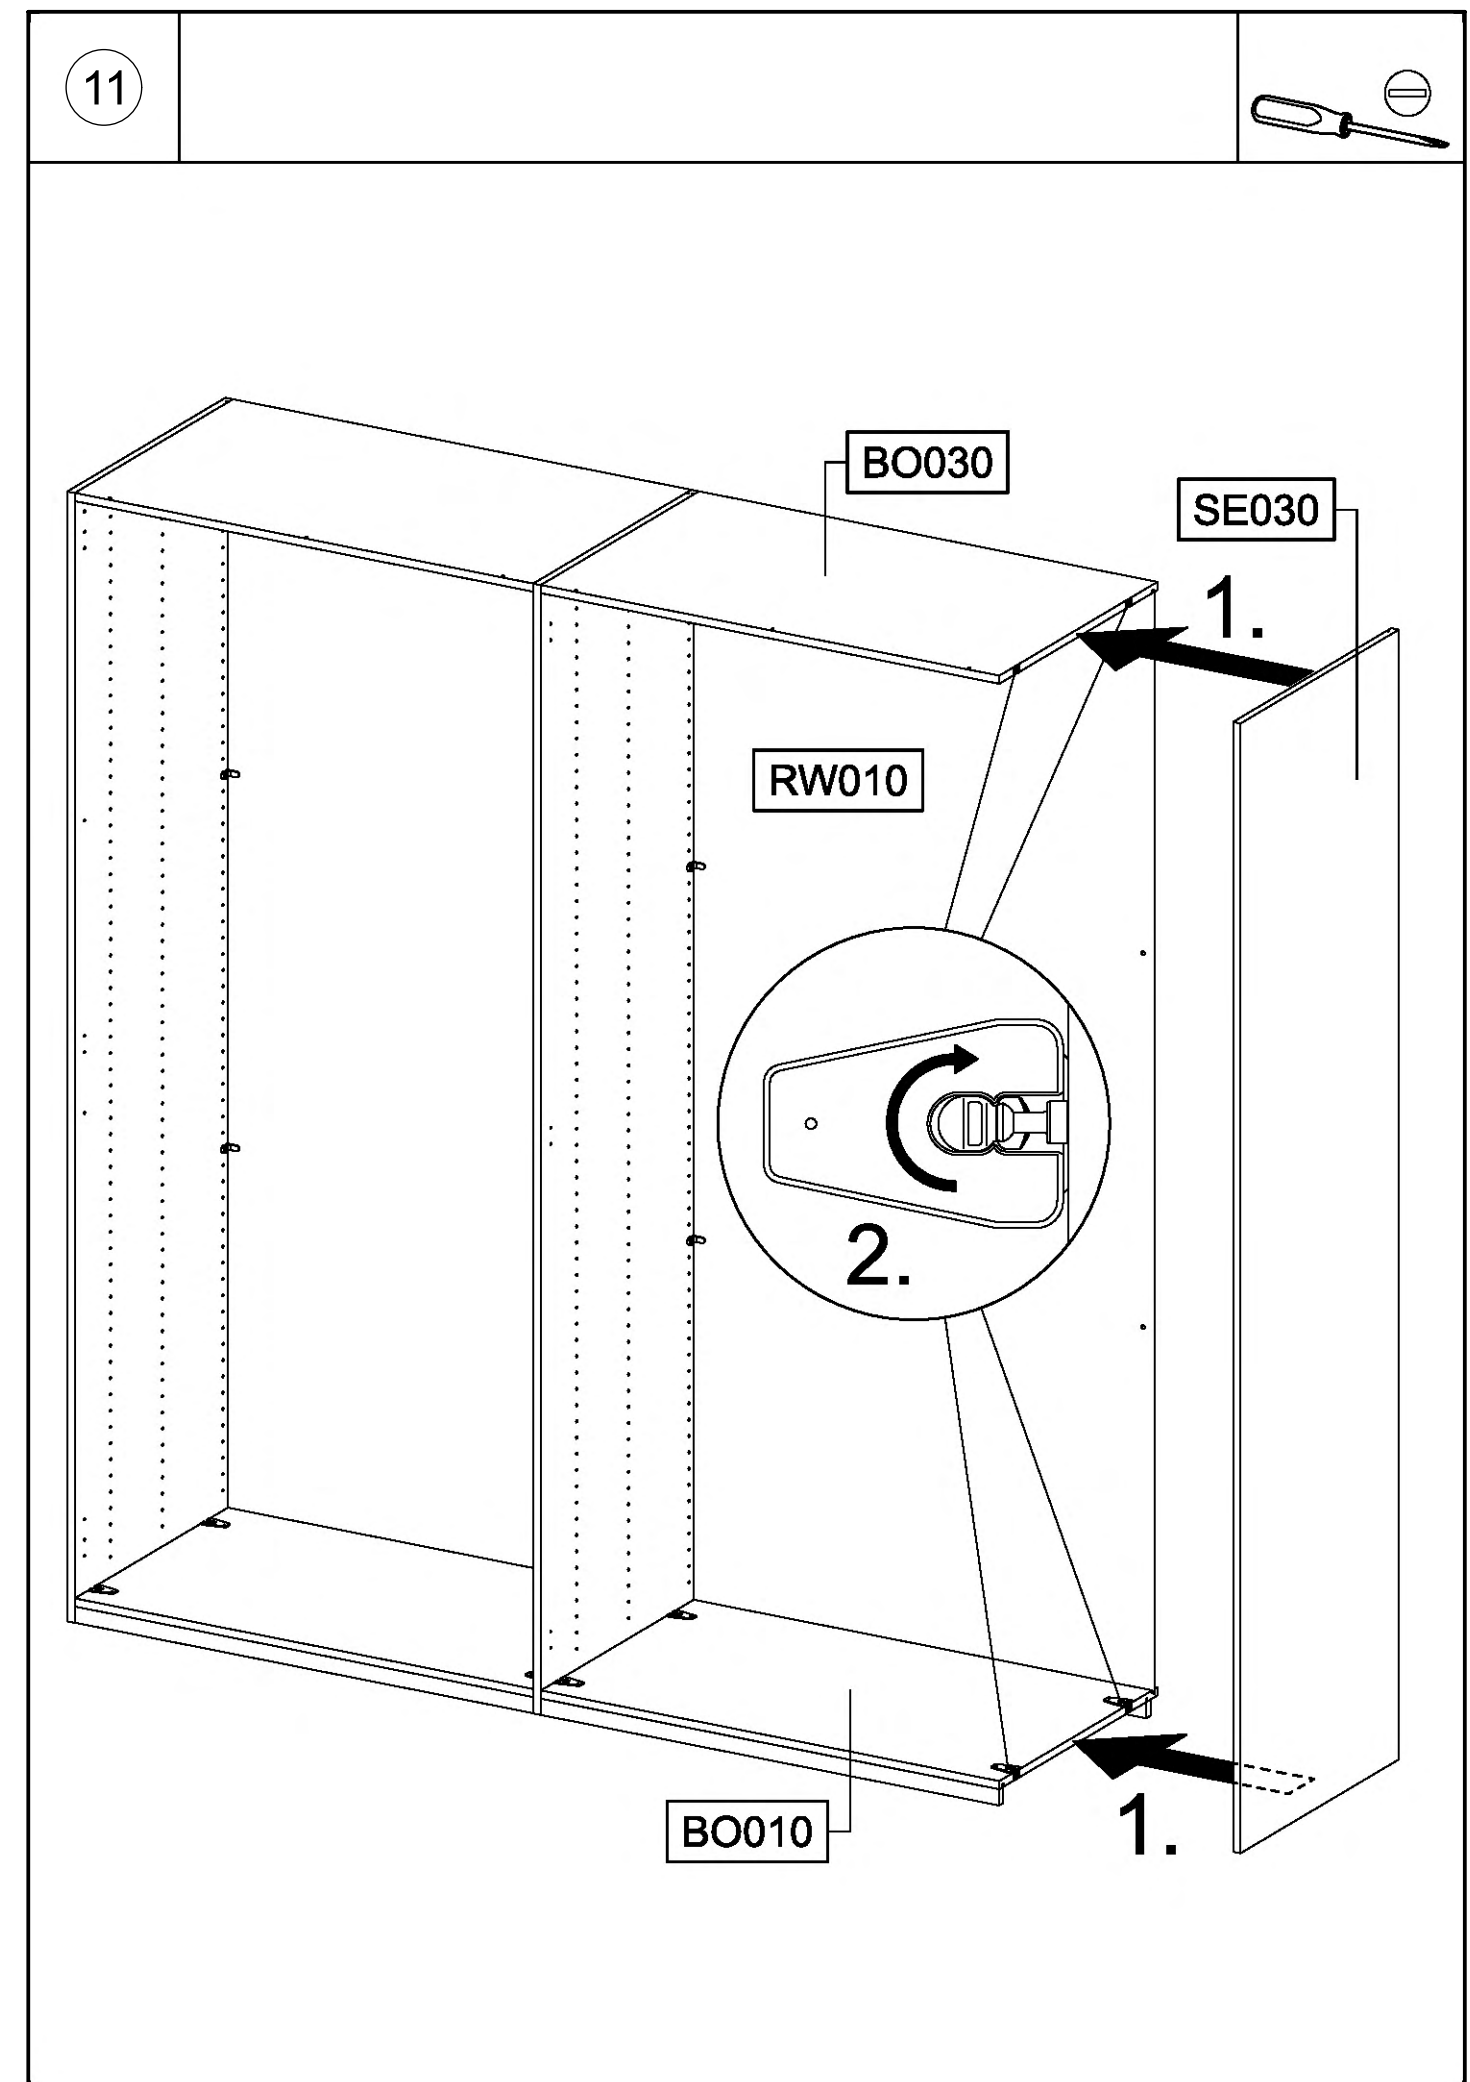






MD107

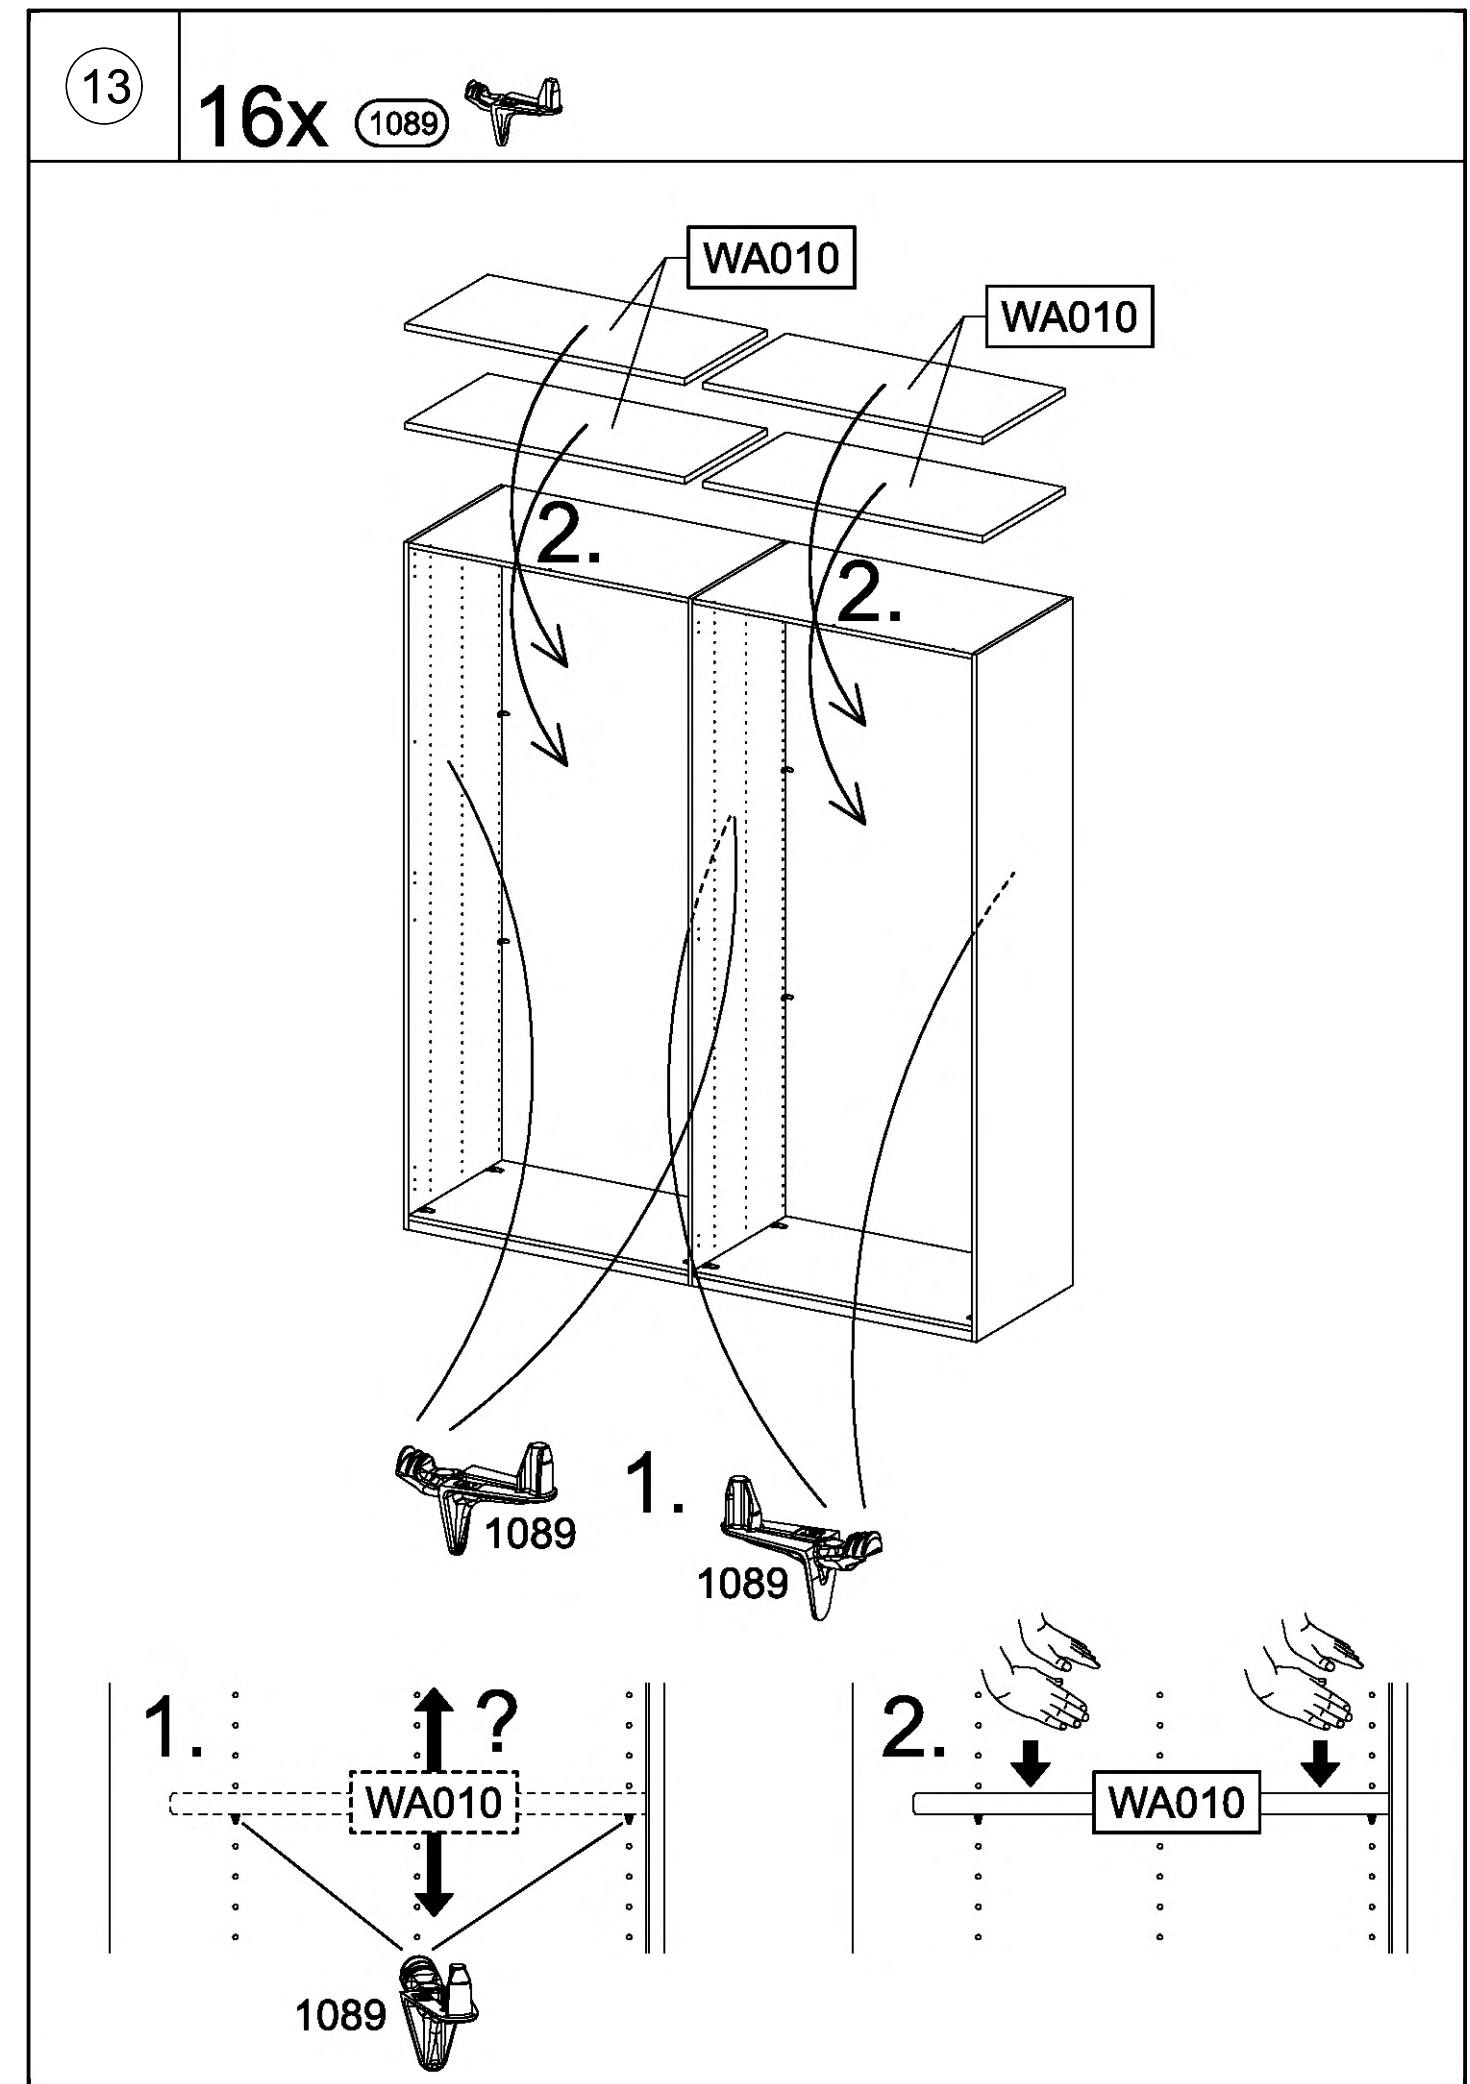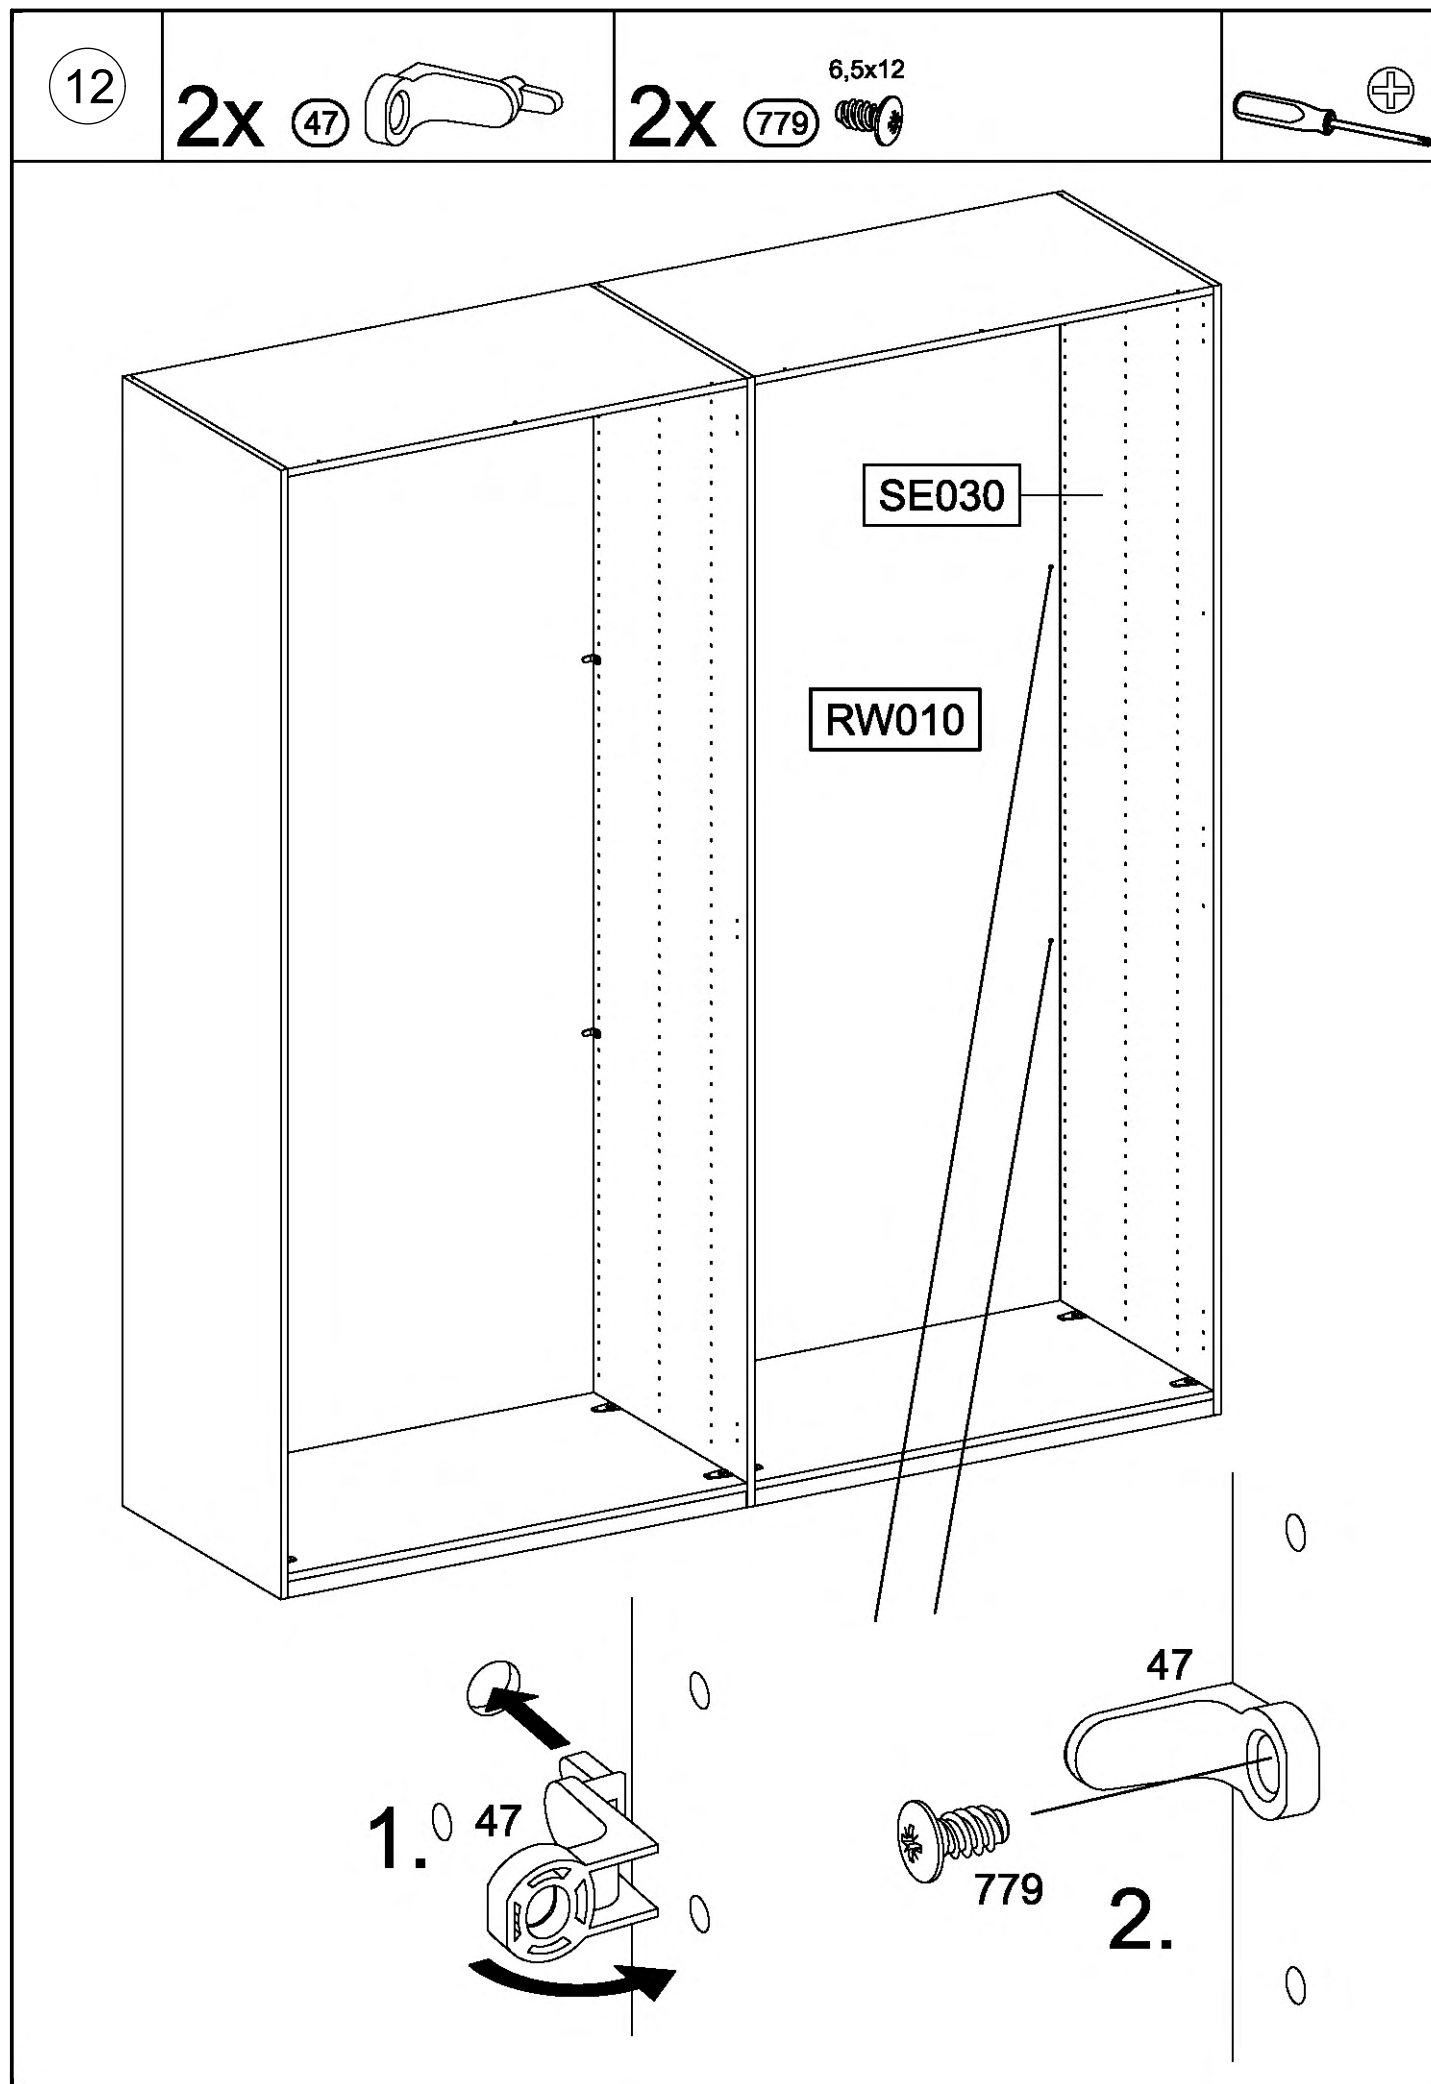

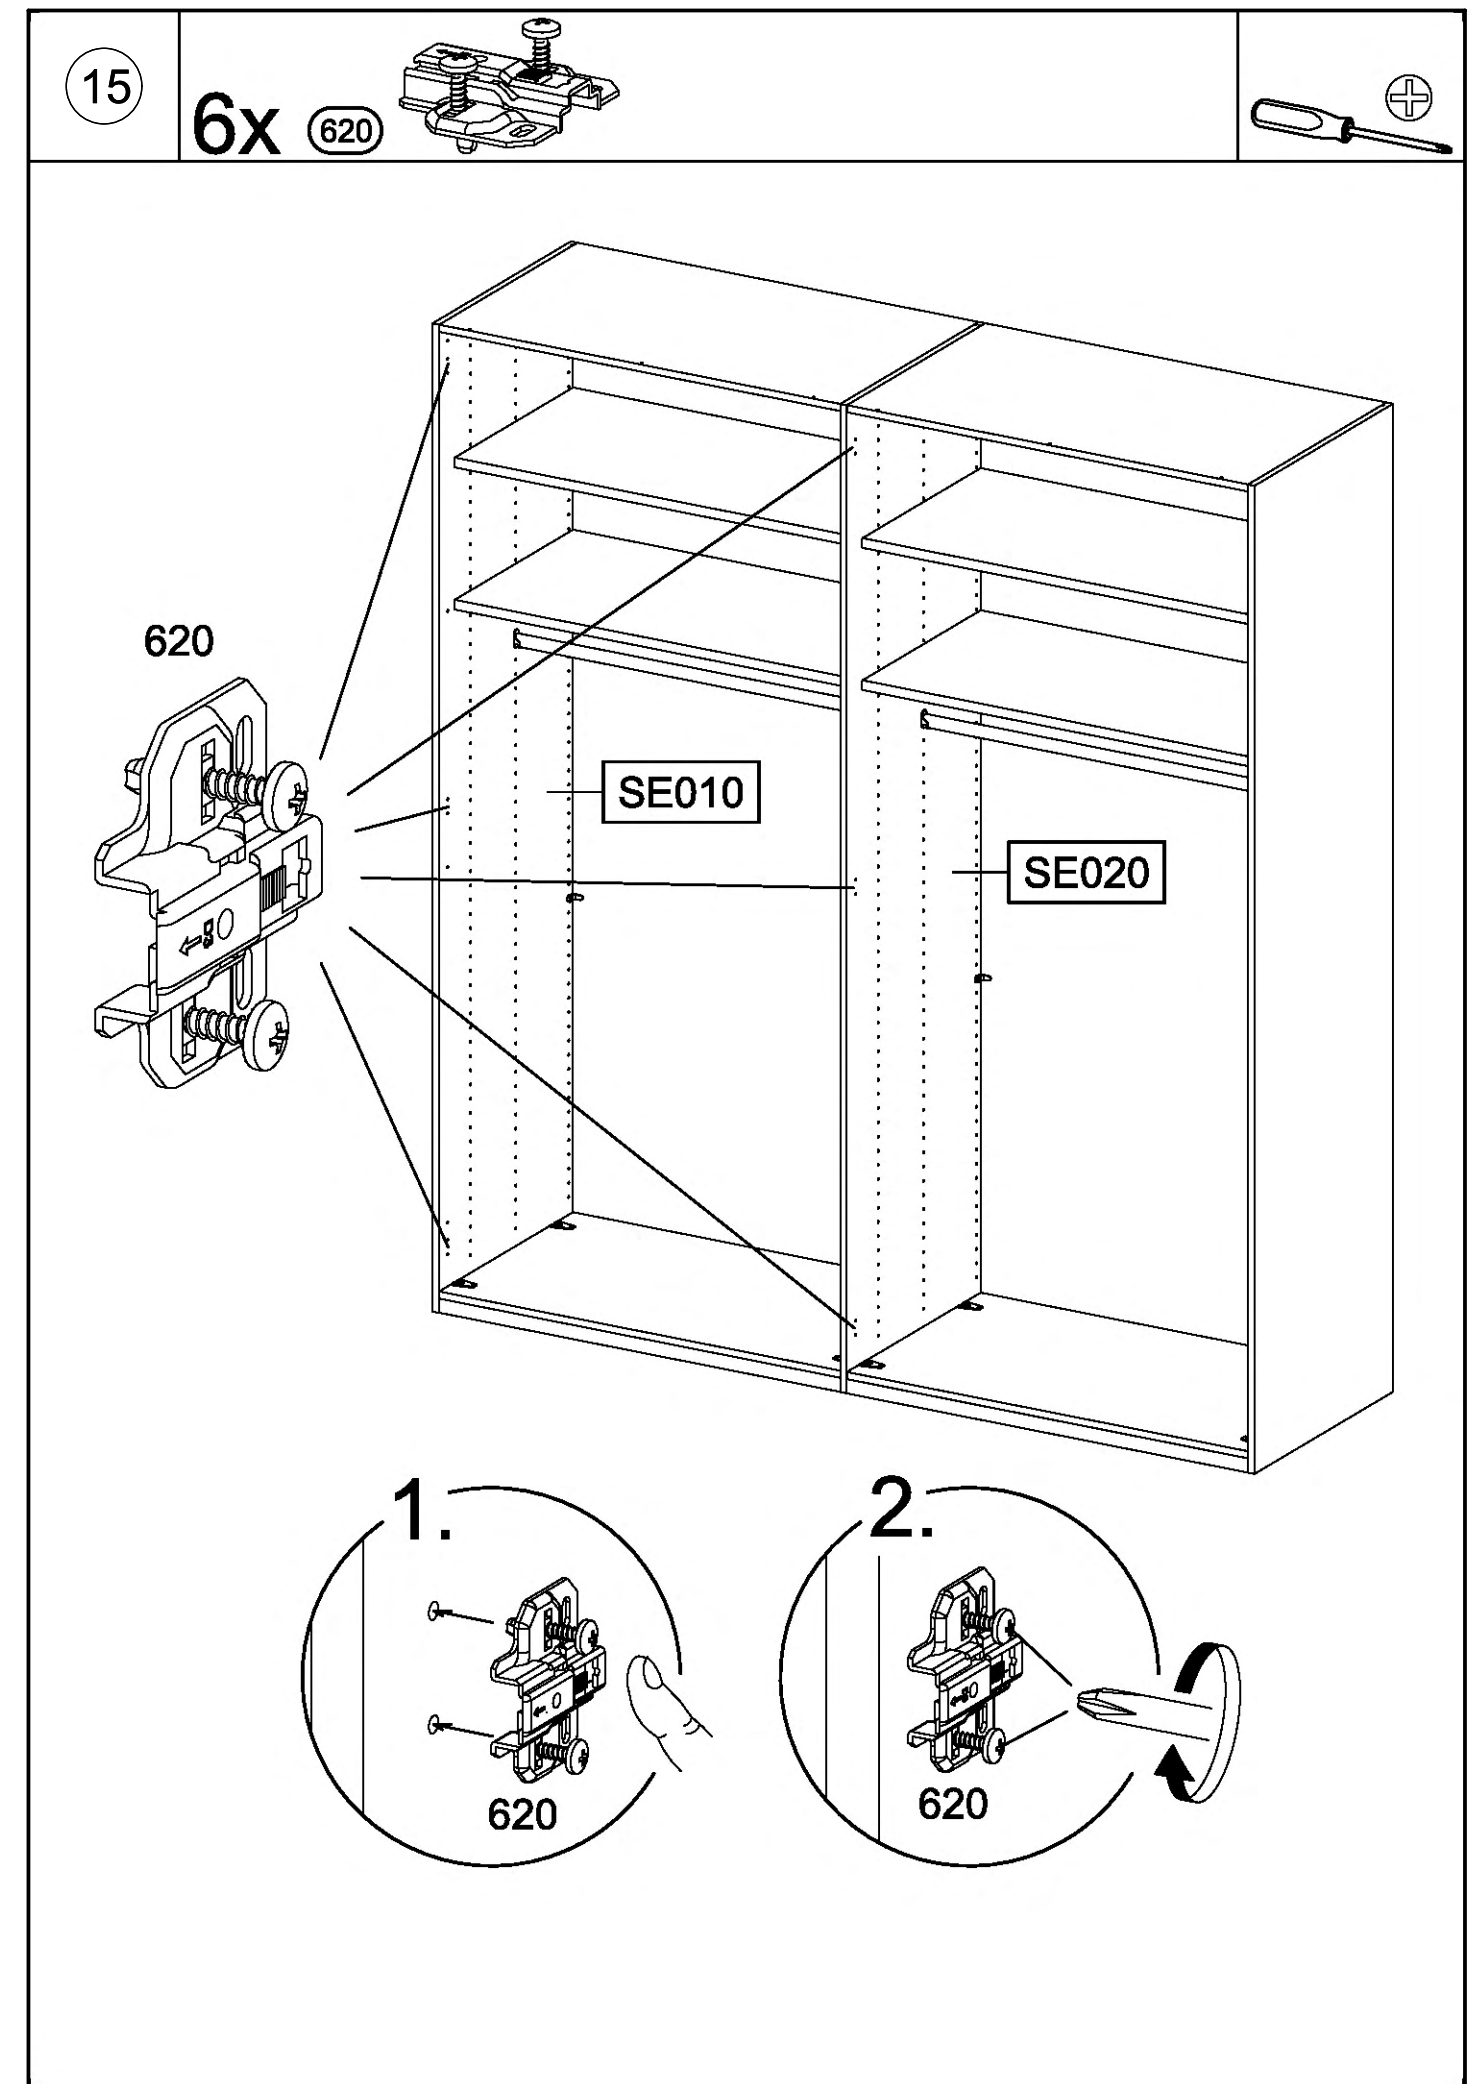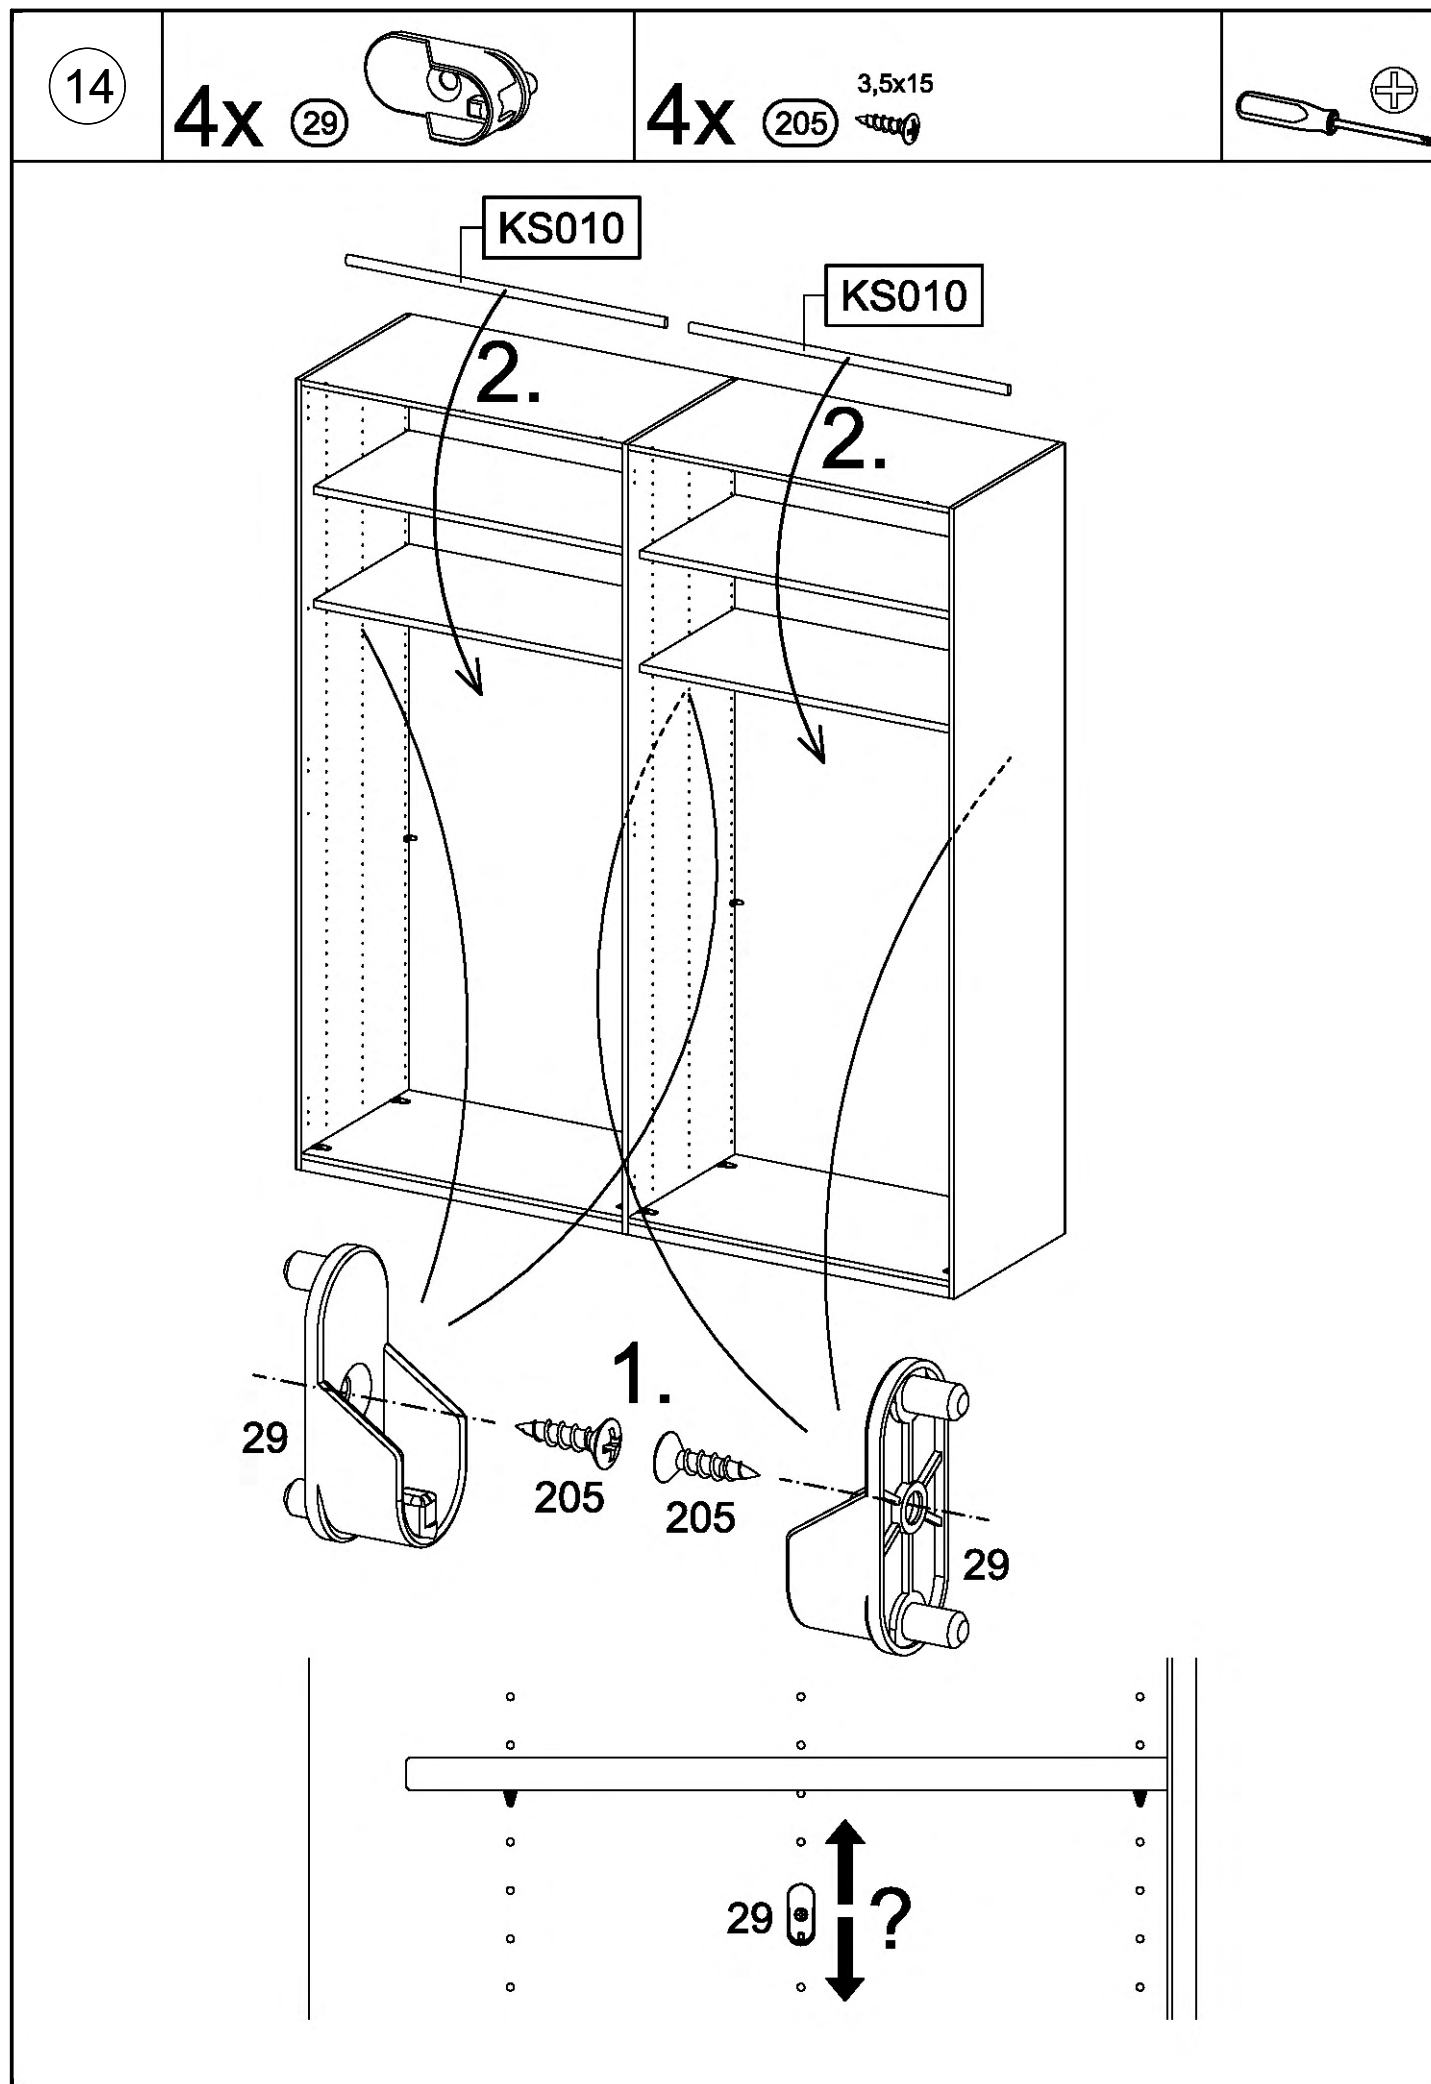






16

6x 620

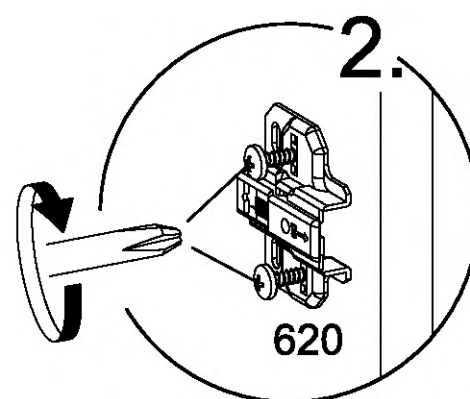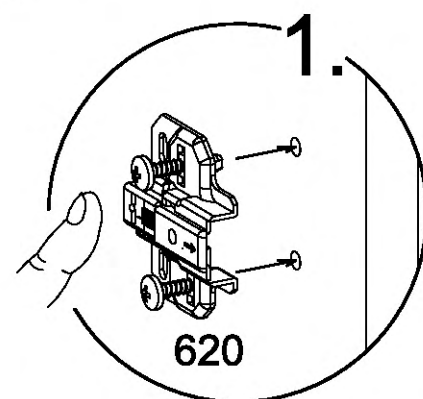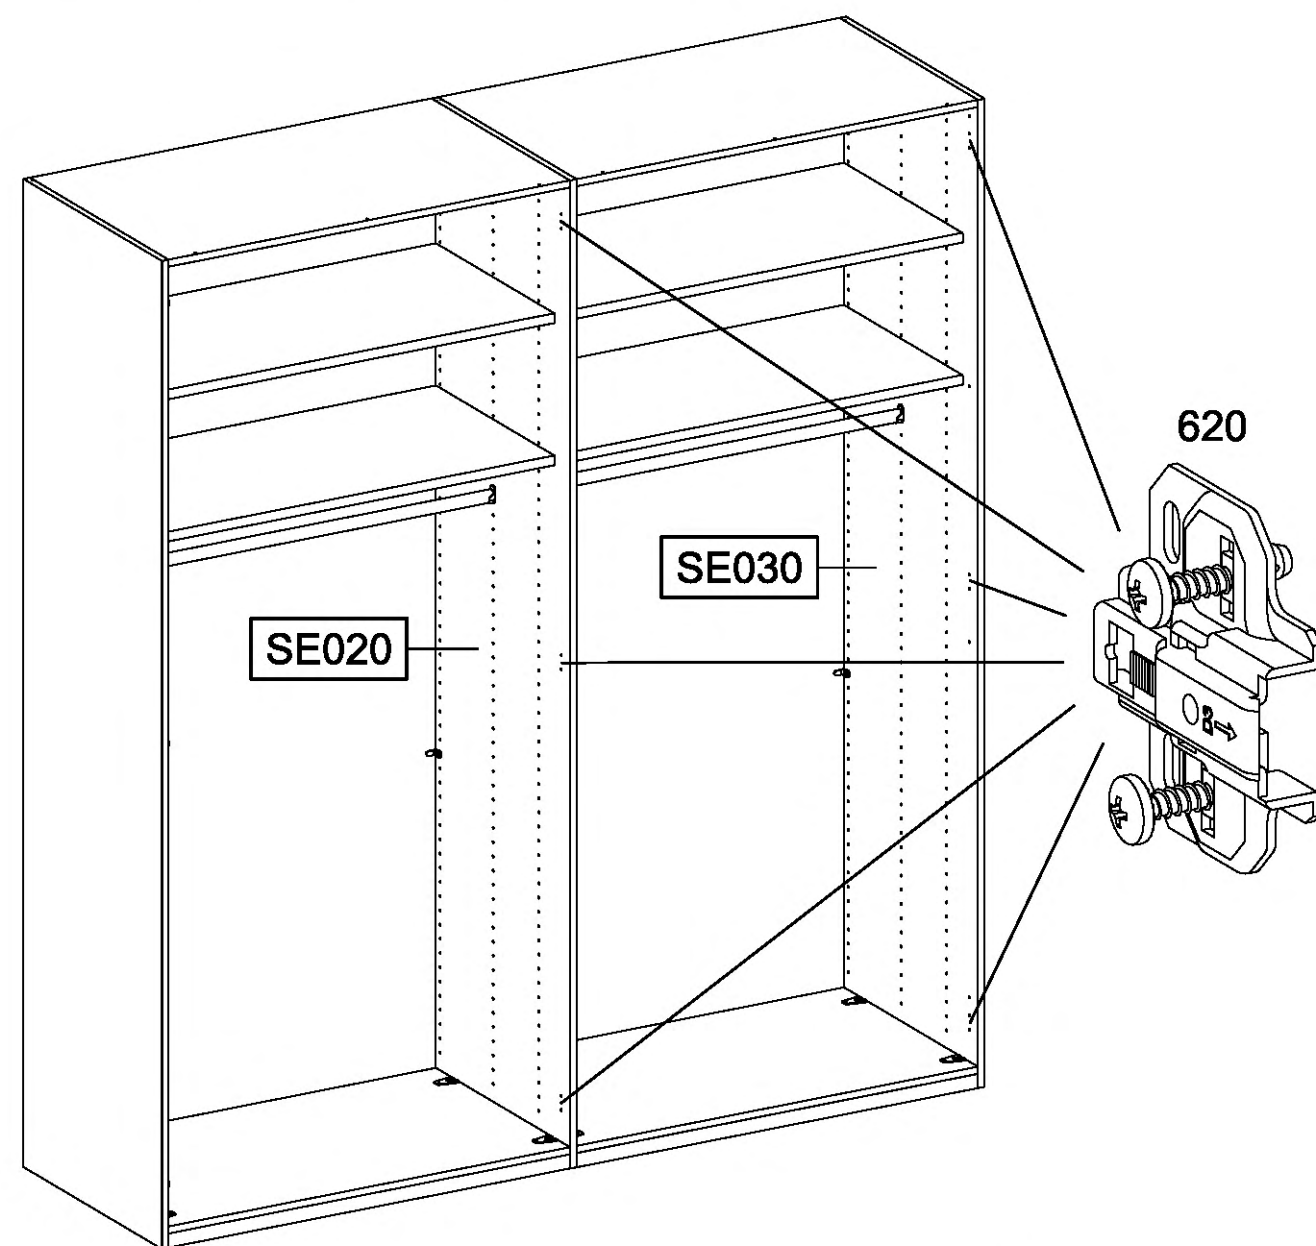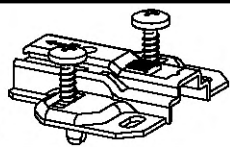


17

12x 565

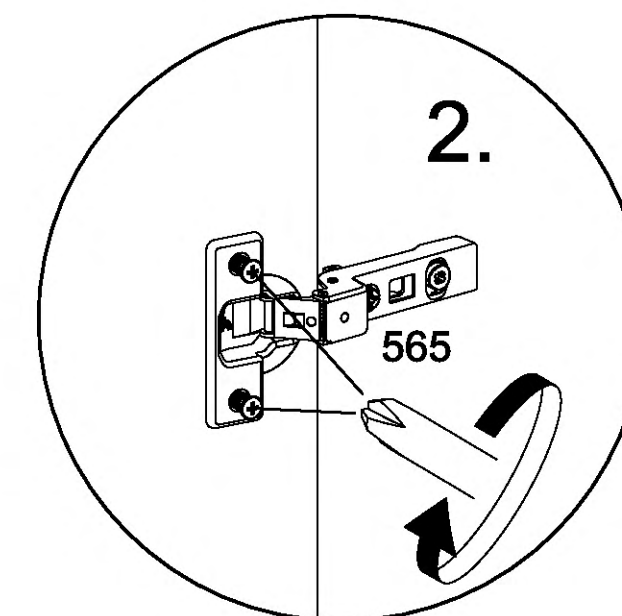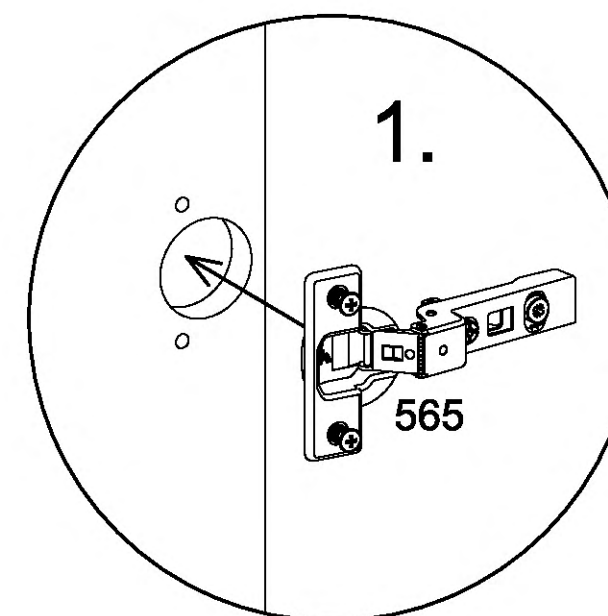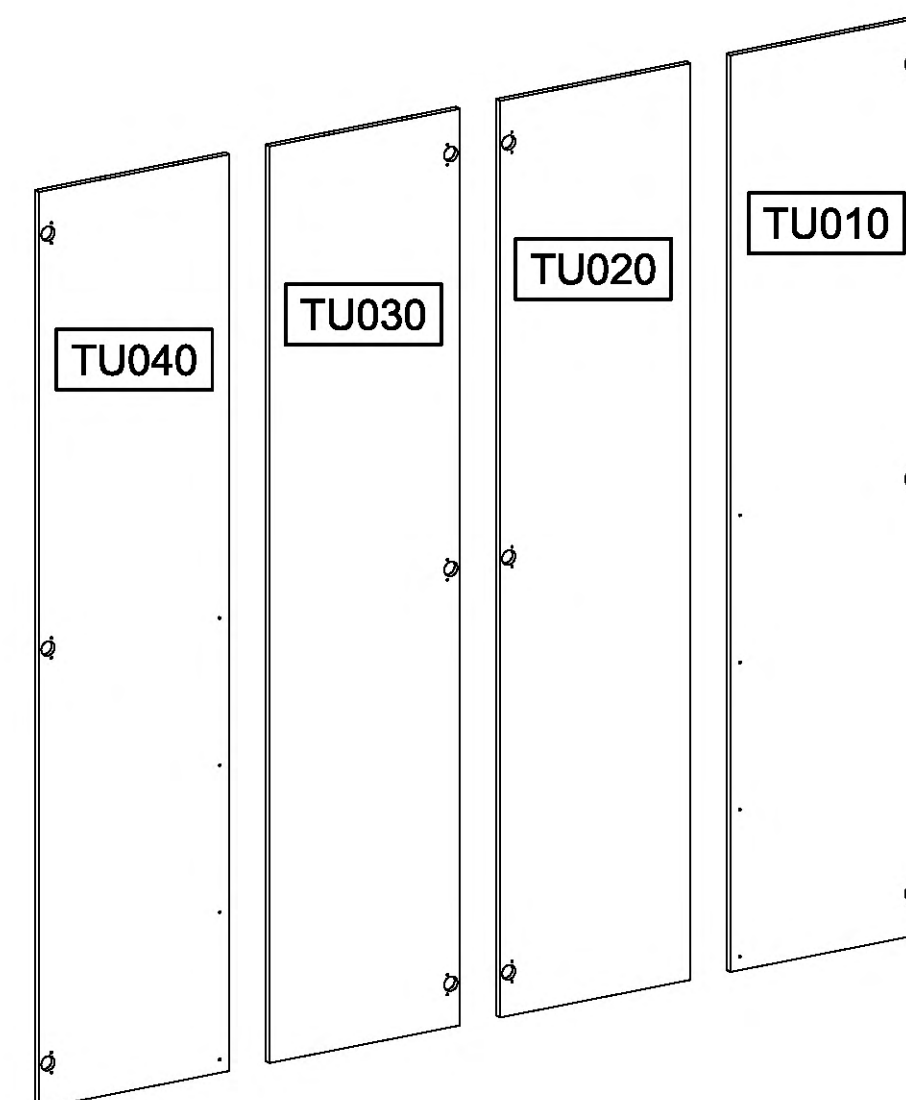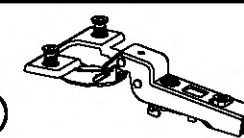




18


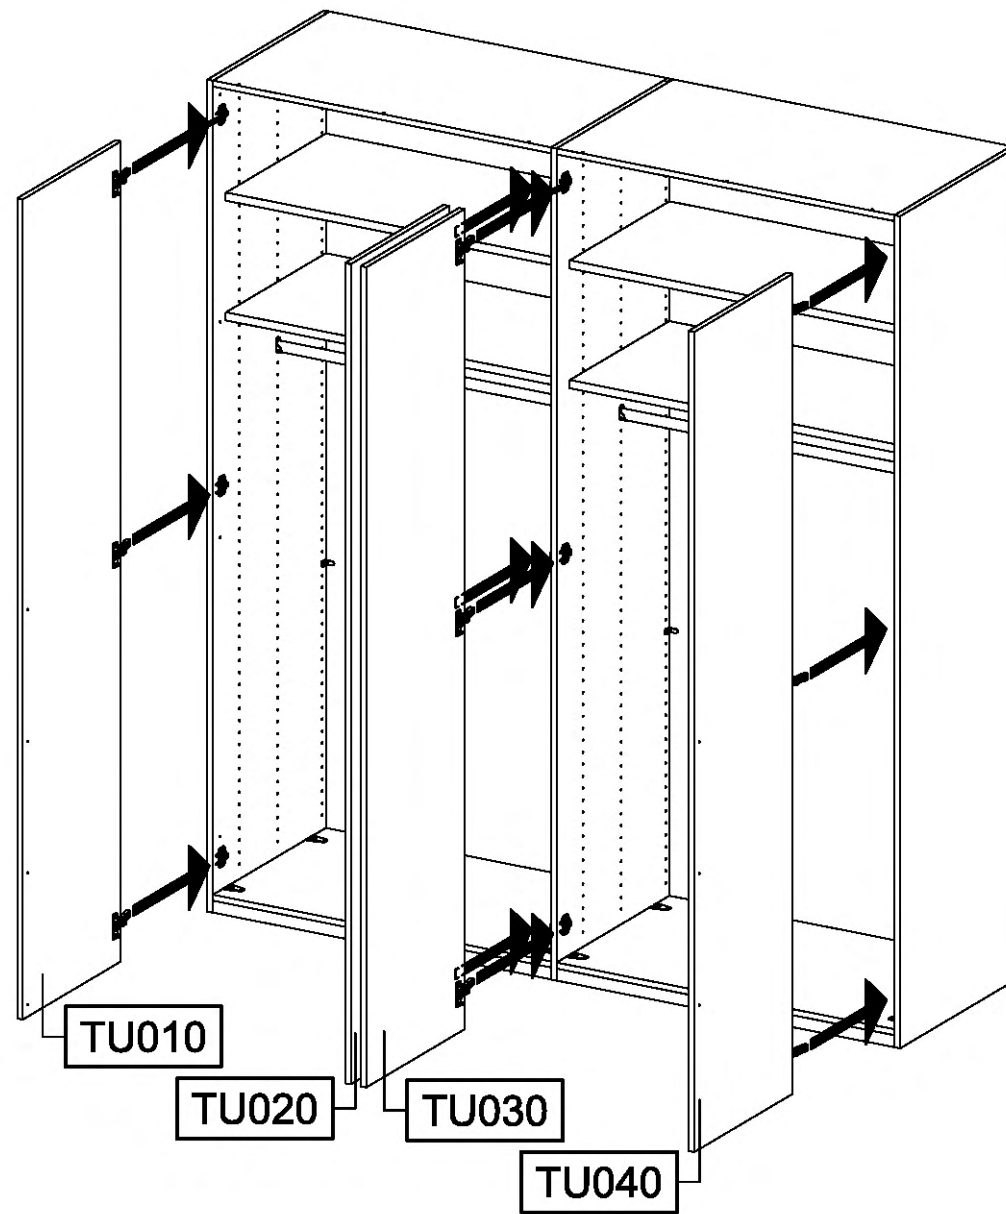


19

0-6x 12 55x16x6,2

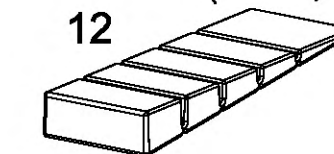

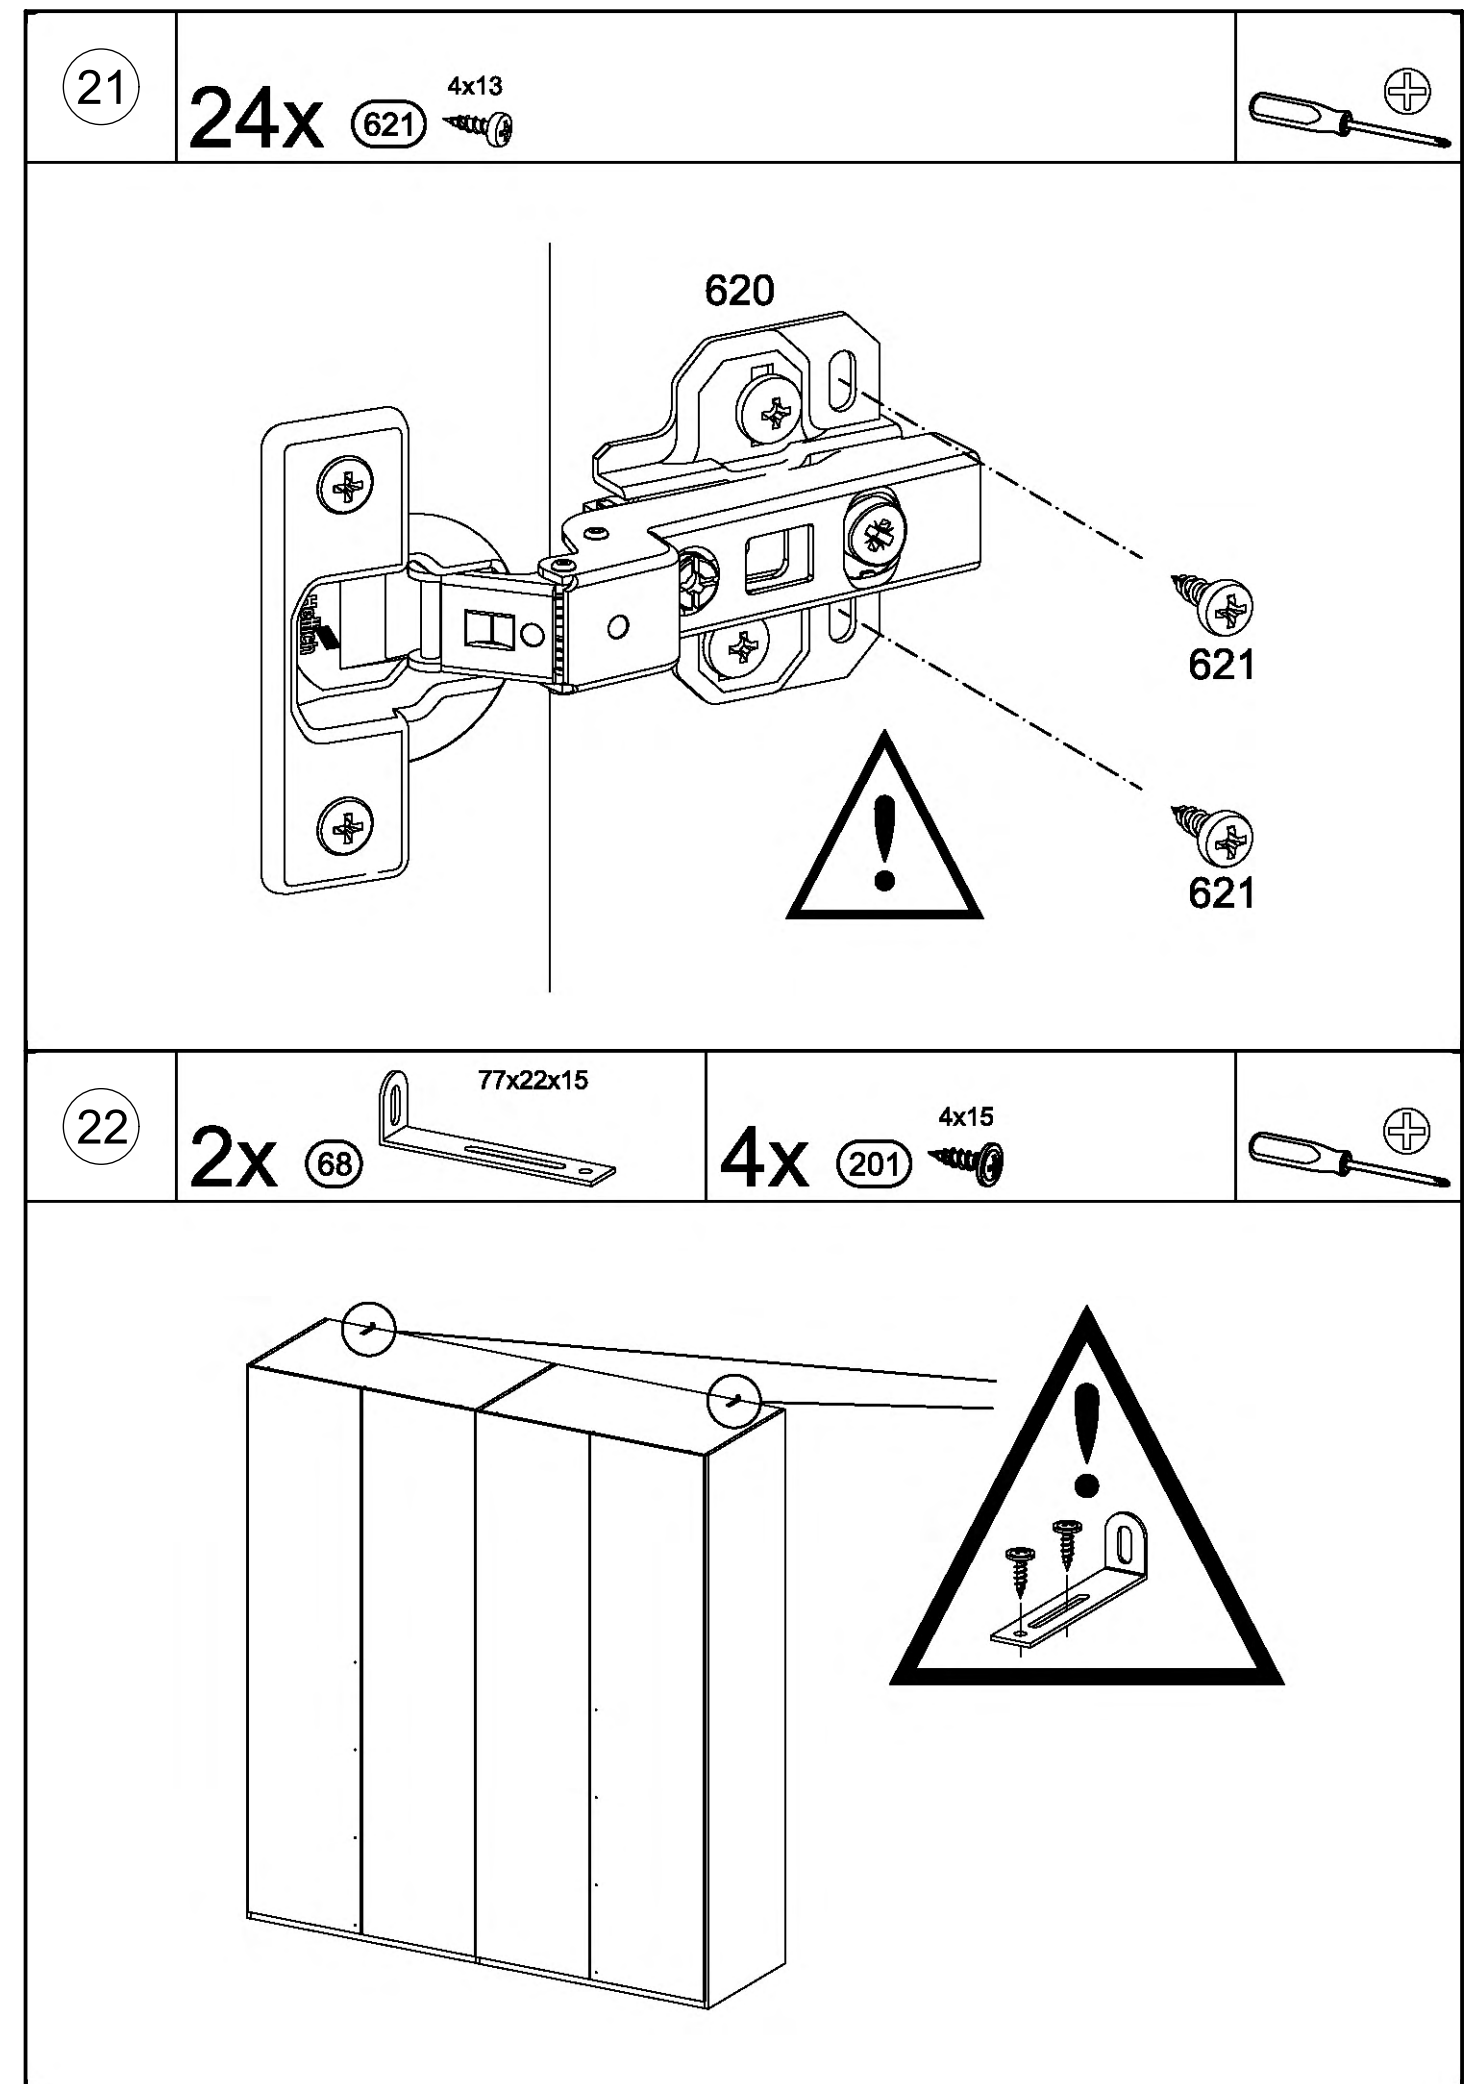
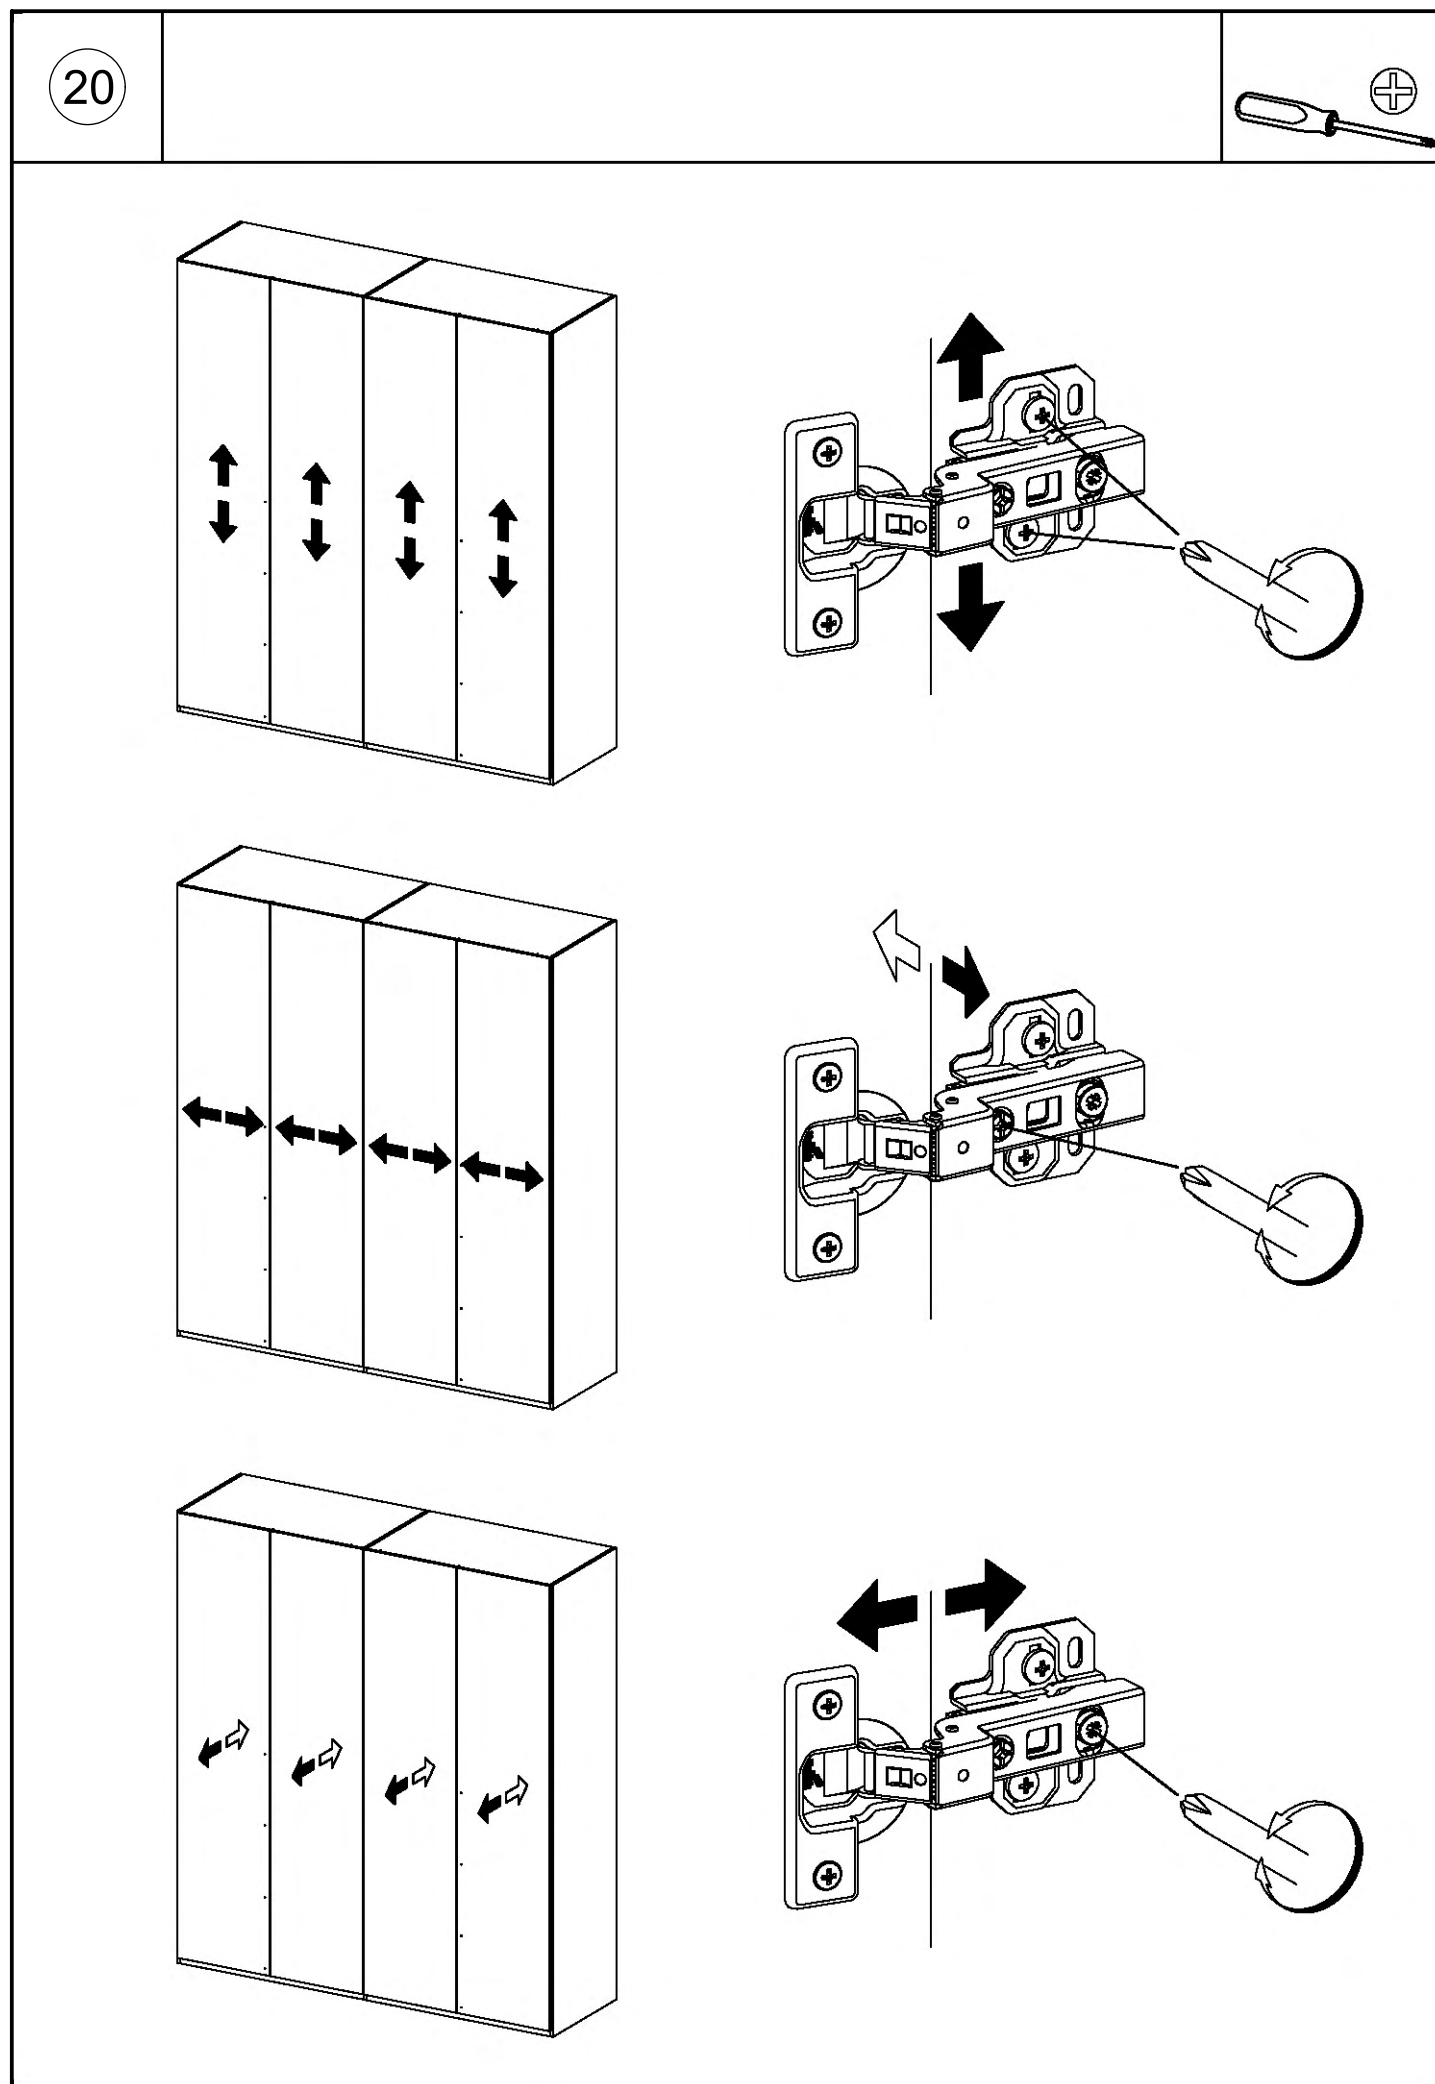


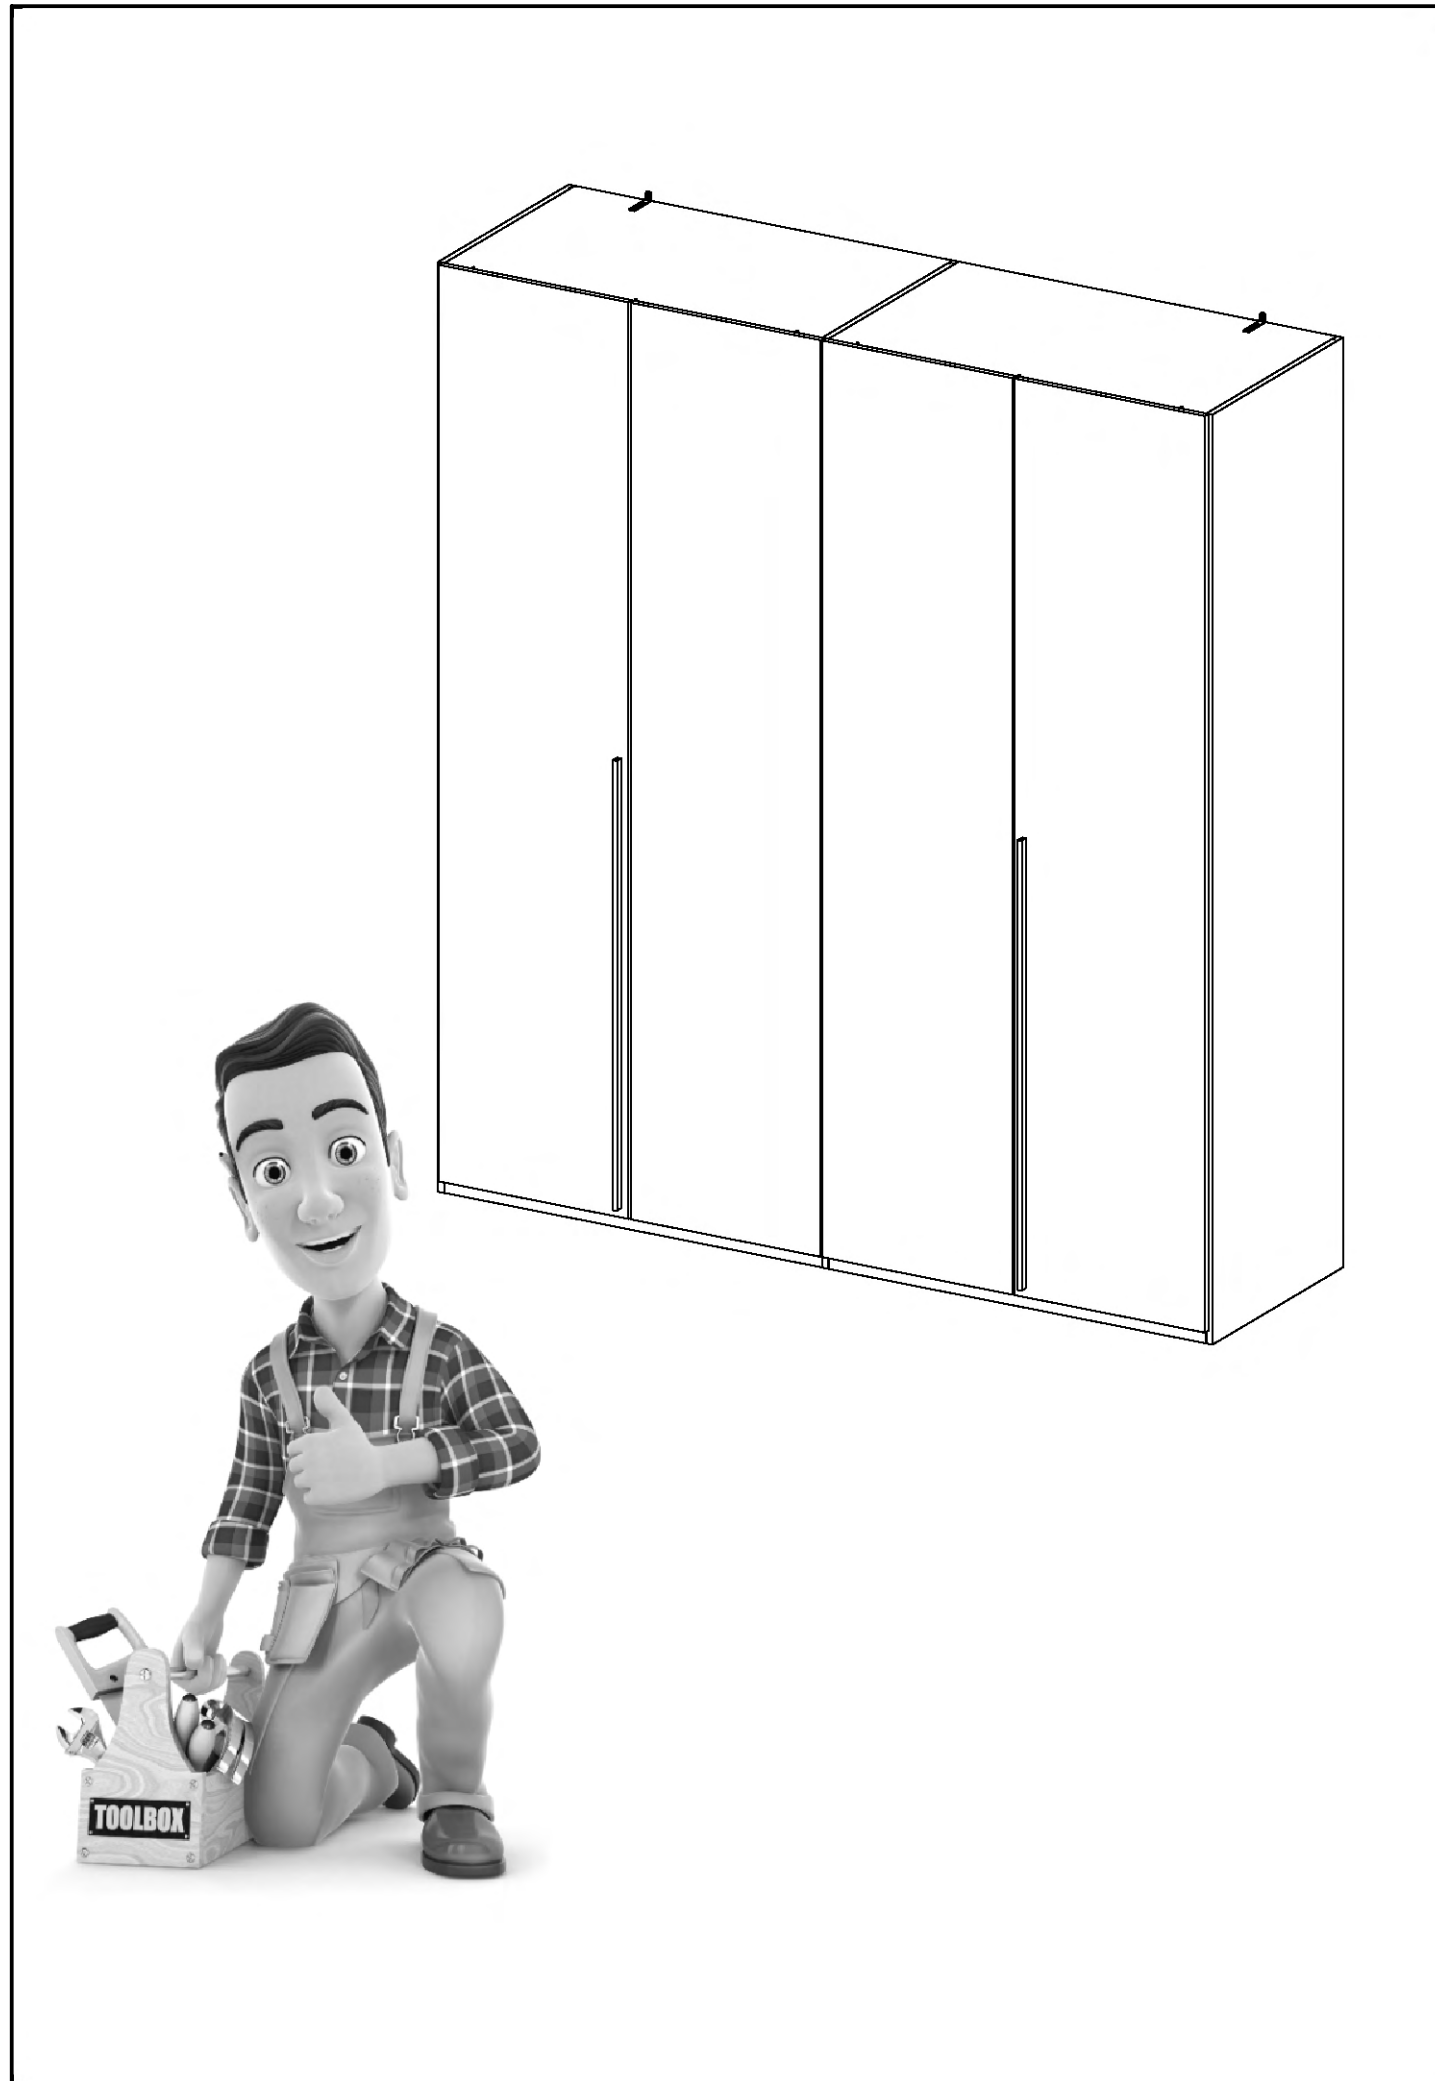

1.

ME190_02


rauch

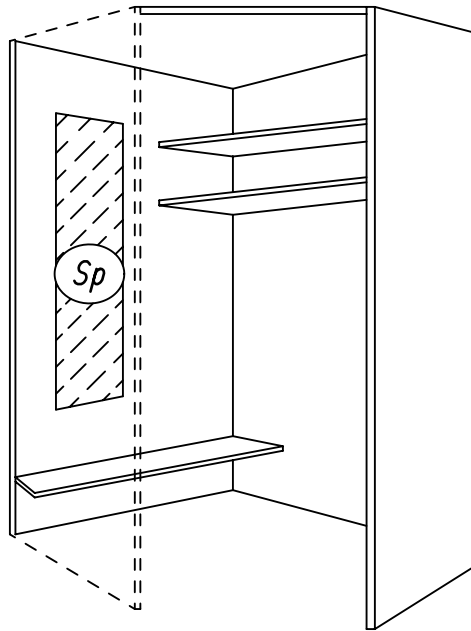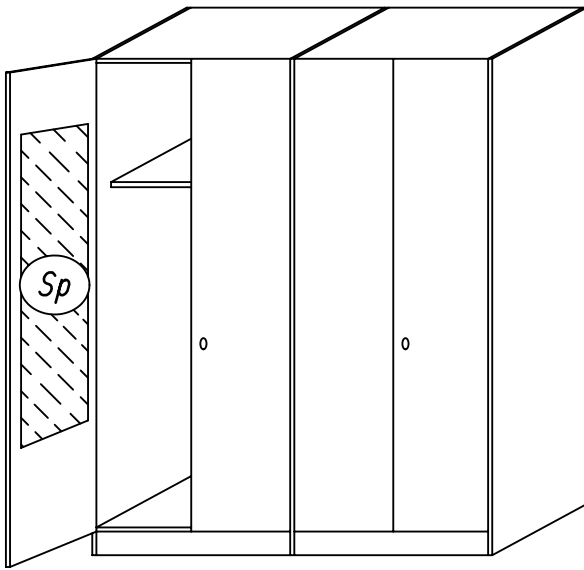

637




492




3x15


1

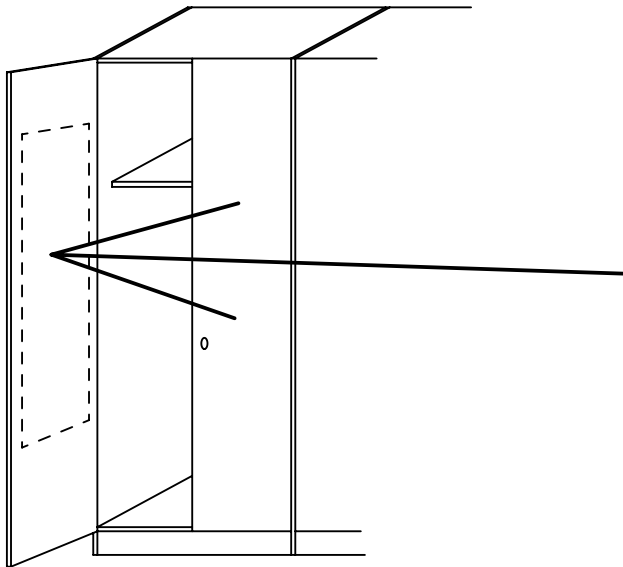



2

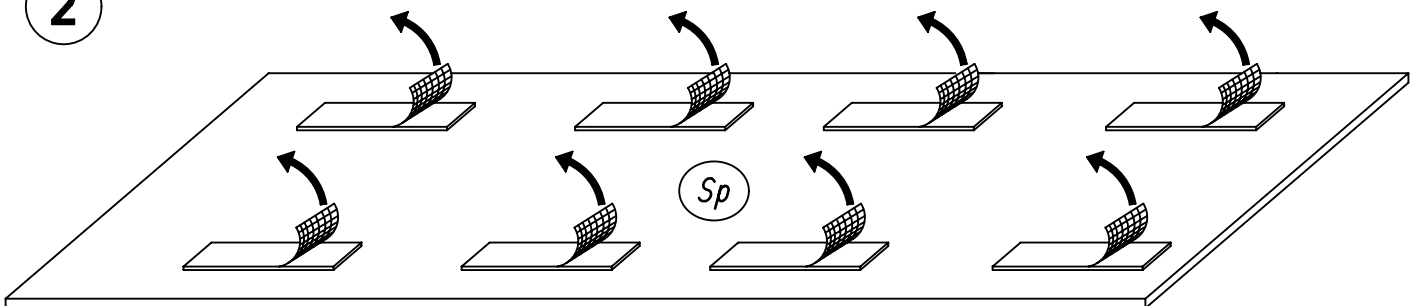

3

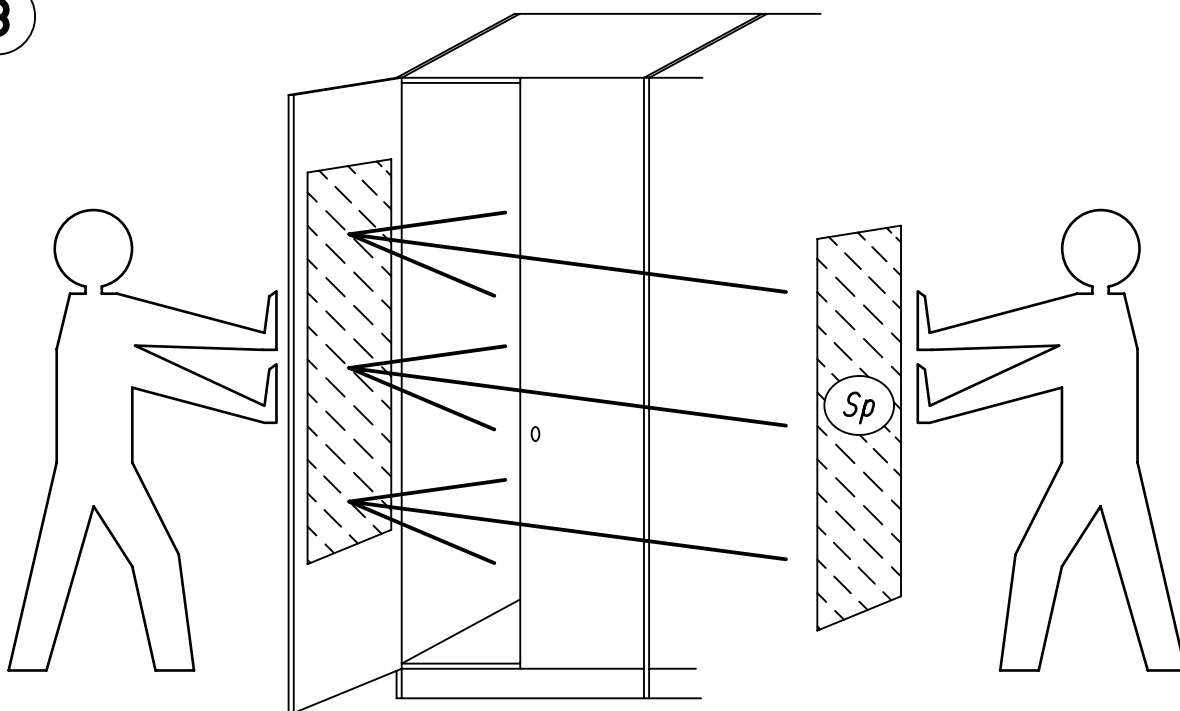

4

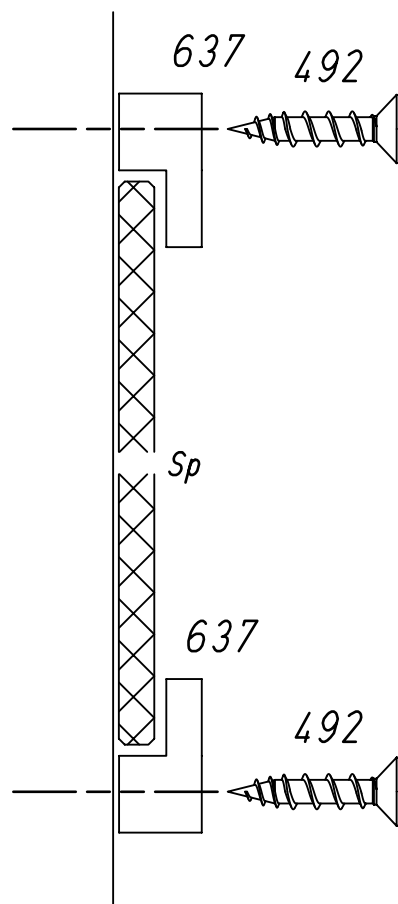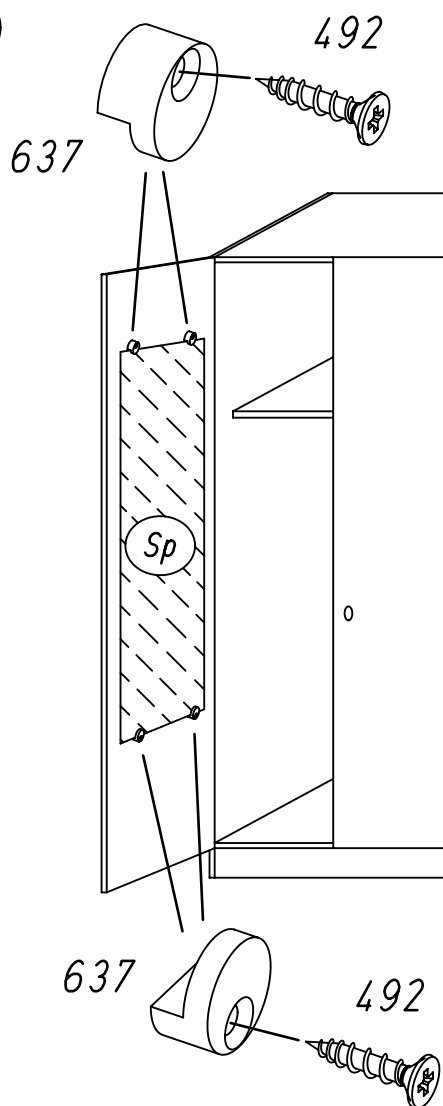

1.

MZ081_01

rauch

Kn

1

1.

Typ I

Typ II

2.



4x

70mm


70mm

2.



2

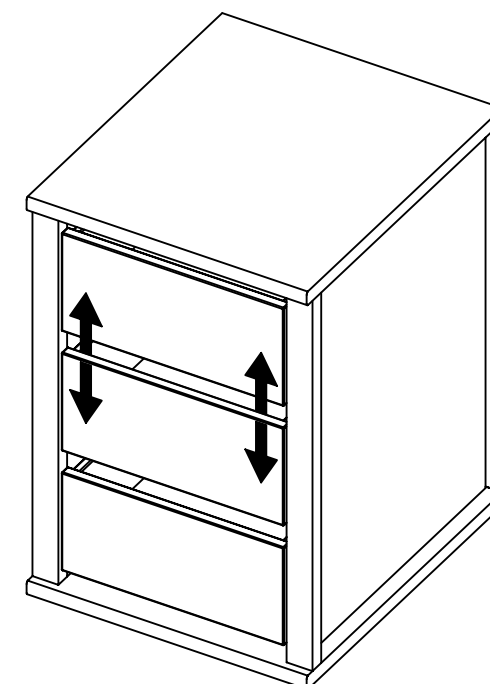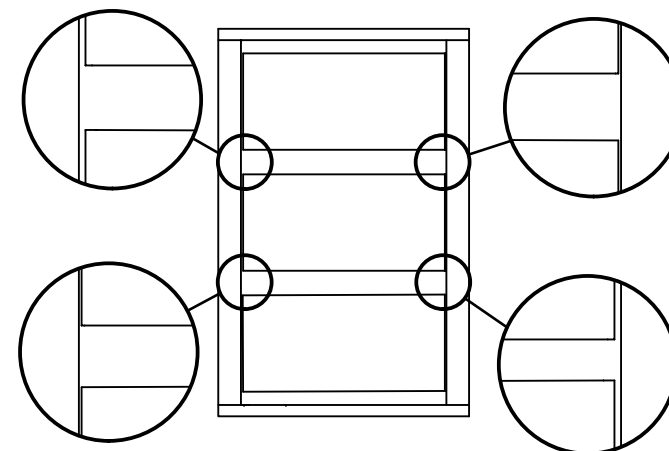

1.

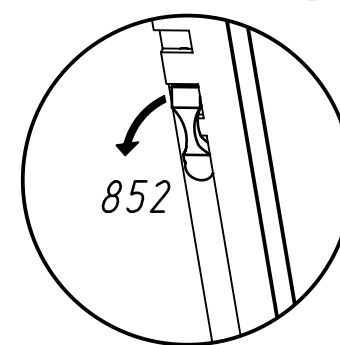


852

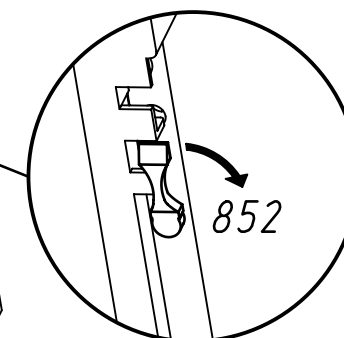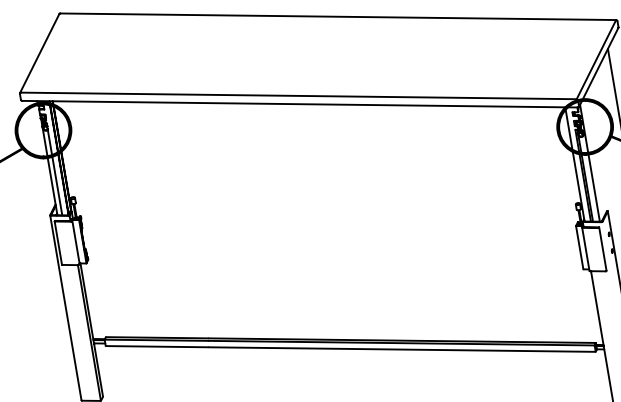


852


2.

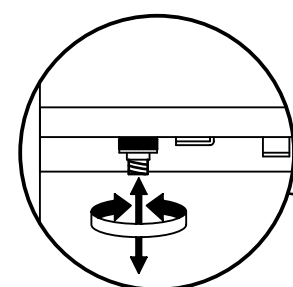



Sk

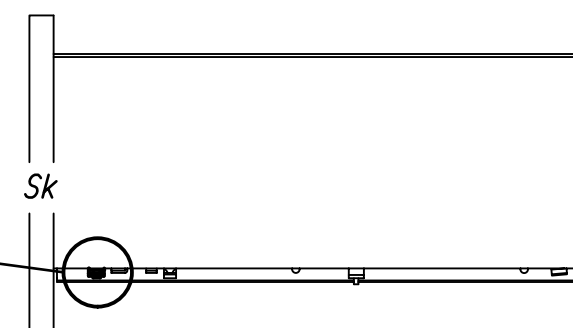

3.



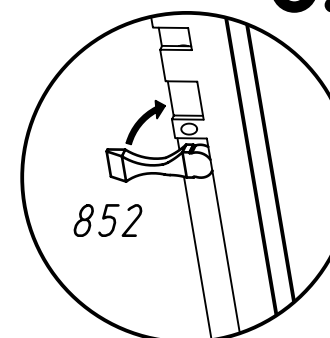


852

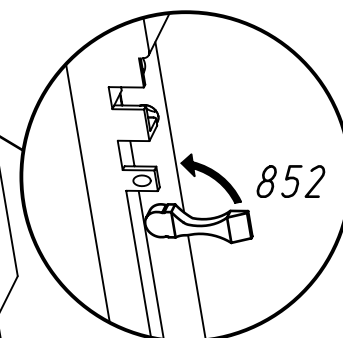
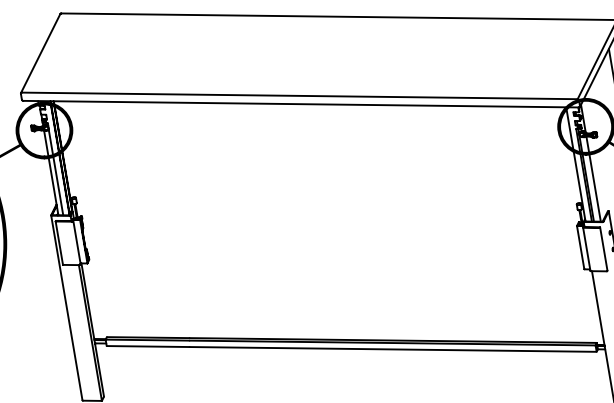


852



1089

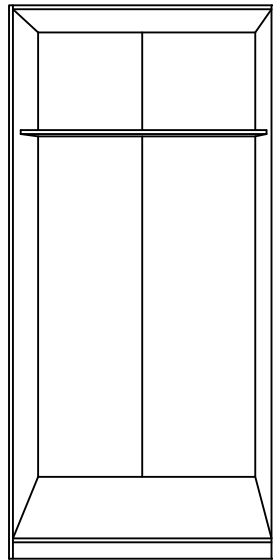



1

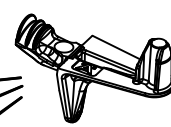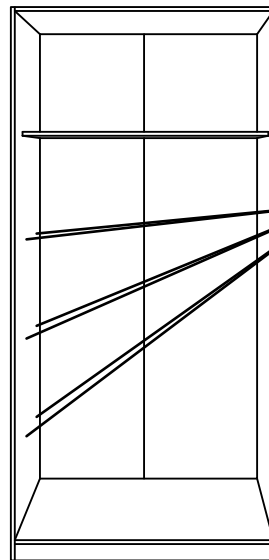


1089

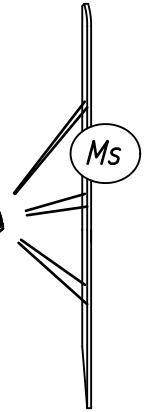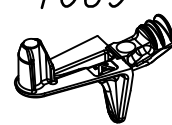

2

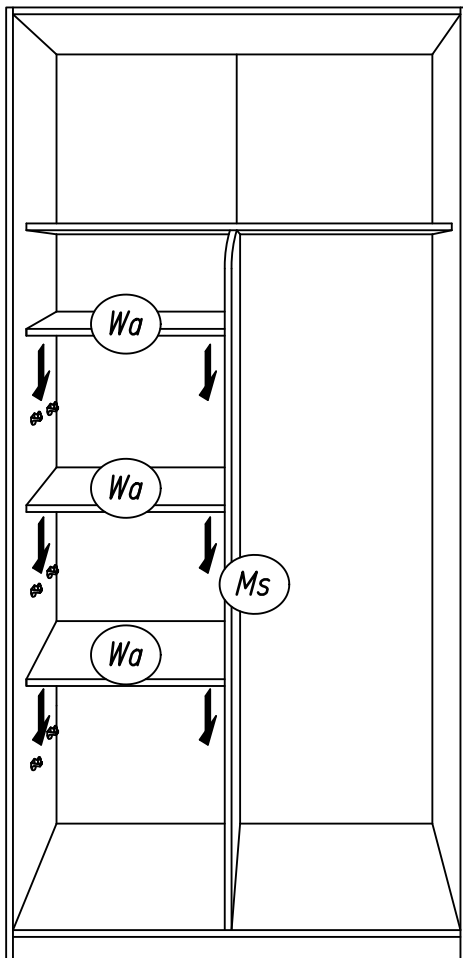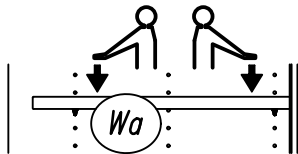



3

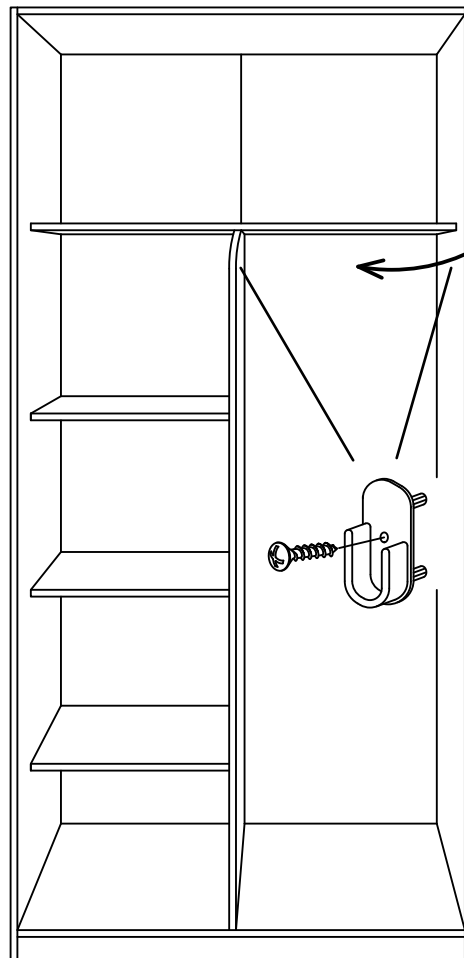


E420

Tlumič závěsu/Tlmič pántov


rauch

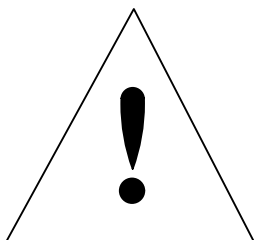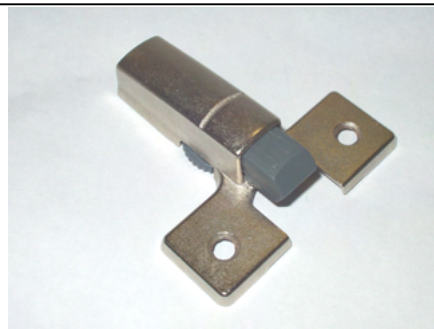




Nevhodné pro :
Nevhodné pre :

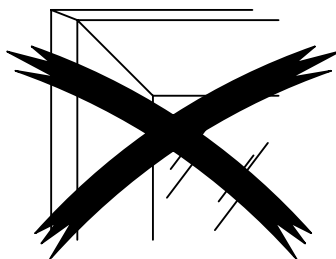

Zarámované dveře/dvere

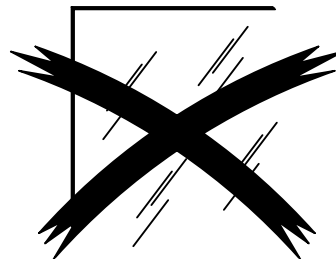


Celoskleněné dveře
Celosklenené dvere

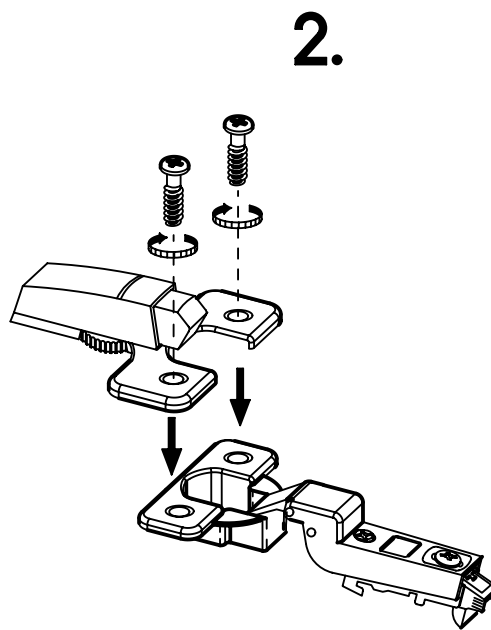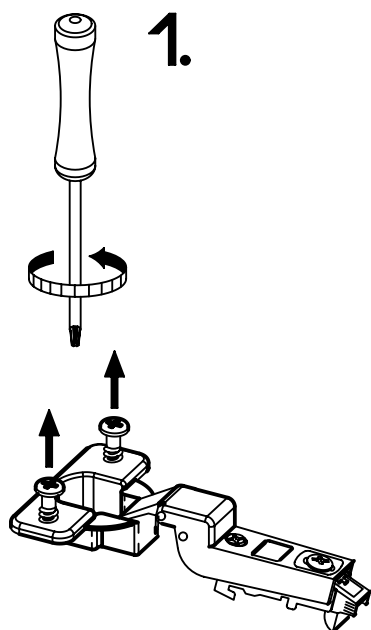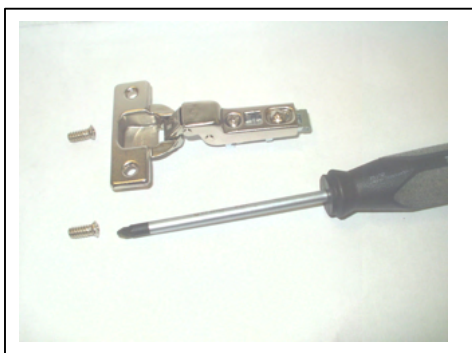



Před připevněním závěsu ke dveřím musí být na závěsu namontován Tlumič závěsu, viz obrázky 1 a 2.

Pred pripevnením pántov ku dverám musí byť na pántoch namontovaný Tlmič pántov, pozri obrázky 1 a 2.

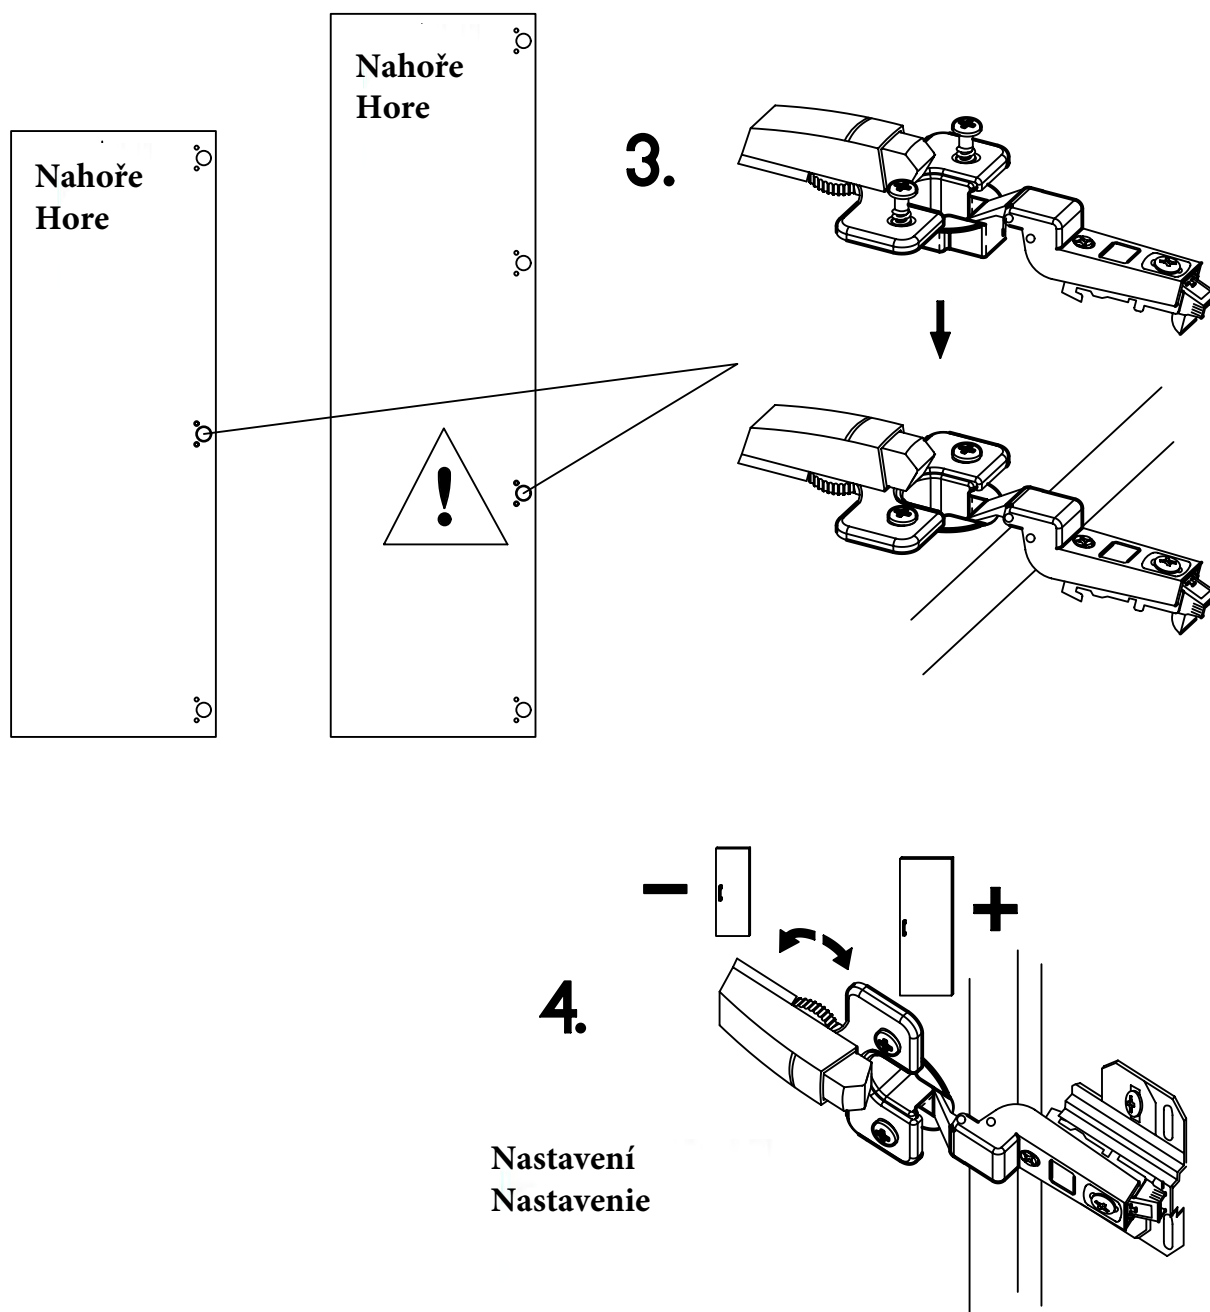

Demontáž

Montáž se provádí v opačném pořadí
Montáž sa vykonáva v opačnom poradí