



**MARONE ELITE
KOMODA 3.3
PLMEL 42**

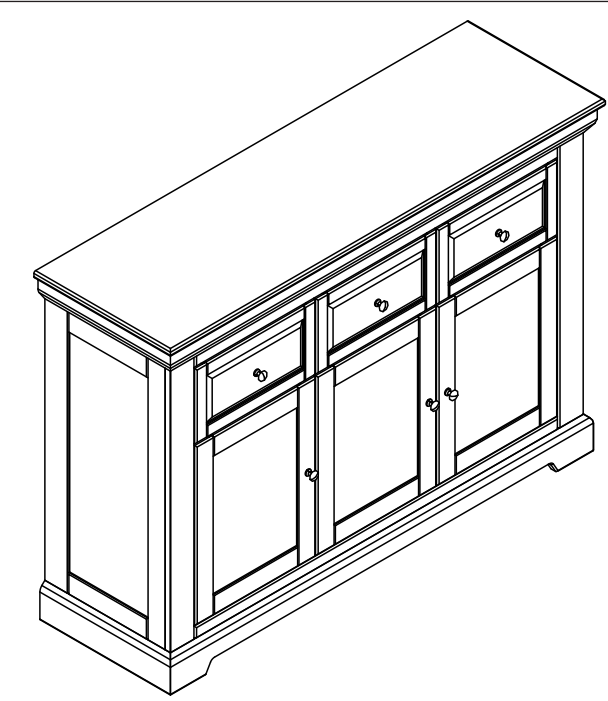


- (D) Montageanleitung
- (GB) Assembly instructions
- (FR) Notice de montage
- (IT) Istruzioni di montaggio
- (NL) Handleiding voor de montage
- (PL) Instrukcja montażu
- (CZ) Montážní návod
- (SK) Návod na montáž
- (HU) Szerelési útmutató
- (RO) Instrucțiuni de montaj
- (TR) Montaj talimatı
- (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ





15.09.2022



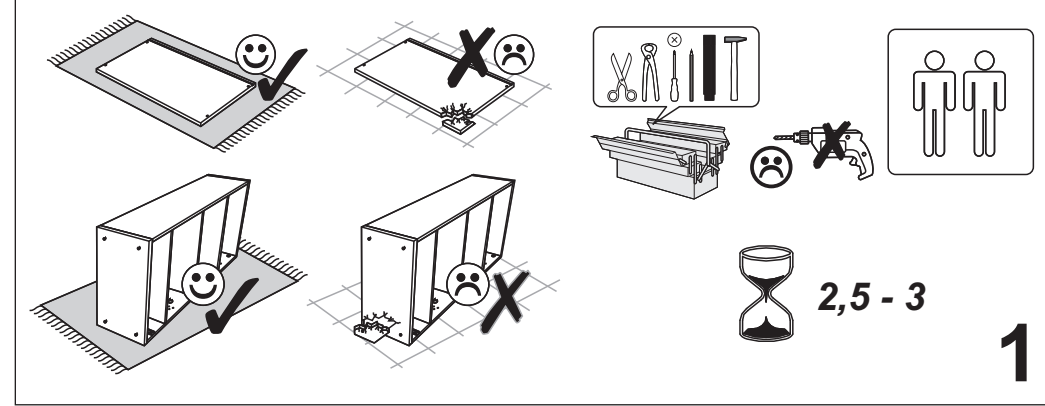


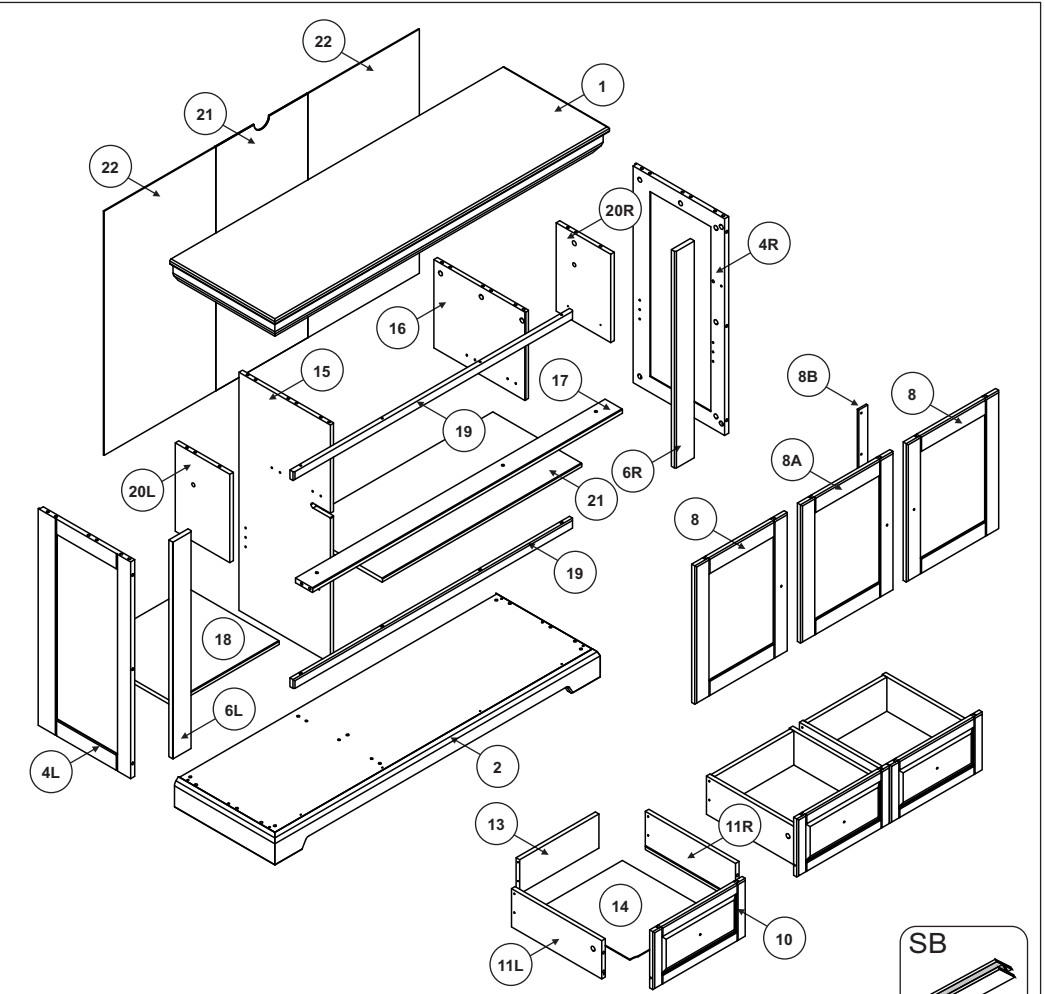


PA x2	RA x2	YB 1x20 x60	ZF x3	YA 7x50 x6	ZD 18mm x10	G L=350 x3	H 6x10,5 x12
XE x1	MA x10	W 4mm x1	B 34mm x34	C 15x10 x34	ZA 12mm x8	YF M4x25 x6	NT 3,5x40 x20
O x6	P x4	R x4	T x3	A 8x35 x32	NA 3,5x16 x12	Y 5mm x8	NF 3x16 x4

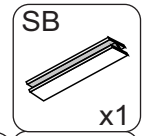



2

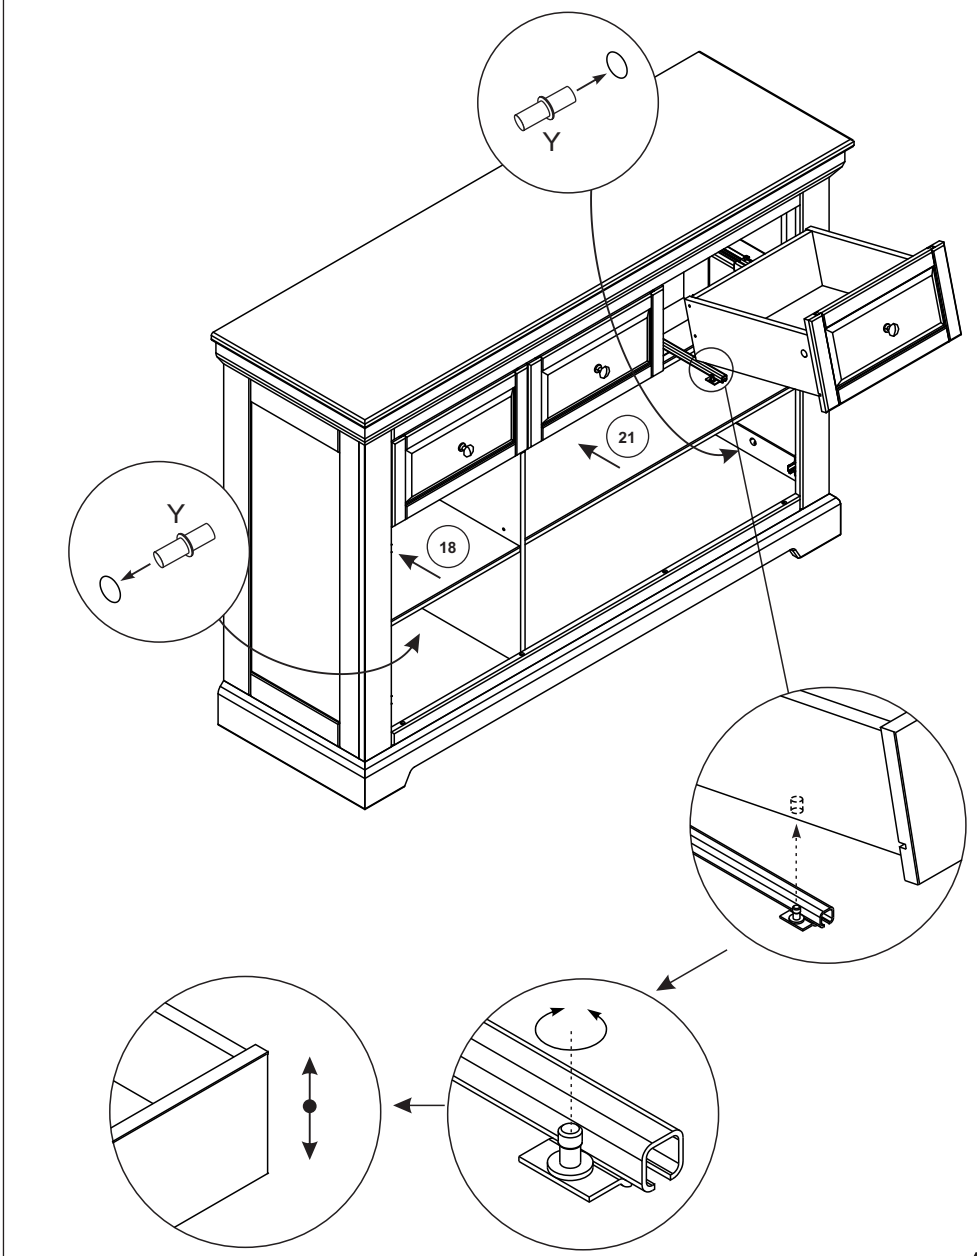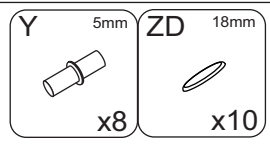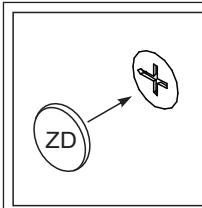


18

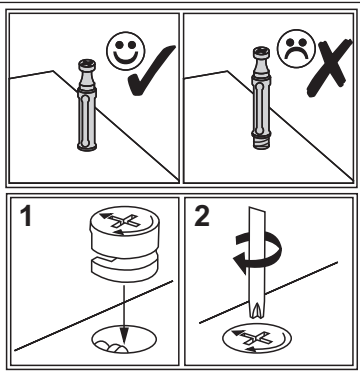

- NT 3,5x40 x12
- YB 1x20 x15
- O x3
- B 34mm x6
- C 15x10 x6
- YF M4x25 x3
- A 8x35 x6

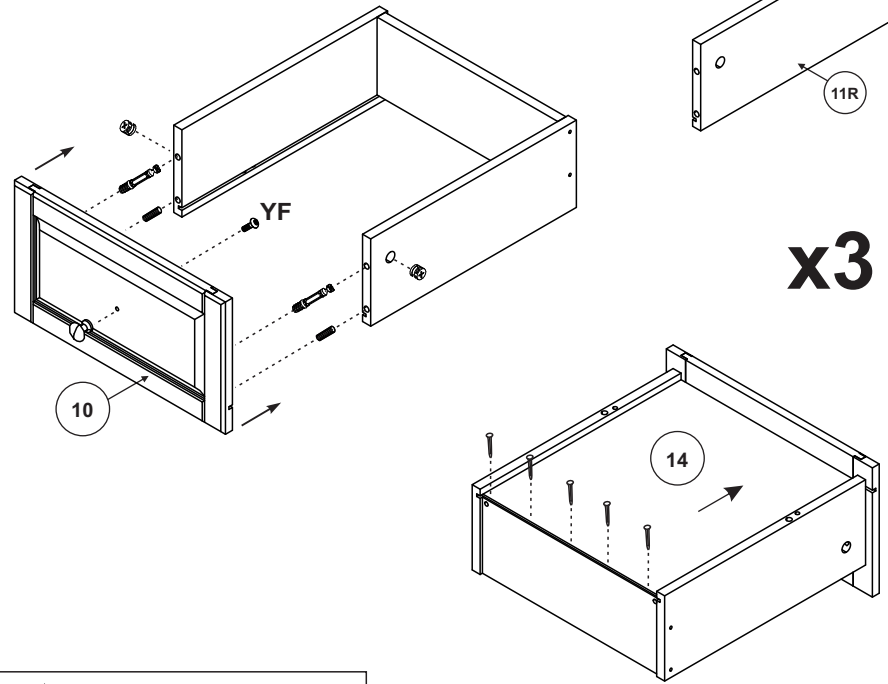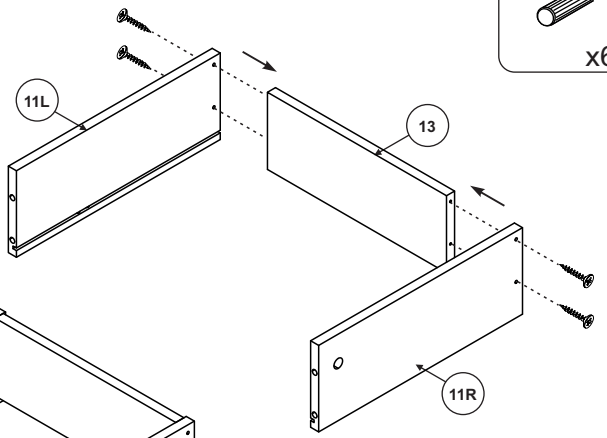




x3

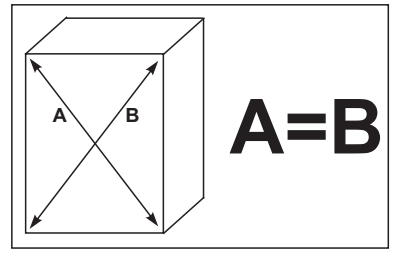


17

3

- B 34mm x6
- R x4

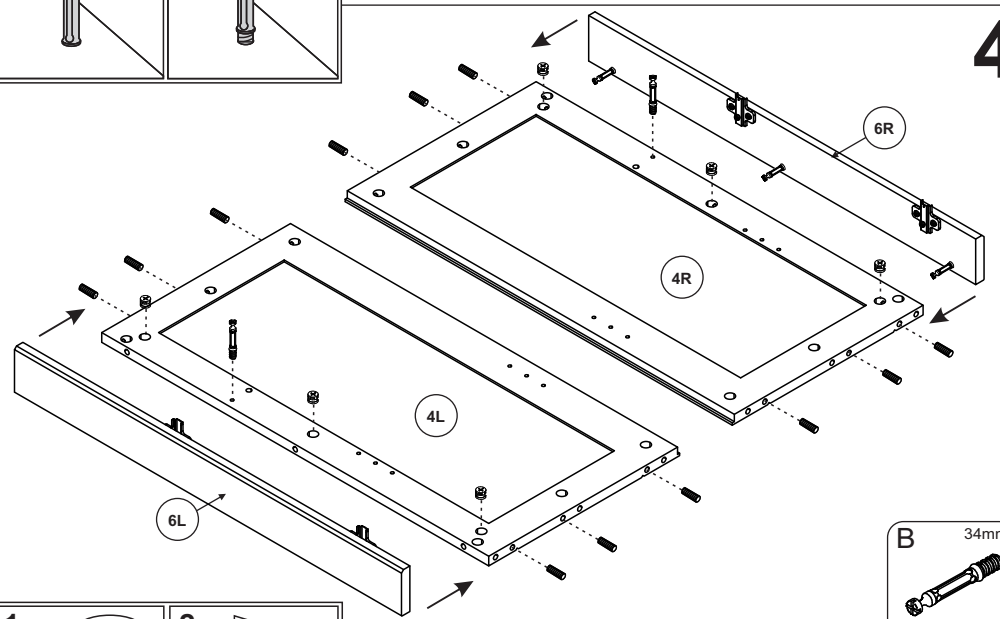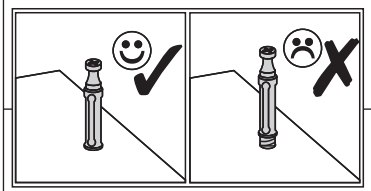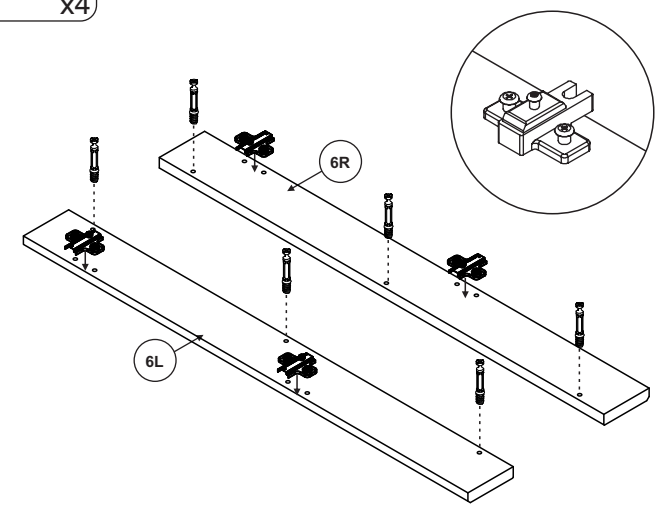



4

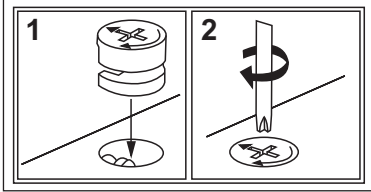



- B 34mm x2
- C 15x10 x6
- A 8x35 x12

- NT 3,5x40 x8
- ZA 12mm x8

13

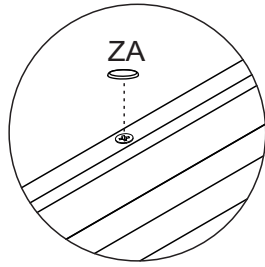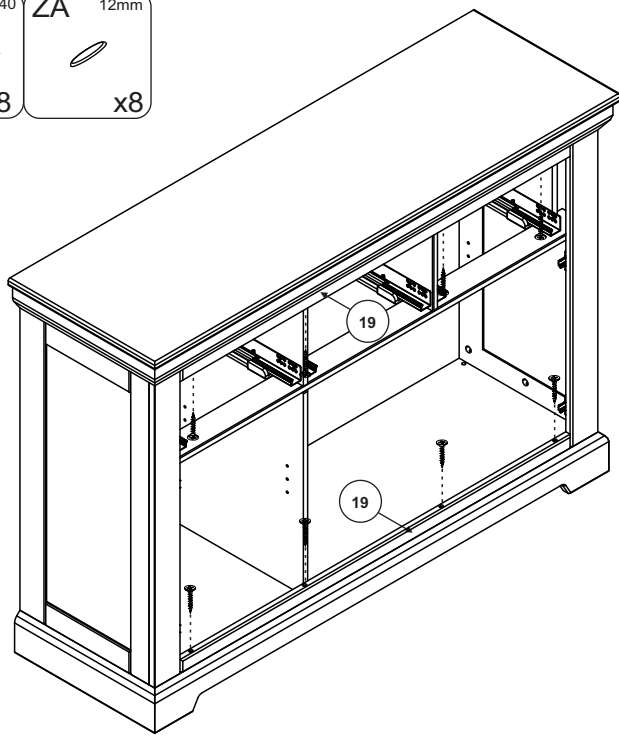






- G L=350 x1
- H 6x10,5 x4

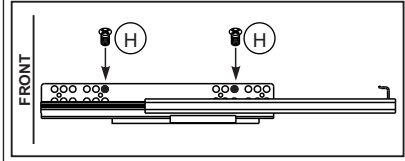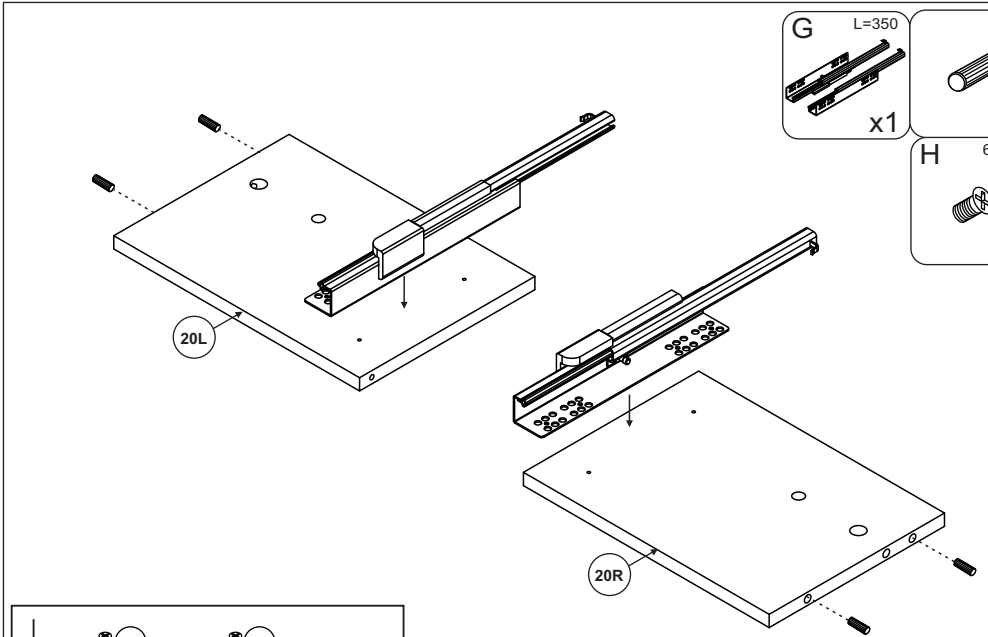


7

- MA x10
- SB x1
- YB 1x20 x45

14

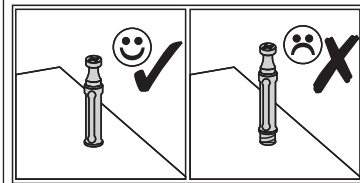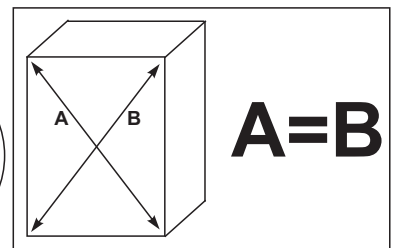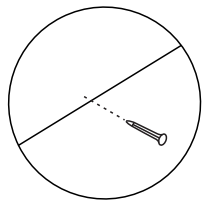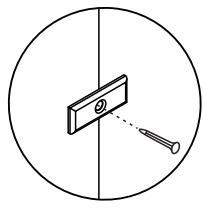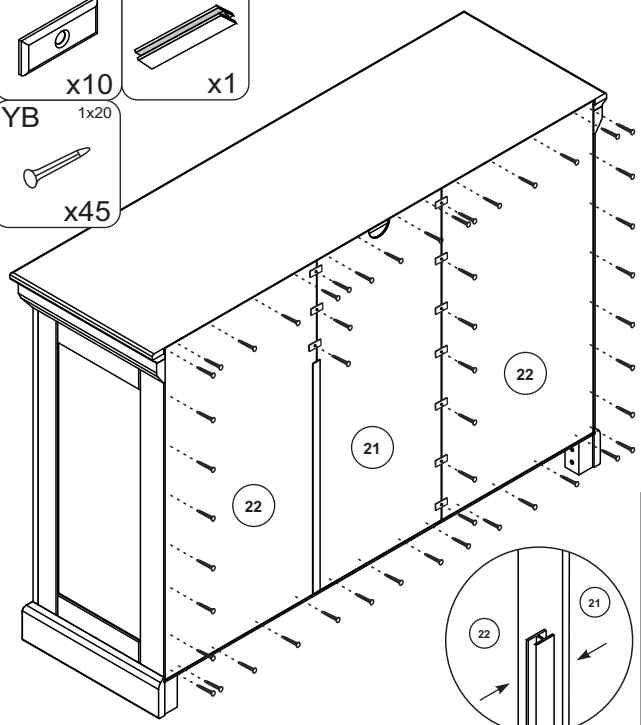

- A 8x35 x2
- B 34mm x20

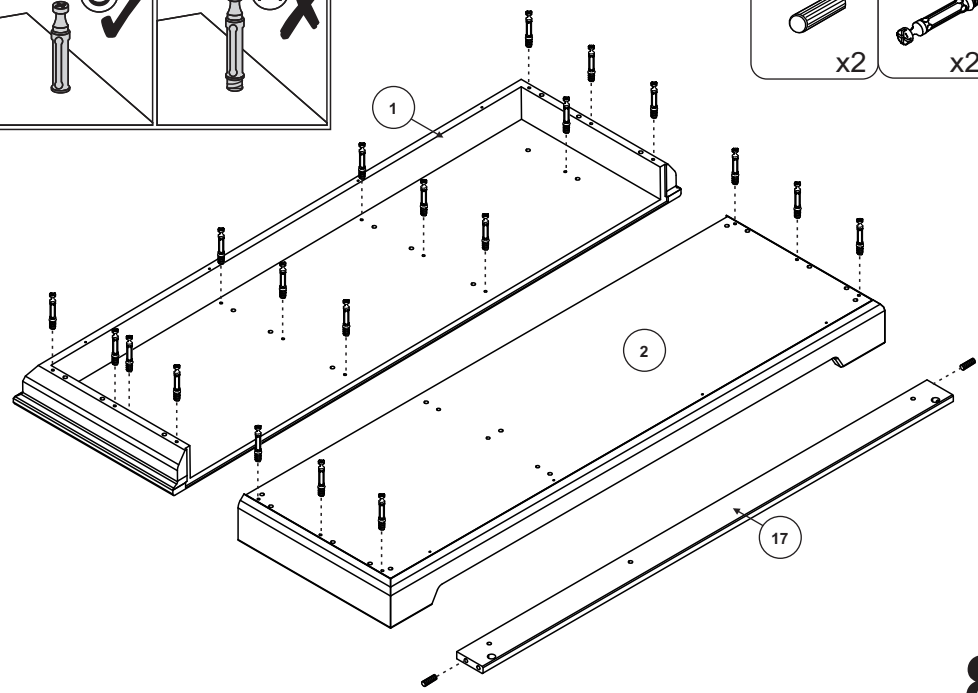

8

