




1

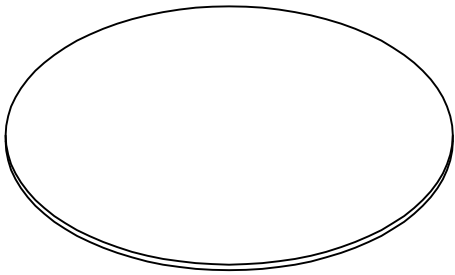



2

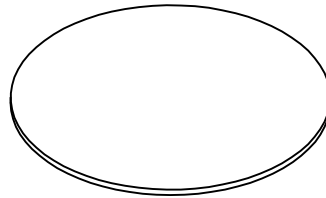


3

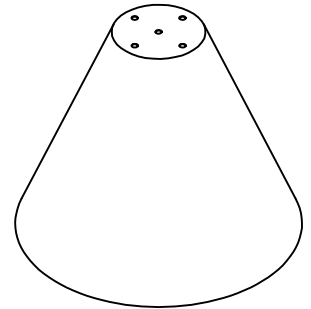





4

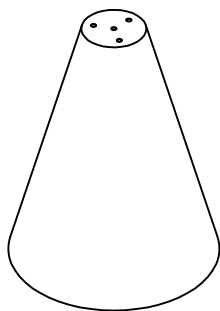

1	1X	1/2	Ø700
2	1X	1/2	Ø500
3	1X	2/2	Height 375
4	1X	2/2	Height 435









2/2

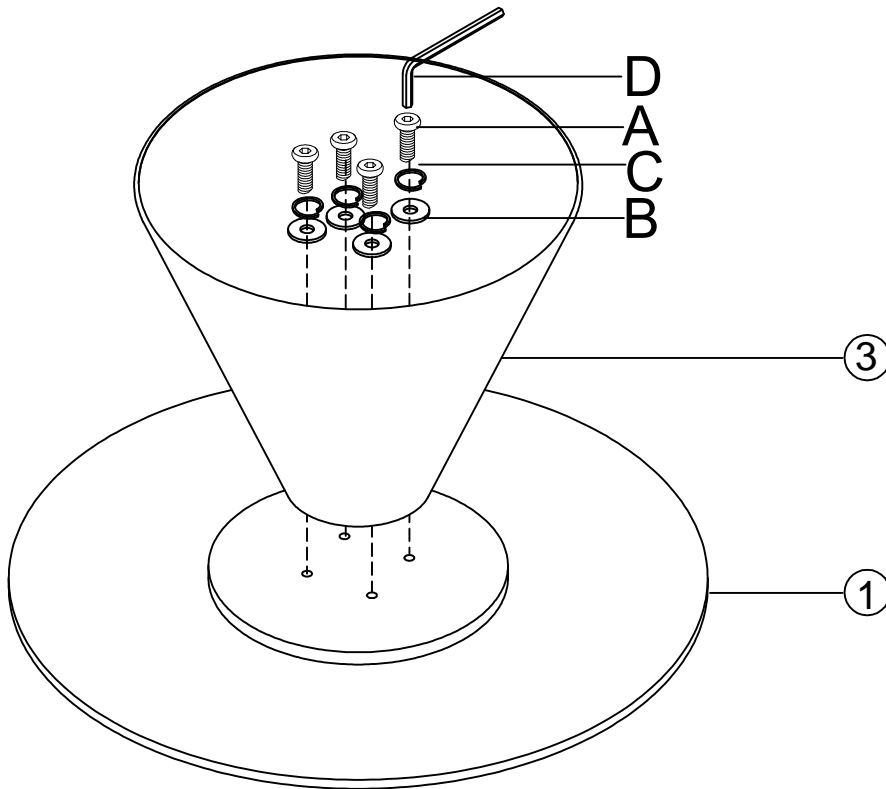


I.






1

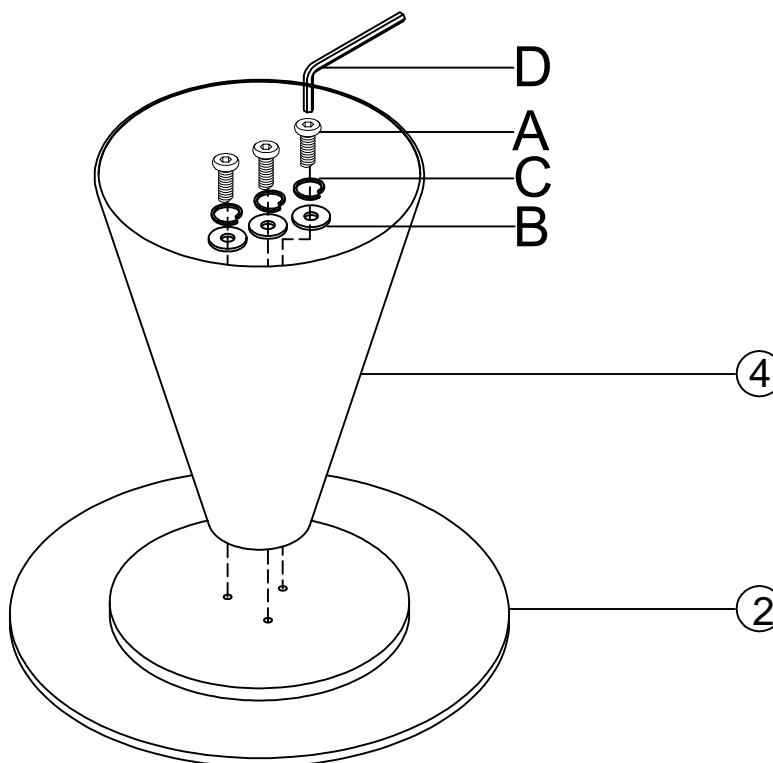

A	M6x13	
	4x	
B	Ø16xØ6x1.5mm	
	4x	
C	M6	
	4x	
D	M5	
	1x	
		


2





A	M6x13	
	3x	
B	Ø16xØ6x1.5mm	
	3x	
C	M6	
	3x	
D	M5	
	1x	
		

II.

3

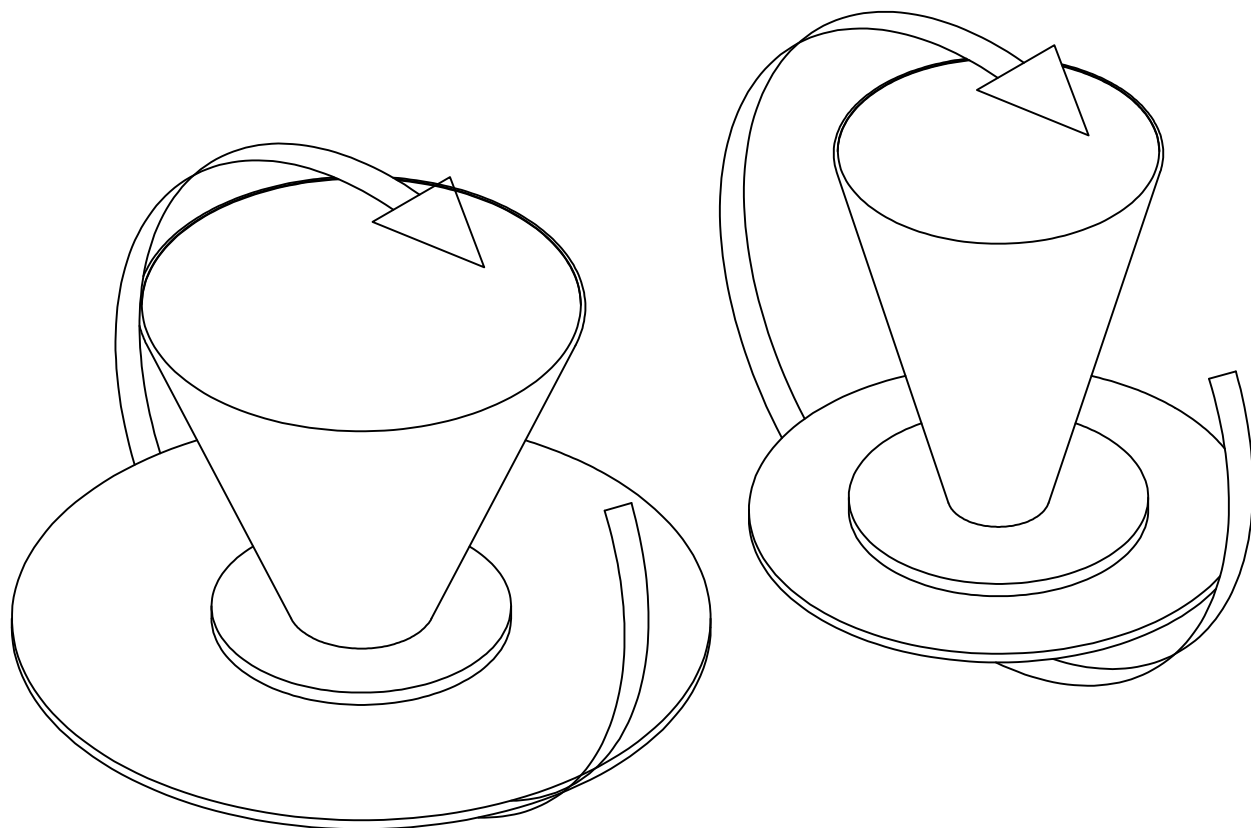

4

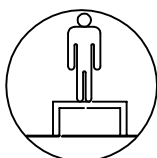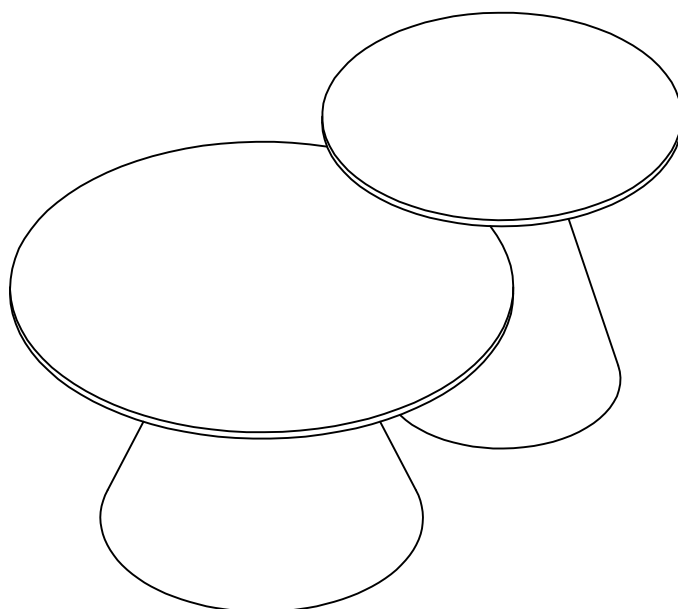

**LE TRI
+ FACILE**



Séparez les éléments avant de trier