



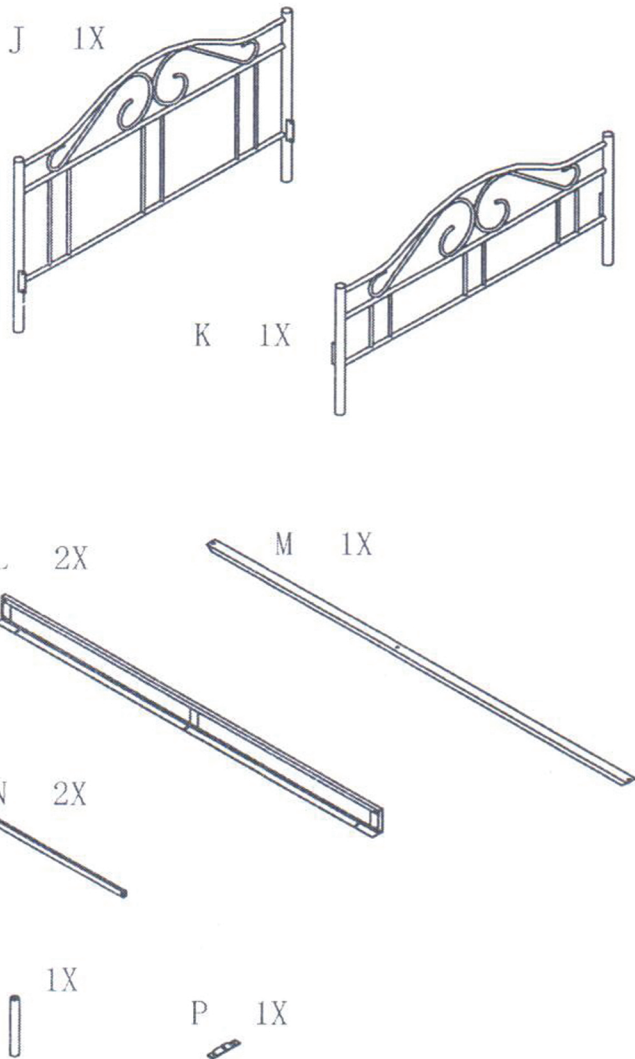

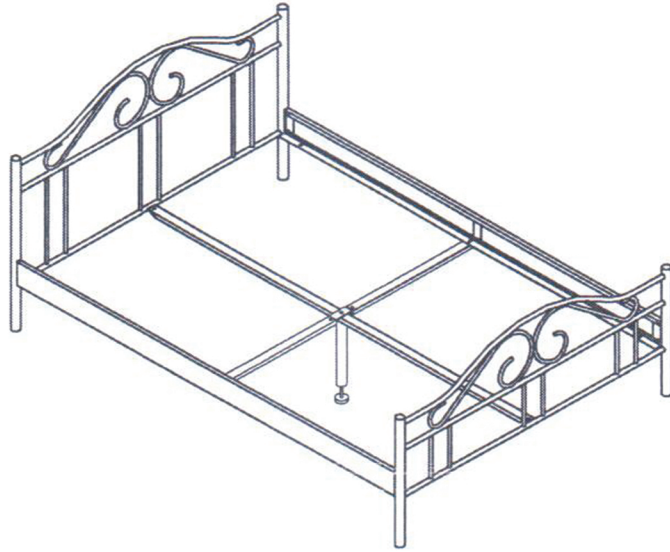






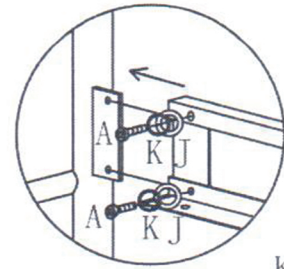
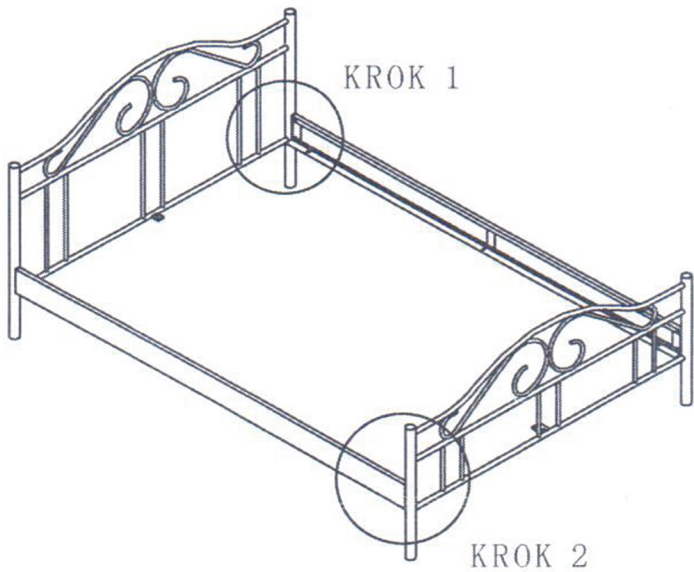


NÁVOD NA MONTÁŽ


BED-1909




A		M8X15mm	8
B		M6X12mm	4
C		M6X20mm	2
D		M6X35mm	1
E		M6	2
F			1
G			1
H		5mm	1
I		4mm	1
J			8
K			8




KROK 1

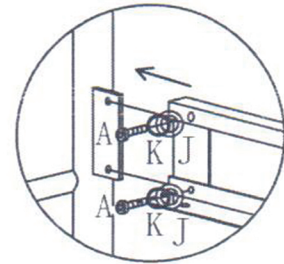



KROK 2

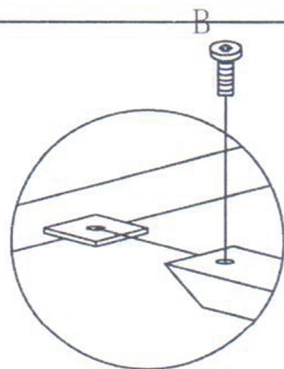

KROK 3

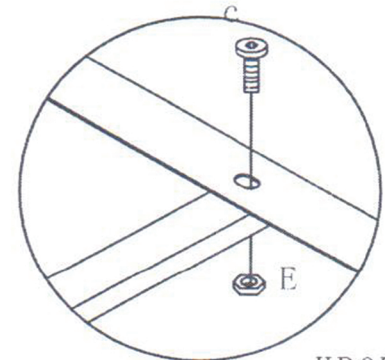

KROK 4

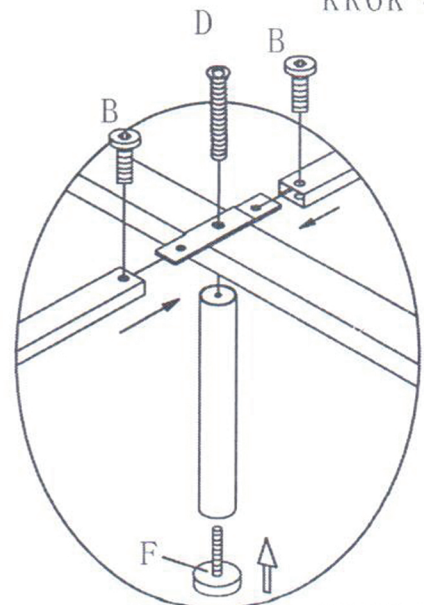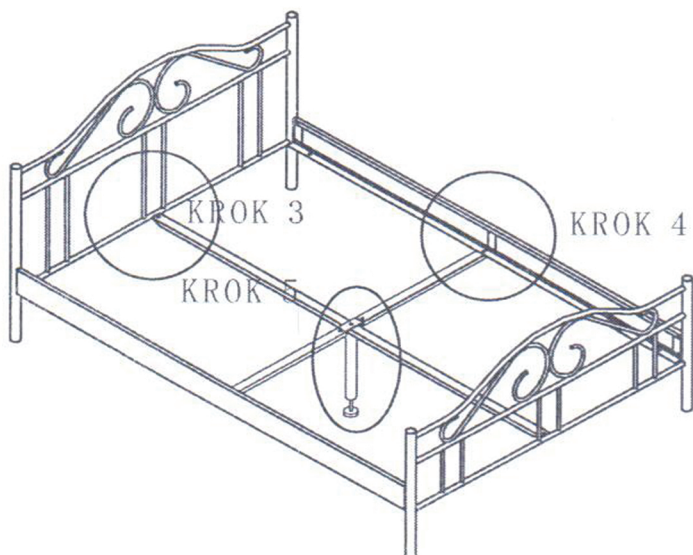

KROK 5